



HIGH PERFORMANCE STROLLERS



City Classic Single

Amazing 360° Turns
Make For Extreme Maneuverability

This product complies with BS EN 1888:2003 inc. A1,2,3: 2005

This product complies with ASTM F833-05a

Assembly Instructions

*Read these
instructions carefully
before use and
keep them for
future reference.*

*Your child's safety may be
affected if you do not follow
these instructions.*

For the sake of your precious cargo, please read these warnings before using your stroller.

- **WARNING:** DO NOT exceed 3mph. – this stroller is not suitable for running, jogging, skating or roller blading.
- **WARNING:** Prevent serious injury to your child by always using the safety harness.
- **WARNING:** Parcels or accessory items, or both, placed on the unit may cause the unit to become unstable.
- **WARNING:** Never leave your child unattended.
- **WARNING:** Recommended weight for seat pocket is 2 pounds and basket is 4.4 pounds. Excessive weight may cause a hazardous unstable condition to exist.
- **WARNING:** Stroller is not meant to be used for transporting children up or down stairs. Damage resulting to stroller will not be covered under warranty.
- **WARNING:** Child may slip into leg openings and strangle. Never use in reclined carriage position unless safety harness is properly fastened.
- Accessories which are not approved by the manufacturer or distributor shall not be used.
- The passenger shall remain seated (no standing in the stroller).
- Watch out for cars – never assume that a driver can see you and your child.
- Total weight load recommended for this stroller is 75 lbs. / 34 kg. (combined passenger and baggage weight.)
- This stroller seats one passenger.
- It may be unsafe to use replacement parts other than those supplied or approved by the manufacturer.

Frame



WARNING: Ensure all locking devices are engaged before use.



1. Unpack stroller from box and set wheels aside.



2. Unfold adjustable handle by pushing buttons on the sides of stroller handle.



3. Push footplate of stroller away from handle by pushing axle of stroller up and out.



4. The stroller frame will click into place. Turn stroller over to upright position. Snap safety strap to frame before use.



To fold: Unsnap safety strap from frame and pull up on fold strap.

Front Wheel

1 To install front wheel, lay stroller back so the handle is resting on floor. Lock front wheel to prevent the fork from swiveling.



2 Insert the front wheel into the fork tips by aligning the axle flats with the fork tip flats.



3 Tighten by turning the wheel lever clockwise while holding the opposite side.



4 Close the wheel lever making sure that it is flush with the tubing. *Be sure not to over tighten.*

Front Wheel Locking Lever
Turn to the left to lock front wheel.

Rear Wheels



- To install, gently slide the rear wheel's axle into the hole in the axle end until you hear it click into place.



- To remove, simply push in the lock button while pulling out the wheel.

Seat



WARNING: Always be sure the safety strap is securely snapped onto the frame before using stroller!



1 Snap seat to frame.



2 Wrap bottom straps around frame, thread strap through D-ring and secure.



3 Snap seat strap around rear frame.



4 Thread folding strap through opening in seat.



5 Attach folding strap to folding trigger and secure the triangle shaped fastener.



6 Snap safety strap to frame.

Reclining Seat



1 To recline: Pinch the clamp and slide it down the recline strap to desired recline and push seat down.



2 To return to the upright position: Hold the D-ring on the end of the recline strap in one hand and use the other to pinch the clamp and slide it up the strap.



Stroller is packaged with seat support frames and can be easily removed or inserted into the seat backs if additional support is desired.

NOTE: Be sure to remove the frames from the back of the seats before washing.

Safety Harness



1 Unclip top of shoulder strap from the seat and re-clip on the pair of seat loops closest to child's shoulder height.



2 *To adjust the strap length:* Remove the shoulder pads and move the plastic guide up or down to lengthen or shorten.



3 *To unbuckle the harness:* Press one side of the center button and pull the corresponding side buckle away from the center buckle. Repeat to unbuckle other side. *To buckle:* Simply push side buckle into center buckle until it locks in place.



WARNING: Always use the crotch strap in combination with the waist belt.



4 To adjust side straps, press side buckle latch and slide strap to lengthen or shorten.



5 To adjust the center strap, move its plastic guide up or down.

Brake



- Simply push brake pedal down to engage rear parking brake and lift up to release.



WARNING: Engage parking device before loading and unloading passenger.

Canopy



1 To attach bracket to frame: Unsnap seat from frame to reveal mounting location. Use a phillips head screwdriver to attach bracket screws to frame.



2 To attach canopy to bracket: Insert canopy frame into bracket and attach screws using a phillips head screwdriver.



3 Velcro canopy strap around frame to itself.

Basket



1 Velcro front basket straps around frame tube.
Front of seat will need to be turned up to access frame tube.



2 Wrap rear basket straps around upright and snap together.

NOTE: *The rear of basket has the mesh material and the front does not.*

Accessory Bracket Adapter

(Classic, Elite and Mini Series Only)



Accessory Bracket Adapter Allows for Easy Use of Accessories

Quick Fold Technology

Simple Lift & Fold (Patented)



WARNING: Always be sure the safety strap is securely snapped onto the frame before using stroller!



To fold stroller:

- 1 Remove child from seat. Remove safety straps from frame. Pull upwards on the fold strap with a gentle tug.



In Motion

Steering

- Steering your stroller is simple: It is balanced to turn with just a light touch on the handlebar without having to lift the front wheel.

Wrist Strap

- Make sure wrist strap is attached to bottom crossbar and is secured properly around your wrist whenever a child is in the stroller. The stroller is lightweight and ready to roll – with or without you – and the safety wrist strap helps you gain control over your stroller.

In the Dark

- Since we are concerned about the safety of you and your child, we recommend that you not use your stroller at night. However, if you choose to, please attach reflective strips to the wheels and the seat. Bicycle lights can also be mounted on the handle crossbar. These accessories can be found at most bike stores.

Maintenance

- To preserve the longevity of your stroller, it is important to perform simple, regular maintenance. It is necessary to regularly check that the air pressure in your stroller's tires is the same P.S.I. that is shown on the tires. From time to time, make sure that the joints and folding areas are still in good condition. If you hear any squeaking or feel tension, you can take your stroller to a local bike shop for added lubrication. All repairs should only be carried out by an authorized dealer.

Stroller Care

Washing

- You can machine wash your stroller's seat in cold water with a mild detergent. To minimize shrinkage, simply reattach the seat to the frame to dry. (Please do not put the seat in the dryer!)
- Be sure to remove the frame from the back of the seat before washing.
- The stroller frame can be cleaned using a soft, dry cloth, and an occasional spray of household wax will maintain its healthy glow.



Wheel Care

- The wheels can be cleaned using a damp cloth. They will need to be dried completely with a soft towel or cloth.

Storing

- Sunshine can fade seat fabric and dry out tires, so storing your stroller indoors will prolong its good looks. However, if you do store it outside, using a tarp will help protect against weather wear.

WARRANTY REGISTRATION ON-LINE AT www.babyjogger.com/register

Baby Jogger's Limited Lifetime Warranty:

Baby Jogger warrants that the frame is free of manufacturer defects for the lifetime of the product. Manufacturer's defects include but are not limited to the breaking of welds and frame tube damage. Textile or soft side materials and all other components shall be warranted for one year from the date of purchase (except for tubes and tires). Proof of purchase is required to make a warranty claim and the warranty is only extended to the original purchaser.

THIS WARRANTY DOES NOT COVER:

- Normal wear and tear
- Corrosion or rust
- Incorrect assembly, or the installation of third party parts or accessories not compatible with the original design
- Accidental or intentional damage, abuse or neglect
- Commercial Use
- Improper storage/care of the unit

This warranty specifically excludes claims for indirect, incidental, or consequential damages. The implied warranties of merchantability and fitness for a particular purpose is according to the specific warranty period for this model unit at time of purchase. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your state's Attorney General.

E-MAIL: customerservice@babyjogger.com

CALL: 1-800-241-1848 between 8am – 6pm EST, Mon. – Fri.

FAX: 1-804-262-6277

MAIL: BABY JOGGER COMPANY
8575 Magellan Parkway
Suite 1000
Richmond, VA 23227

Thank You!

We wish you many happy journeys with your new stroller! Your stroller is a great product, and we are proud to manufacture it. If you have any questions or comments, please give us a call at:

1.800.241.1848



HIGH PERFORMANCE STROLLERS

Baby Jogger is a Division of Dynamic Brands

8575 Magellan Parkway, Suite 1000 • Richmond, VA 23227
T: 800.241.1848 • F: 804.262.6277 • www.babyjogger.com