

Deluxe Rocker

031810

Operational Instructions

1. To open rocker

Swing bar ① all the way around from on top of the seat so it forms the rocker base below it. Be certain it locks into position.

2. Adjusting the seat



Turn knobs ② anticlockwise, position seat as required, then retighten knobs. Do not over tighten.

3 Stopping the rocker

Turn the rocker's four plastic feet down ③ and lock them into position to create a fixed chair.

4. Fastening the harness

To secure the child in the harness, push buckle A and B into the buckle housing C until the buckle prongs snap into position. Carefully adjust the waist harness by pulling the slider D until the desired length is achieved. Follow the same procedure to adjust the shoulder strap. To release the buckles, squeeze the top and bottom prongs until the buckle disengages. Always adjust the harness when changing seating positions.

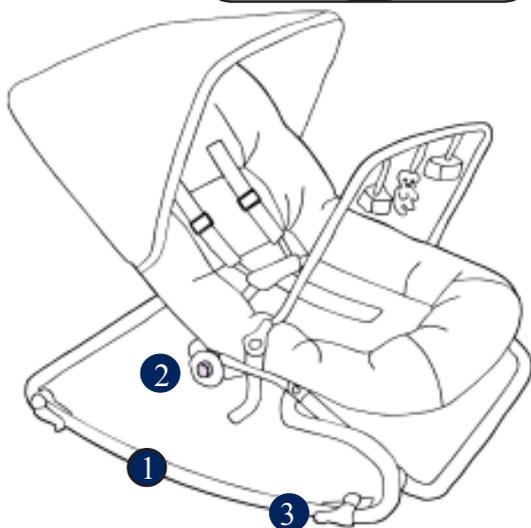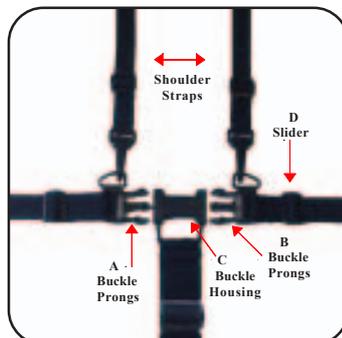

Features:

- Adjustable multi-position seat which is suitable for newborn.
- Can be used in either a fixed or rocking position.
- Deluxe padded seat which is removable and washable for easy cleaning.
- Comes with a full-sized adjustable hood and toy bar.
- A five-point adjustable harness holds baby safely.
- Suitable for baby up to 9.5kg.

Warnings:

1. Always follow the manufacturer's instructions for safe assembly of the rocker.
2. Remove packaging from rocker vicinity after its assembly.
3. Never leave child unattended while in the rocker.
4. Use the safety harness at all times while in use.
5. Never use on an elevated or uneven surface.
6. Do not use close to a heater, open fire place, BBQ or in other hazardous areas.
7. Do not fold while in use.
8. Keep medication, strings, elastics and small toys (other than the ones attached to the toybar) out of reach from any position of the rocker.
9. Discontinue use once child can sit upright unaided.

Care and Maintenance

To prolong the life of your nursery product keep it clean and do not leave in direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water and a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.

Do Not Dry Clean or Bleach Your Fabrics

Do not machine wash, tumble or spin dry your fabrics, unless the care labelling on the product permits these methods.

In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well-ventilated area. Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Childcare Nursery Products.



Keep this leaflet in a safe place for future reference.

Note: Colour and features of product may differ from the diagram shown.