

Model Eleganza Deluxe

Features:

- Height adjustable hi-low highchair with a four-position reclining seat.
- Adjustable tray with perfect-fit control to position tray precisely.
- Removable secondary snack tray with passive restraint system for additional safety.
- Durable wipe-clean PVC seat is easy to keep clean.
- Swivel castors with rear lockable brakes make highchair portable.
- Folds compactly for easy storage and convenient transport.
- A five-point safety harness holds baby securely at all times.
- Tested and complies with the European Standard DD ENV 1178:1995.

Additional products and accessories available in leading department stores and speciality shops include:-

Cots, Portable Cots, Change Tables, Highchairs, Hook on Highchairs, Safety Gates, Bed Guards, Rockers, Parasoles, Pramettes, Strollers, Walkers, Nappy Bags, Rain Covers, Wooden Cots and Manchester.

Warranty

The manufacturer warrants this product to be free from defects in material and workmanship under normal use and service following the date of purchase for 12 months. This warranty shall not apply to damages arising from neglect, accidental damage to, or misuse of the product.

Due to our continuing programme of development, Childcare reserves the right to alter the specifications, colour or design without further notice.

Due to variations in the style and design of our products the illustrations used in this instruction manual are generic.



Childcare Nursery Products
PO Box 544 Tullamarine Vic 3043
Customer Service Number: 1300 667 137
e-mail: sales@childcareproducts.com.au

www.childcareproducts.com.au

Eleganza Deluxe 044800

Insert line diagram here please



**Keep this booklet in a safe place for future reference
Note: Colour and features of product may differ from the diagrams shown**

www.childcareproducts.com.au

WARNING

- THE CHILD SHOULD BE SECURED IN THE HIGHCHAIR AT ALL TIMES BY THE RESTRAINING SYSTEM, EITHER IN THE RECLINING OR UPRIGHT POSITION.
- THE TRAY IS NOT DESIGNED TO HOLD THE CHILD IN THE CHAIR.
- PREVENT SERIOUS INJURY OR DEATH FROM FALLS OR SLIDING OUT.
- IT IS RECOMMENDED THAT THE HIGHCHAIR BE USED IN THE UPRIGHT POSITION ONLY BY CHILDREN CAPABLE OF SITTING UPRIGHT UNASSISTED.

WARNINGS

- Keep these instructions for future reference.
- Never leave your child unattended. Always keep child in view while in the highchair.
- Always secure your child in the restraint. Ensure that your child wears a correctly fitted and adjusted harness at all times.
- Use on a flat surface and never use near stairs.
- Always make sure your child is clear of moving parts before making any adjustments.
- Keep any other children from getting under the highchair at all times.
- Do not let any other children play unsupervised in the area near the highchair.
- Always apply the brakes before use.
- Always check that the highchair is locked in the open position before using.
- Never carry the highchair with the child in it.
- Do not adjust seat height while the child is in the seat.
- Strings can cause strangulation. Do not place highchair near any strings such as window blind cords, phone cords, drapery pulls, etc.
- The weight of the child using the product should not exceed 17kg.
- Discontinue use using your highchair should any part become damaged or broken. Promptly replace worn out or broken parts.
- Do not use accessories other than those supplied and approved by Childcare Nursery Products.
- This product is not intended for commercial use.
- Retain your warranty card and keep your sales receipt to provide proof of purchase.

How to Care for your Childcare Highchair

Care and Maintenance

- To prolong the life of your nursery product, keep it clean and do not leave in direct sunlight for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water and a household soap or mild detergent. Allow to dry fully, preferably away from direct sunlight.

Helpful Hints

- If the wheels squeak, use a silicon-based spray ensuring it penetrates the wheel and axle assembly.


Do Not Dry Clean or Bleach Your Fabrics

- Do not machine wash, tumble or spin dry your fabrics, unless the care labelling on the product permits these methods.
- Non-removable fabric covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates, the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well-ventilated area.
- Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Childcare Nursery Products.

This product is not intended for commercial use.

To Apply Wheel (Castor) Brakes


- To engage brakes on castor, use foot to press down on red lever.
- To disengage, lift up lever.

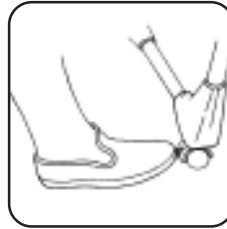


Warning: Always apply the rear brakes before use.

To Fold the Highchair


- Simultaneously depress buttons marked **Frame Lock Release** and push upwards (see diagram).
- For a compact fold, remove the main tray and place the snack tray in its storage position.

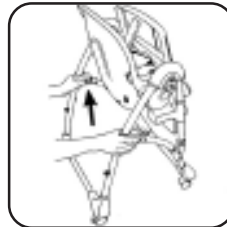

FEATURES

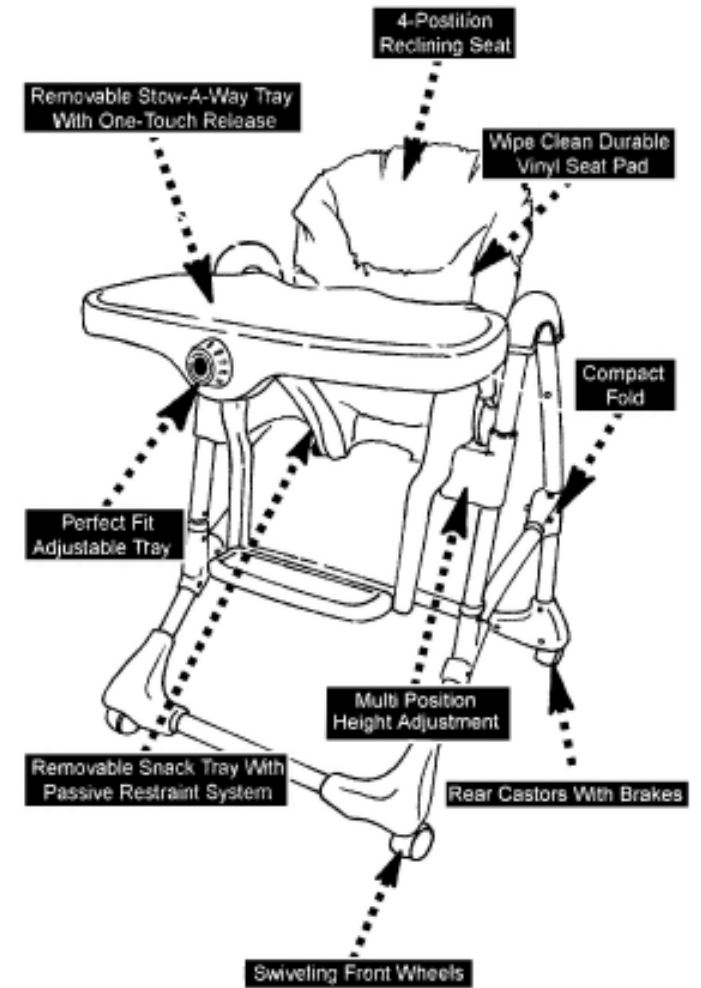

Parts

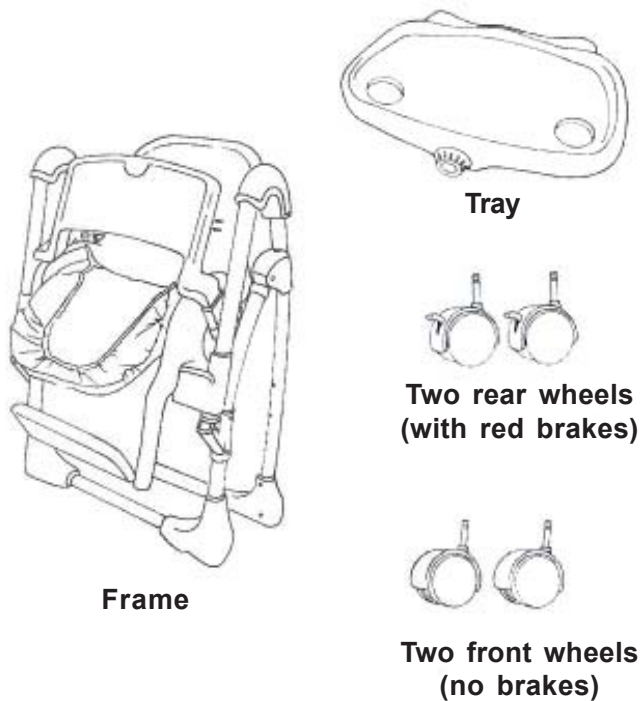


To Assemble Highchair

The highchair is shipped fully assembled except for the castors (two rear and two front) and the main tray. As the highchair is shipped with the snack tray in the storage position, you will need a medium-sized flat-bladed screwdriver to remove prior to complete assembly.


To Store the Main Tray

- When the main tray is not in use, it may be stored on the back of the highchair.
- Hook tray onto the tray knobs hooks located on the back of the highchair frame.

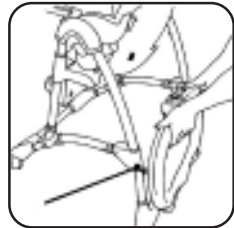

Restraints

- To secure the child in the harness, push buckle **A** and **B** into the buckle housing **C** until the buckle prongs snap into position. Carefully adjust the waist harness by pulling the slider **D** until the desired length is achieved. Follow the same procedure to adjust the shoulder strap. To release the buckles, squeeze the top and bottom prongs until the buckle disengages. Always adjust the harness when changing seating positions.

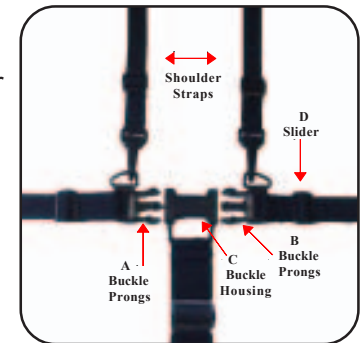


Warning: Many unrestrained children suffer injuries falling from highchairs. Use the safety harness at all times.

To Recline Seat

- To recline seat to one of its four positions, simultaneously depress both buttons marked **Seat Recline Adjustment** and adjust seat to the desired recline or upright position.

Warning: This highchair should only be used in the upright position by a child that can sit upright unassisted.

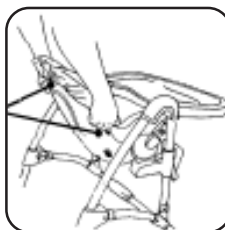

To Adjust Seat Height

- Simultaneously depress **Seat Height Adjustment** buttons located on each side of the highchair (see diagram).
- Adjust seat to desired position.
- To raise the seat, place foot on frame so seat lifts up easily.


Warning: Never adjust seat height while child is in the seat.

Always ensure frame is kept clean and dry for the seat height adjustment function to work properly.



To Adjust Footrest


- Lower footrest into desired position (see diagram).

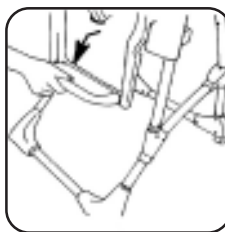

To Assemble Frame

- Remove highchair from box and position highchair upright.
- Simultaneously depress buttons marked **Frame Lock Release** on the back of the highchair and push downwards (see diagram).
- Ensure frame lock release mechanisms latch securely onto the red buttons on the frame tube.

Warning: Ensure frame is securely locked into position before continuing assembly.



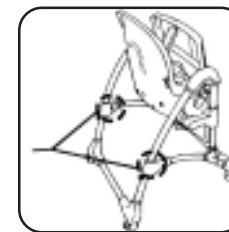


To Attach Wheels (Castors)

Note: The castors with red brake levers should be placed in the rear position.

- Gently lay highchair frame on its side.
- Insert castors into wheel housing on the bottom of the frame.
- Apply pressure until you hear castors click into position.
- Repeat for each castor.

Warning: The red brake levers should face away from the highchair.

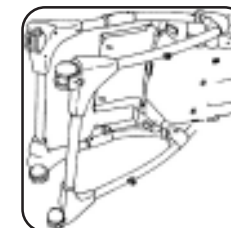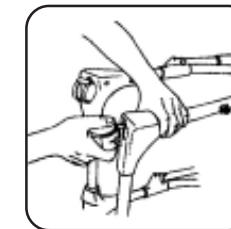
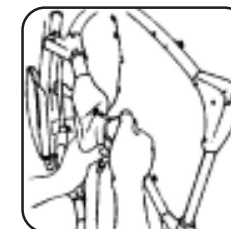


To Remove the Snack Tray

Note: The highchair is shipped with the snack tray in the storage position, so you will first need to remove it. You will need a medium-sized flat-bladed screwdriver for this step.



- Locate 'locking' device on either side of the highchair (see diagram).
- Using your screwdriver, turn both devices 90° to the 'unlocked' position.
- Remove the snack tray.

Warning: The seat must be in the upright position before removing or attaching the snack tray. Do not re-attach the snack tray until you have positioned the seat pad. (See next step).

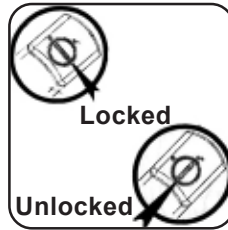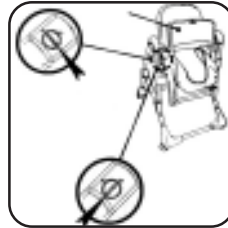


To Position the Seat Pad

- Once you have removed the snack tray, correctly position the seat pad by pulling its sleeve over the top of the seat frame.
- Attach the seat pad to the frame by using the two press-studs in the centre of the seat.
- Secure the Velcro® strips on the footrest.

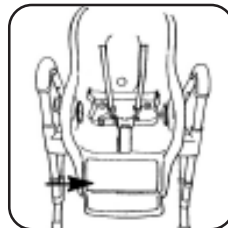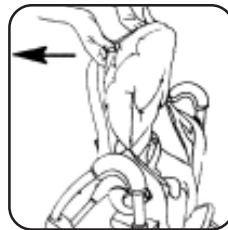



To Attach the Snack Tray

- Once the seat pad has been correctly positioned, you can re-attach the snack tray.
- Guide the centre leg of the snack tray through the hole in the seat pad while inserting the sides of the snack tray into the locking mechanisms on each side of the seat frame.
- Ensure the centre leg snaps onto the tube under the seat as you insert snack tray sides into their locking mechanisms.

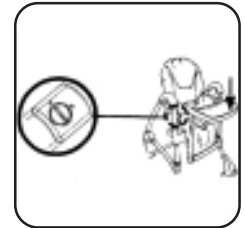

To Attach the Main Tray

- Squeeze the red release lever under front of main tray.
- Line up tray and slide on over snack tray and release lever.
- Ensure the tray is securely attached.
- To adjust position of tray, simply turn knob on front of main tray until tray reaches the desired position.
- To remove tray, use one hand to squeeze the red release lever and lift tray off.

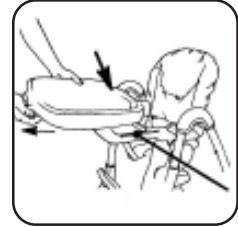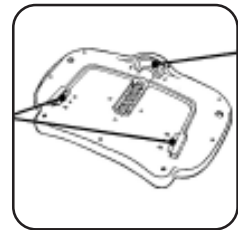

Warning: Always ensure that your child is clear of moving parts before making any adjustments to the highchair.