

# Model *Hi Line Stroller*

## Features:

- Compact multi position lie-flat stroller suitable from newborn.
- Lockable front swivel wheel with rear wheel suspension.
- Padded seat fitted with a full five-point safety harness.
- Seat extension and removable bumper for baby's comfort and convenience.
- One-touch rear wheel brakes for secure braking.
- Easy-to-remove seat to accommodate optional newborn bassinet model #013421 (sold separately).
- Comes with hand-held safety strap.
- Complies with the Australian Standard AS/NZS 2088:2000.

**Additional products and accessories are available from leading department stores and nursery speciality shops include:-**

Cots, Portable Cots, Change Tables, Highchairs, Hook on Highchairs, Safety Gates, Bed Guards, Rockers, Pramettes, Strollers, Walkers, Nappy Bags, Rain Covers, Wooden Cots and Manchester.

## Warranty

The manufacturer warrants this product to be free from defects in material and workmanship under normal use and service following the date of purchase for 12 months. This warranty shall not apply to damages arising from neglect, accidental damage to, or misuse of the product.

**Due to our continuing programme of development, Childcare reserves the right to alter the specifications, colour or design without further notice.**

**Due to variations in the style and design of our products the illustrations used in this instruction manual are generic.**

**This product is not intended for commercial use.**



Childcare Nursery Products Pty Ltd  
PO Box 544, Tullamarine VIC 3043  
Customer Service Number: 1300 667 137  
email: [info@childcareproducts.com.au](mailto:info@childcareproducts.com.au)

[www.childcareproducts.com.au](http://www.childcareproducts.com.au)

# *Hi Line Stroller* *013420*

Line Drawings to be  
inserted by Factory



**Keep this booklet in a safe place for future reference**  
**Note: Colour and features of product may differ from the diagrams shown**  
[www.childcareproducts.com.au](http://www.childcareproducts.com.au)

### WARNING

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.
- DO NOT LEAVE CHILDREN UNATTENDED.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER OTHERWISE THEY MAY BE INJURED.

#### Some Do's and Don'ts

- Check that all safety locks are engaged before placing a child in the stroller.
- Ensure your child is secured with a correctly adjusted safety harness.
- Do not allow children to stand on the seat.
- The Hi Line Stroller is **NOT** designed to accommodate a Toddler Seat.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- Do not place more than 3 kgs in the basket, or 1kg in the hood pocket (if supplied).
- The weight of the child using the product should not exceed 17 kg.
- The height of the child using the product should not exceed 96 cm.
- Do not use accessories other than those supplied and approved by Childcare Nursery Products.
- The bassinet should not be used once the child can sit up unaided.
- This stroller is designed for use with the 'Childcare' bassinet model #013421 ONLY.
- Never ride with more than one child in the stroller.
- Promptly replace worn out or broken parts.
- Always use the safety locks.
- Remove the child from stroller before going up or down stairs and escalators.
- Do not lift stroller by the bumper bar or tray (if supplied).
- To prevent the risk of the stroller catching fire, do not park it near an open fire or a heater.
- Do not attach a ride-on board to this stroller, doing so will void the warranty.
- Retain your warranty card and keep your sales receipt to provide proof of purchase.

### WARNING

THIS STROLLER IS NOT DESIGNED FOR USE WITH A SEPARATE TODDLER SEAT. ATTACHING A TODDLER SEAT TO THIS STROLLER COULD MAKE IT UNSTABLE AND MAY RESULT IN A CHILD BEING SERIOUSLY INJURED.

## How to Care for your Childcare Stroller

### Care and Maintenance

To prolong the life of your nursery product, keep it clean and do not leave in direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water and a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.

### Helpful Hints

If the wheels squeak –use a silicon-based spray ensuring it penetrates the wheel and axle assembly.

When using the stroller at the beach – completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assemblies. Dry thoroughly and lubricate with a silicon-based spray.

### Do Not Dry Clean or Bleach Your Fabrics

Do not machine wash, tumble or spin dry your fabrics, unless the care labelling on the product permits these methods.

Non-removable fabrics covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.

In some climates, the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well-ventilated area.

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Childcare Nursery Products.

This product is not intended for commercial use.

## Brakes

- Push down the rear lever to park.
- Check to make sure the brake is on by trying to push the stroller.
- Lift up to release.

**Warning:** Always apply brake when parking the stroller.



## Folding the Stroller

- Apply rear brake and disengage swivel lock.
- Return seat to layback position.
- Close the hood.
- Lift the secondary lock circled whilst simultaneously pulling up the two release catches located either side of the handle which will release the elbow joints for smooth folding.
- Push the handle gently downwards towards the floor, folding the handle underneath the back rest.
- Close the folding lock.
- For a compact fold, ensure the handle bar sits under the backrest. The second position of the upfold lock can then be used.

**Warning:** The brake must be engaged when folding the stroller.



**This stroller has an easy-to-remove seat to accommodate an optional newborn bassinet model #013421 (sold separately)**

## Assembly Instructions

### To Open the Stroller

- Open the folding lock.
- Lift the handle until it locks into position.
- Check that the latches on both sides are locked before continuing assembly.



### Front Wheel Assembly

- Insert front wheel assembly onto front wheel fork.
- Ensure pop-up pins are in line with locating holes.
- Make sure wheel is properly attached by pulling firmly on the wheel.



### Rear Wheel Assembly

- Place the rear axle into the holes on the rear of chassis until they click into position.
- Ensure pop-up pins on rear legs are in line with the locating holes on the rear suspension housing.
- Slide each rear wheel onto the axle until a clicking sound is heard.
- Pull on wheel to ensure it is securely attached onto the axle.
- To remove, press centre button on wheel and pull off.



## Attaching the Hood

- Slide sleeves at the bottom of the hood into slots located either side of the frame, just above the elbow joints.
- Join together the strap and velcro points around the handle to secure.



## Attaching the Bumper

- Fit to each side of the bumper onto the frame and close locking clips.
- To Remove bumper, release locking clips and remove from frame.



## Operational Instructions

### Multiple Position Lieback Seat

Your stroller is fitted with a multiple position lieback seat to enable the stroller to be used from newborn through to the toddler stage.


- Your seat can be adjusted to four recline positions using the zip system by pulling each zipper seat downward for recline or upward for incline.
- For an additional upright position fasten the two belts at the rear of the seat when the zippers are in the most upright position.



**Warning:** Do not alter seat position while child is in stroller.

## Restraints

To secure the child in the harness, push buckle **A** and **B** into the buckle housing **C** until the buckle prongs snap into position. Carefully adjust the waist harness by pulling the slider **D** until the desired length is achieved. Follow the same procedure to adjust the shoulder strap. To release the buckles, squeeze the top and bottom prongs until the buckle disengages. Always adjust the harness when changing seating positions.

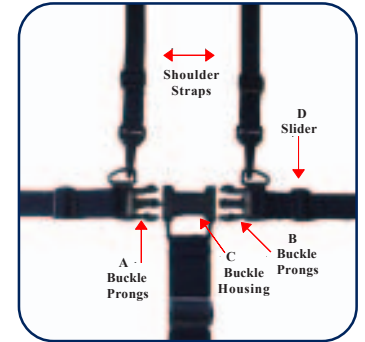

**Warning:** Many unrestrained children suffer injuries falling from strollers. Use the safety harness at all times.

## Seat Extension

- Press the button either side of the footrest while either moving it up or down to reach the desired position.



## Swivel Locks

- Push down and slide the red knob, located on the wheel lock, to the right.
- While in this position, your front wheel will stay in the swivel motion.
- To lock, push down and slide the red knob to the left and with a small amount of movement to the front wheel, it will automatically lock into the fixed position.



**Warning:** The swivel must be in the locked position when in jogging or fast walking modes.