

Model *Overlander Deluxe*

Features:

- Compact multi-position lie flat stroller suitable from newborn.
- Lockable front swivel wheel and one-touch rear wheel brakes.
- Three spoked wheels with pneumatic tyres to handle all terrains.
- Genuine suspension system in both front and rear wheels.
- Seat extension and removable bumper bar for baby's comfort.
- Stylish European hood and shopping basket.
- Padded seat fitted with a full five-point safety harness.
- Supplied with hand-held safety strap.
- Complies with the AS/NZS 2088:2000 Australian Safety Standard.

Additional products and accessories are available from leading department stores and nursery speciality shops include:-

Cots, Portable Cots, Change Tables, Highchairs, Hook on Highchairs, Safety Gates, Bed Guards, Rockers, Parasoles, Pramettes, Strollers, Walkers, Nappy Bags, Rain Covers, Wooden Cots and Manchester.

Warranty

The manufacturer warrants this product to be free from defects in material and workmanship under normal use and service following the date of purchase for 12 months. This warranty shall not apply to damages arising from neglect, accidental damage to, or misuse of the product.

Due to our continuing programme of development, Childcare reserves the right to alter the specifications, colour or design without further notice.

Due to variations in the style and design of our products the illustrations used in this instruction manual are generic.

This product is not intended for commercial use.



Childcare Nursery Products Pty Ltd
20-22 Lindaway Place Tullamarine Vic 3043
Phone: 03 9335 2244 Fax: 03 9335 2270
email: sales@childcare-prod.com.au
www.childcare-prod.com.au

Overlander Deluxe *013600*



Keep this booklet in a safe place for future reference
Note: Colour and features of product may differ from the diagrams shown
www.childcare-prod.com.au

WARNING

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- PUT ON ALL THE BRAKES WHEN EVER YOU PARK THE STROLLER.
- DO NOT LEAVE CHILDREN UNATTENDED.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER OTHERWISE THEY MAY BE INJURED.

Some Do's and Don'ts

- Check that all safety locks are engaged before placing a child in the stroller.
- Ensure your child is secured with a correctly adjusted safety harness.
- Do not allow children to stand on the seat.
- The Overlander Deluxe Stroller is **NOT** designed to accommodate a Toddler Seat.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- Do not place more than 5kgs in the basket, or 1kg in the canopy pocket (if supplied).
- The weight of the child using the product should not exceed 17kg.
- The height of the child using the product should not exceed 96cm.
- Do not use accessories other than those supplied and approved by Childcare Nursery Products.
- Never ride with more than one child in the stroller.
- Promptly replace worn out or broken parts.
- Always use the safety locks.
- Remove the child from stroller before going up or down stairs and escalators.
- Do not lift stroller by the bumper bar or tray (if supplied).
- To prevent the risk of the stroller catching fire, do not park it near an open fire or a heater.
- Retain your warranty card and keep your sales receipt to provide proof of purchase.

WARNING

THIS STROLLER IS NOT DESIGNED FOR USE WITH A SEPARATE TODDLER SEAT. ATTACHING A TODDLER SEAT TO THIS STROLLER COULD MAKE IT UNSTABLE AND MAY RESULT IN A CHILD BEING SERIOUSLY INJURED.

How to Care for your Childcare Stroller

Care and Maintenance

To prolong the life of your nursery product, keep it clean and do not leave in direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water and a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.

Helpful Hints

If the wheels squeak –use a silicon-based spray ensuring it penetrates the wheel and axle assembly.

When using the stroller at the beach – completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assemblies. Dry thoroughly and lubricate with a silicon-based spray.

Do Not Dry Clean or Bleach Your Fabrics.

Do not machine wash, tumble or spin dry your fabrics, unless the care labelling on the product permits these methods.

Non-removable fabrics covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.

In some climates, the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well-ventilated area.

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Childcare Nursery Products.

This product is not intended for commercial use.

Brakes

- Push down the rear lever to park.
- Check to make sure the brake is on by trying to push the stroller.
- Lift up to release.

Warning: Always apply brake when parking the stroller.



Bootcover

- Place bootcover over bumper bar and connect the upper straps around the handle tube above the leg handle mouldings, and over the lower end of the bootcover under the seat where velcro straps connect the front legs of each side.

Warning: Always remove the bootcover before folding the stroller.



Folding the Stroller

- Apply rear brake and disengage swivel lock.
- Return seat to layback position.
- Close the hood and remove bootcover.
- Lift the secondary lock circled whilst simultaneously pulling up the two release catches located either side of the handle which will release the elbow joints for smooth folding.
- Push the handle gently downwards towards the floor, folding the handle underneath the back rest.
- Close the folding lock.
- For a compact fold, ensure the handle bar sits under the backrest. The second position of the upfold lock can then be used.

Warning: The brake must be engaged when folding the stroller.



Assembling Instructions

To Open the Stroller

- Lift the folding lock.
- Lift the handle until it locks into position.
- Check that the latches on both sides are locked before continuing assembly.



Front Wheel Assembly

- Loosen the wheel bolt using the quick release handle. There is no need to unscrew completely.
- When there is a big enough gap on each side, slide the bolt onto the hooks located on the front of the chassis
- With the bolts you will find two 'L' shaped washers which must hook into the small hole located above the hook where the bolt sits.
- Tighten the bolt with both hands, again using the quick release handle in one hand and hold the bolt with the other hand. When you can feel the bolt nearly tight, flip the quick release handle back to lock into position. Gently pull on the wheel to ensure that it is fitted correctly and securely.



Warning: Make sure these washers are placed in exactly the same position on both sides, failing to do this will cause your stroller to veer to one side.


Rear Wheel Assembly

- Place the axles into the holes on the rear of chassis until they click into position.
- Ensure that they are securely fitted by pulling firmly on the wheel.



Attaching the Hood

- Slide sleeves at the bottom of the hood onto either side of the frame, just above the elbow joints.
- Join together the strap and velcro points around the frame.

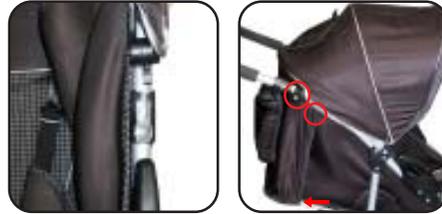

Attaching the Bumper Bar

- Fit to each side of the Bumper Bar onto the frame and close locking clips.
- Remove Bumper Bar by releasing locking clips and take off frame.



Operational Instructions

Multiple Position Lieback Seat

Your stroller is fitted with a multiple position lieback seat to enable the stroller to be used for a new born baby through to the toddler stage.


- To recline, lift the lever on the back seat and lower it into your desired position.
- To raise seat, push the back gently until the sit up position is required.



Warning: Do not alter seat position while child is in stroller.

Restraints

To secure the child in the harness, push buckle **A** and **B** into the buckle housing **C** until the buckle prongs snap into position. Carefully adjust the waist harness by pulling the slider **D** until the desired length is achieved. Follow the same procedure to adjust the shoulder strap. To release the buckles, squeeze the top and bottom prongs until the buckle disengages. Always adjust the harness when changing seating positions.

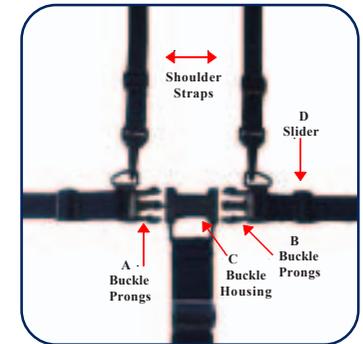

Warning: Many unrestrained children suffer injuries falling from strollers. Use the safety harness at all times.

Seat Extension

- Press the button either side of the footrest while either moving it up or down to reach the desired position.



Swivel Locks

- Push down and slide the red knob, located on the wheel lock, to the right.
- While in this position, your front wheel will stay in the swivel motion.
- To lock, push down and slide the red knob to the left and with a small amount of movement to the front wheel it will automatically lock into the fixed position.



Warning: The swivel must be in the locked position when in jogging or fast walking modes.