

Model

Baby Sesame Swing

Features:

- Variable speeds.
- Two position height adjustable seat.
- Adjustable backrest.
- Removable battery operated activity tray with six musical sounds and flashing lights.
- Compact fold for easy storage or transportation.

Additional products and accessories available in leading department stores and nursery specialists include:-

Cots, Portable Cots, Change Tables, Highchairs, Hook on Highchairs, Safety Gates, Bed Guards, Rockers, Parasoles, Pramettes, Strollers, Walkers, Nappy Bags, Rain Covers and Wooden Cots.

Warranty

The manufacturer warrants this product to be free from defects in material and workmanship under normal use and service following the date of purchase for 12 months. This warranty shall not apply to damages arising from neglect, accidental damage to, or misuse of the product.

Due to our continuing programme of development, Childcare reserves the right to alter the specifications, colour or design without further notice.

Due to variations in the style and design of our products the illustrations used in this instruction manual are generic.



Childcare Nursery Products
PO Box 544 Tullamarine Vic 3043
Customer Service Number: 1300 667 137
e-mail: sales@childcareproducts.com.au
www.childcareproducts.com.au

Baby Sesame Swing

037550

INSERT LINE DRAWING HERE



Keep this booklet in a safe place for future reference
Note: Colour and features of product may differ from the diagrams shown

www.childcareproducts.com.au

Please read these instructions carefully and keep them for future reference. The correct use and maintenance of this product is essential.

Warnings:

- Never leave child unattended in swing.
- Always keep child in view while in swing, and within reach, even while sleeping.
- Always use the safety harness provided and ensure that the child is properly positioned according to these instructions. The tray is not designed to hold the child in the swing.
- Discontinue use of swing when child attempts to climb out. Children develop at different rates but can be at danger of attempting to climb out of the swing when they can sit unassisted (approximately 6 months of age).
- The maximum weight capacity of the swing is 11.4 kg. Use of the swing with a child in excess of 11.4 kg can cause the swing to become unstable.
- Do not place swing near a window where cords from blinds or drapes can strangle a child. Keep swing away from stoves, heaters, campfires and other hazards.
- Strings can cause strangulation. Do not place items with a string around child's neck, suspend strings over swing or attach strings to toys.
- The swing requires 4 "D" Cell batteries (Not supplied). Old and new batteries should not be mixed. Alkaline, standard carbon-zinc, and rechargeable nickel-cadmium batteries should not be mixed. Remove batteries before storing swing for a prolonged period of time.
- Periodically inspect swing for loose parts or broken components. Do not use the swing if it is damaged or broken. Please contact our service department to order replacement parts or arrange for repairs.
- Make sure you only use swing on a level stable surface.
- Do not move the swing with the baby in it.
- Do not move the swing by holding the seat hangers.
- Retain your warranty and keep your sales receipt to provide proof of purchase.

How to Care for your Childcare Swing

Care and Maintenance

To prolong the life of your nursery product keep it clean and do not leave in direct sunlight for extended periods of time.

To clean the seat pad, please refer to the washing label at the rear side of the seat pad. For metal and plastic parts, use only lukewarm water or mild soap.

Do Not Dry Clean or Bleach Your Fabrics.

Do not machine wash, tumble or spin dry your fabrics, unless the care labelling on the product permits these methods.


Non-removable fabrics covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.

In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well-ventilated area.

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Childcare Nursery Products.


TO OPEN TRAY

1. Grab tray tab as shown.
2. Push tray over.

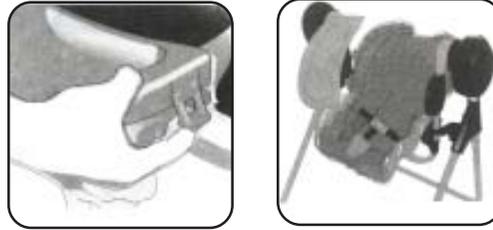

TO REASSEMBLE SEAT PAD

1. Place seat pad over the top of the seat shell.
2. Insert the five point harness through the slits of seat pad making sure buckles fit as shown.
3. Insert elastic loop through opening on side of seat shell.
4. Pull fastener around seat shell. Insert fastener into elastic loop to secure.

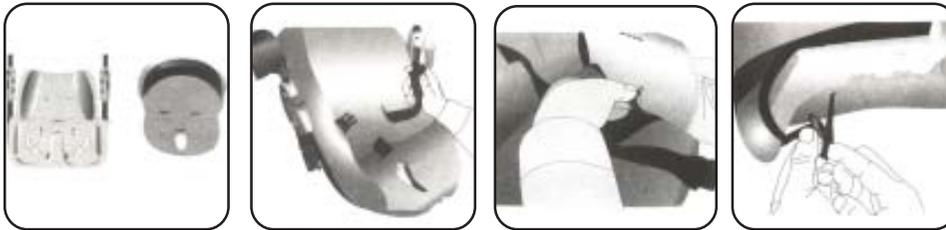


TO FOLD SWING

1. Stand behind swing.
2. Lift front legs off the ground. Place hands on frame brackets.
3. Place index fingers over springloaded button located on outside of frame.
4. Press buttons and allow legs to fold in.



Parts

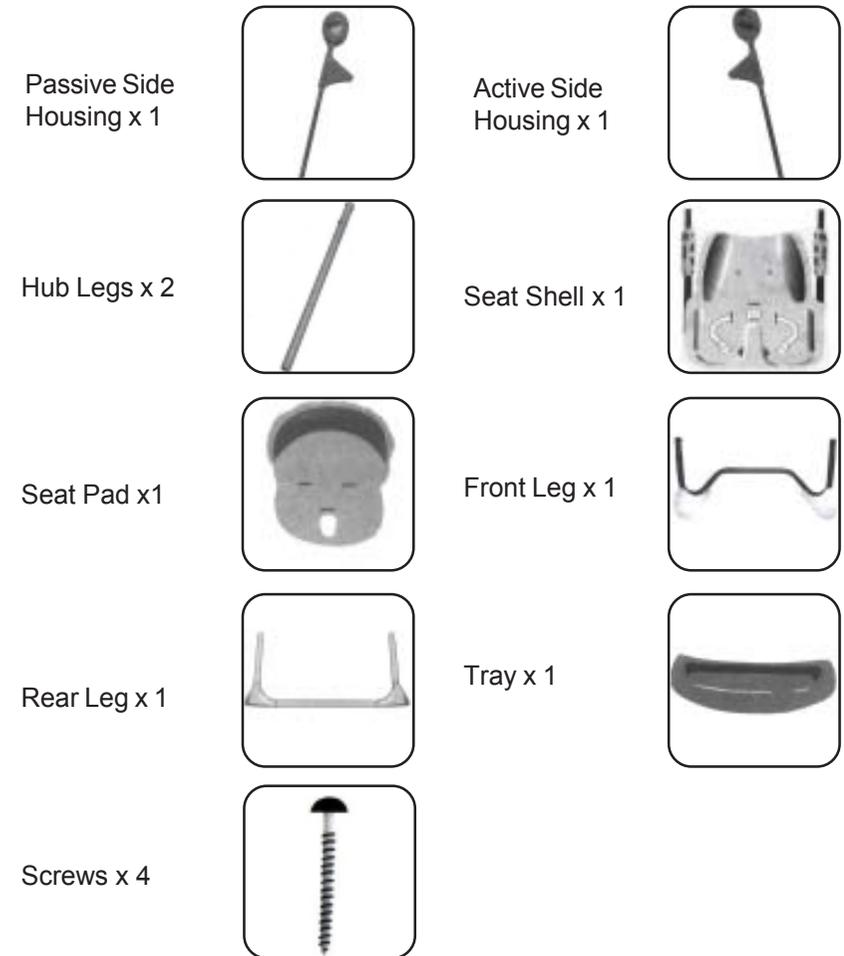


TROUBLE SHOOTING- FRAME ALIGNMENT

WRONG ALIGNMENT



CORRECT ALIGNMENT





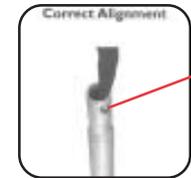


Through hole

If you springloaded button becomes out of place, take pliers and feed button into hole.

TO ASSEMBLE FRAME

1. Locate and match "B" on top of Hub Leg and Passive Side.
2. Locate all three springloaded buttons on hub leg. Align springloaded buttons on hub leg. Align spring buttons to openings on Passive Side Housing Frame Bracket. (Figure A).
3. Using your thumb and index finger; press in top two buttons and slide top of tube into opening in Frame Bracket. When properly aligned, top two springloaded buttons will pop through openings (Figure B).
4. Extend Hub Leg fully. Make sure all three springloaded buttons are secured to complete Passive Hub Assembly (Figure C).
5. Repeat Steps 1-4 for Active Side Housing Assembly.
6. Rear Leg feet should be flat on the floor. Align springloaded button on Active Hub Assembly and hole on Rear Leg (straight tube) as shown (Figure D). Make sure speed dial on Active Hub Assembly is facing away from the other leg. Insert tubes together. Make sure springloaded button pops through hole to secure legs (Figure E).
7. Repeat for Passive Hub Assembly. Make sure the swing is facing outward (Figure C). Hub connectors should be on the inside of the frame (Figure G).

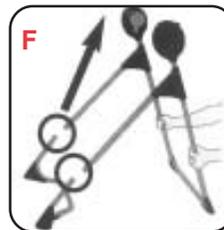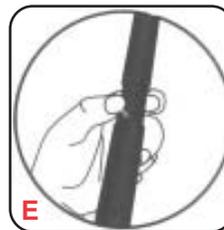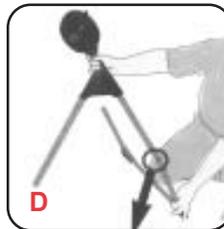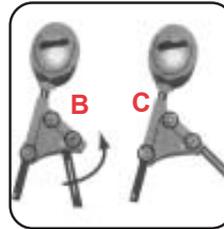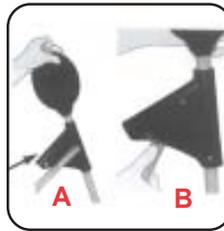

TO USE SPEED CONTROL

1. When seat is used for a Newborn, move switch to "On-Seat Up".
2. When seat is used for an Infant, move switch to "On-Seat Down".
3. To adjust speed, rotate dial to desired speed.



NOTE: It may take up to 30 seconds to reach full swing speed. Push seat gently to start swing movement.


STATIONARY FEEDING POSITION

1. Turn Swing Off. Raise seat to Newborn Position.
2. To lock swing in place, on right side of seat, push catch down onto seat lock.
3. To Unlock Swing. Pull catch up and release swing seat.



TO RECLINE SEAT

1. To recline seat, push red button on left side of seat. Push seat back.
2. To adjust seat upright, push red button on left side of seat. Push seat forward.

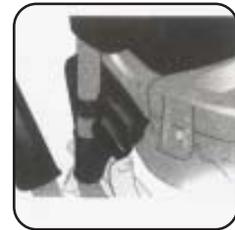

CAUTION: NEVER ADJUST SEAT WHILE CHILD IS IN SWING

INFANT POSITION

If your swing begins to slow down or stops in the newborn position, your child has outgrown the Newborn Position. Lower seat to Infant Position (see directions below). At this time, your swing will move more freely and have a faster swing.


CAUTION

NEVER ADJUST SEAT WHILE CHILD IS IN SWING.

1. Grip both handles, use thumb to flip button covers open.
2. Press both red buttons at the same time and pull seat up until it locks into place. Make sure both sides of swing are secured and level.
3. Place infant in swing and secure restraint system.
4. To turn swing on, adjust switch downward to "On Seat Down" Position.




8. Align springloaded button on Active Hub Assembly and hole on Front Leg (bent tube) as shown (Figure F.) Make sure the bend of the Front is inward. Front Leg feet should be flat on the floor. Insert tubes together on the floor. Insert tubes together (Figure E). Hub Connectors should be on the inside of the frame as shown (Figure G).

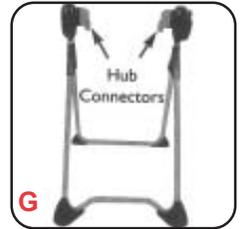

TO ASSEMBLE SEAT

1. Stand behind the swing as shown (Figure H). Align left and right Seat Tubes with left and right Hub Connectors.
2. Align springloaded buttons with ramps in Hub Connectors. Press in buttons with thumb and lift tube into hub opening (Figure I). Make sure springloaded buttons lock into place. Seat should be hanging level on its own.

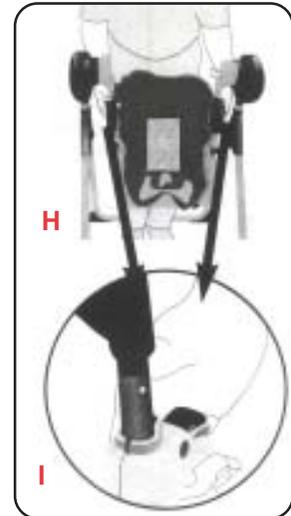

TO ASSEMBLE TRAY

1. Align tray over seat.
2. Press down on tray and snap tabs over both locks.



NOTE: Tray may be opened from either side while remaining connected to the seat.

TO INSTALL BATTERIES



WARNING

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

Remove batteries before storing the product for a prolonged period of time.


1. Insert a flat head screwdriver tip (or quarter) into battery door. Gently push tab back and up to release door. (Figure J).
2. Insert four "D" cell batteries (not included) in the following order as shown. Make sure that the batteries are assembled properly or else the swing will NOT work. (Figure K).
3. Move battery tabs to the right and insert first battery into back left lower position of battery compartment. Push battery flat against back of battery compartment and push tab down. Insert second battery on top of first battery. (Figure L).
4. Move front battery tab down and to the left and insert third battery up into compartment. Hold tab and battery up to allow the insertion of fourth battery (Figure M).
5. Replace battery cover making sure tabs snap securely into place.

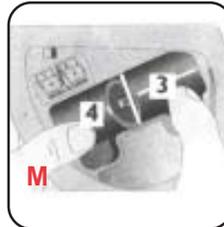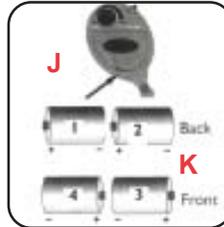

Note: If Swing does not turn on, the batteries are in the wrong order.

Restraints

To secure the child in the harness, push buckle **A** and **B** into the buckle housing **C** until the buckle prongs snap into position. Carefully adjust the waist harness by pulling the slider **D** until the desired length is achieved. Follow the same procedure to adjust the shoulder strap. To release the buckles, squeeze the buckle prongs until the buckle disengages. Always adjust the harness when changing seating positions.

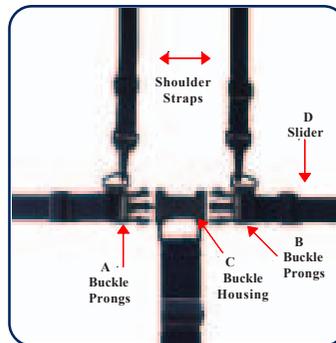

Warning: Many unrestrained children suffer injuries falling from strollers. Use the safety harness at all times.

NEWBORN POSITION

To use the Perfect Height Swing for newborns, raise seat to highest positions (see directions below). In this position, the swing has a slow, gentle motion. Use in recline position until your child can hold their head up unassisted. Eventually as your child grows, the swing will begin to slow down. At that time, lower seat into the Infant Position and the swing will move more freely.

CAUTION

NEVER ADJUST SEAT WHILE CHILD IS IN SWING.

1. Grip both handles, use thumb to flip button covers open.
2. Press both red buttons at the same time and pull seat up until it locks into place. Make sure both sides of swing are secured and level.
3. Recline seat.
4. Place newborn in swing and secure restraint system.
5. To turn swing on, adjust switch upward to "On Seat Up" Position and gently push swing.

