

# Model

## *Trio / Trio-Sport Stroller*

### Features:

- Compact multi-position lieback stroller suitable from newborn.
- Lockable front swivel wheel and one-touch rear wheel brakes.
- Three chrome spoked wheels with pneumatic tyres to handle all terrains.
- Quick release mechanism in all wheels for easy storage.
- Generous sized hood with viewing window and storage pocket.
- Supplied with hand-held safety strap.
- Easy-to-remove seat to accommodate optional newborn bassinet and toddler seat (both sold separately).
- To ensure maximum stability when used with toddler seat, this stroller has a wider rear wheel base.
- Specially tested to and complies with the stability requirement of the AS/NZS 2088:2000 Australian Safety Standard with and without toddler seat.

**Additional products and accessories are available from leading department stores and nursery speciality shops include:-**

Portable Cots, Change Tables, Highchairs, Hook on Highchairs, Safety Gates, Bed Guards, Rockers, Parasoles, Pramettes, Strollers, Walkers, Nappy Bags, Rain Covers, Wooden Cots and Manchester.

### Warranty

The manufacturer warrants this product to be free from defects in material and workmanship under normal use and service following the date of purchase for 12 months. This warranty shall not apply to damages arising from neglect, accidental damage to, or misuse of the product.

**Due to our continuing programme of development, Childcare reserves the right to alter the specifications, colour or design without further notice.**

**Due to variations in the style and design of our products the illustrations used in this instruction manual are generic.**

**This product is not intended for commercial use.**



Childcare Nursery Products Pty Ltd  
20-22 Lindaway Place Tullamarine Vic 3043  
Phone: 03 9335 2244 Fax: 03 9335 2270  
email: sales@childcare-prod.com.au

[www.childcare-prod.com.au](http://www.childcare-prod.com.au)

# *Trio / Trio-Sport Stroller*

## *013700*

Line Drawings to be  
inserted by Factory

Instruction Booklet



**Keep this booklet in a safe place for future reference**  
**Note: Colour and features of product may differ from the diagrams shown**  
[www.childcare-prod.com.au](http://www.childcare-prod.com.au)

### **WARNING**

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.
- DO NOT LEAVE CHILDREN UNATTENDED.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER OTHERWISE THEY MAY BE INJURED.

### **Some Do's and Don'ts**

- Check that all safety locks are engaged before placing a child in the stroller.
- Ensure your child is secured with a correctly adjusted safety harness.
- Do not allow children to stand on the seat.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- Do not place more than 3kgs in the basket, or 1kg in the canopy pocket (if supplied).
- The weight of the child using this stroller alone should not exceed 17kg.
- When used with the toddler seat, the weight on each seat should not exceed 15kg, the combined weight should not exceed 30kg.
- The height of the child using the stroller should not exceed 96cm.
- The bassinet should not be used once the child can sit up unaided.
- This stroller is designed for use with the 'Childcare' bassinet model #013701, or 'Childcare' toddler seat model #013702 ONLY.
- Do not use accessories other than those supplied and approved by Childcare Nursery Products.
- Never ride with more than one child in the stroller.
- Promptly replace worn out or broken parts.
- Always use the safety locks.
- Remove the child from stroller/pram before going up or down stairs and escalators.
- Do not lift stroller by the bumper bar or tray (if supplied).
- To prevent the risk of the stroller catching fire, do not park it near an open fire or a heater.
- Retain your warranty card and keep your sales receipt to provide proof of purchase.
- Recommended tyre pressure: 20-25 PSI.

## **How to Care for your Childcare Stroller**

### **Care and Maintenance**

To prolong the life of your nursery product, keep it clean and do not leave in direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water and a household soap or mild detergent. Allow it to dry fully, preferably away from direct sunlight.

### **Helpful Hints**

If the wheels squeak –use a silicon-based spray ensuring it penetrates the wheel and axle assembly.

When using the stroller at the beach – completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assemblies. Dry thoroughly and lubricate with a silicon-based spray.

### **Do Not Dry Clean or Bleach your Fabrics.**

Do not machine wash, tumble or spin dry your fabrics, unless the care labelling on the product permits these methods.

Non-removable fabrics covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.


In some climates, the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well-ventilated area.

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Childcare Nursery Products.

This product is not intended for commercial use.

## Restraints

To secure the child in the harness, push buckle **A** and **B** into the buckle housing **C** until the buckle prongs snap into position. Carefully adjust the waist harness by pulling the slider **D** until the desired length is achieved. Follow the same procedure to adjust the shoulder strap. To release the buckles, squeeze the top and bottom prongs until the buckle disengages. Always adjust the harness when changing seating positions.

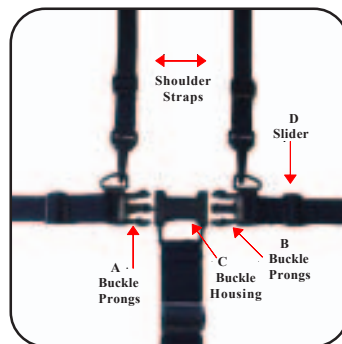

**Warning:** Many unrestrained children suffer injuries falling from strollers. Use the safety harness at all times.

## Brakes

- Push down the rear lever to park.
- Check to make sure the brake is on by trying to push the stroller.
- Lift up to release.

**Warning:** Always apply brake when parking the stroller.



## Folding the Stroller

- Engage brake and disengage swivel lock.
- Close the hood.
- Fully recline bumper bar.
- Pull up the two release catches located either side of the handle which will release the elbow joints. Gently fold handle forward.
- Gently press down on the foot paddle at the rear of the basket and gently push the handle forward.
- Rotate the front wheel to the side for a compact fold.
- Apply the folding strap into the appropriate pin as a folding lock.

**Note:** All wheels are equipped with quick-release mechanism and they can be quickly released if compact storage is required.


**Warning:** The brake must be engaged when folding the stroller.



## Assembly Instructions

### To Open the Stroller

- Lift the handle upward to a vertical position.
- Lift the front wheel housing upwards so that the stroller frame unfolds from beneath.
- Press down on the locking hinges located near the basket with your hand or foot.
- The main folding locks will automatically engage when the handle is fully erected.

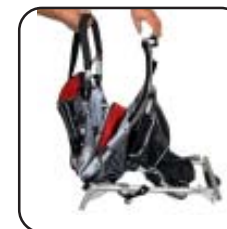

### Rear Wheel Assembly

- Locate rear wheel axles in holes and insert pins.
- Ensure locking 'D' rings are flipped over to secure pins to wheel axle.



### Front Wheel Assembly

- Tilt the stroller back on its rear wheels to lift the front section.
- Insert the wheel fork upward into the swivel housing until you hear it click into place.
- Pull on the wheel to check and ensure it is securely engaged.



### To Attach and Remove the Hood

- Push each end of the hood into the plastic holders located on either side of the seat frame.
- Secure press stud strap around handle bar and attach velcro tab to back of seat as shown.
- Check to ensure hood is securely attached.
- To remove hood, squeeze small clips on both hood ends so hood can pull out through the plastic holders.
- To remove hood pocket attachment, simply un-zip.



### To Fit and Detach Bumper

- Fit each side of the bumper onto the frame and close locking clips. Ensure the red levers on the bumper bar are facing upwards.
- To adjust bumper squeeze the red levers located on each side of the bumper and lower.
- Remove bumper by releasing locking clips and take off frame.



**Warning:** Adjust the bumper bar to its lowest position before folding the stroller.

**Note:** For safety reasons the bumper bar only comes with two positions.

1. Fully erect for normal use.
2. Fully reclined for a compact fold.

## Operational Instructions

### Multiple Position Lieback Seat

Your stroller is fitted with a multiple position lieback seat to enable the stroller to be used from newborn through to the toddler stage.

- Your seat can be adjusted to four recline positions using the zip system by pulling each zipper seat downward for recline or upward for incline.
- For an additional upright position fasten the two belts at the rear of the seat when the zippers are in the most upright position.

**Warning:** Do not alter seat position while child is in stroller.



### To Adjust Handle Position

- Squeeze button on either side of handle and adjust to desired position.
- Handle will click into position.



### Swivel Locks

- Push down and slide the red knob, located on the wheel lock, to the right.
- While in this position, your front wheel will stay in the swivel motion.
- To lock, push down and slide the red knob to the left and with a small amount of movement to the front wheel it will automatically lock into the fixed position.



**Warning:** The swivel must be in the locked position when in jogging or fast walking modes.