

Model *Twin Rover Stroller*

Features:

- Compact lightweight multi position lie-flat twin stroller suitable from newborn.
- Lockable front swivel wheels allows for easier steering.
- Three independent rear wheel brakes for secure braking.
- Padded seats fitted with a full five-point safety harness.
- Stylish European hoods and shopping baskets.
- Complies with the Australian Standard AS/NZS 2088:2000.

Additional products and accessories available in leading department stores and nursery speciality shops include:-

Cots, Portable Cots, Change Tables, Highchairs, Hook on Highchairs, Safety Gates, Bed Guards, Rockers, Parasoles, Pramettes, Strollers, Walkers, Nappy Bags, Rain Covers and Wooden Cots.

Warranty

The manufacturer warrants this product to be free from defects in material and workmanship under normal use and service following the date of purchase for 12 months. This warranty shall not apply to damage arising from neglect, incorrect assembly, accidental damage to, or misuse of the product.

Due to our continuing programme of development, Childcare reserves the right to alter the specifications, colour or design without further notice.

Due to variations in the style and design of our products, the illustrations used in this instruction manual are generic.

This product is not intended for commercial use.



Childcare Nursery Products Pty Ltd
20-22 Lindaway Place Tullamarine Vic 3043
Phone: 03 9335 2244 Fax: 03 9335 2270
email: sales@childcareproducts.com.au
www.childcareproducts.com.au

Twin Rover Stroller 019004

**LINE DRAWING TO BE INSERTED BY
FACTORY**



Keep this booklet in a safe place for future reference
Note: Colour and features of product may differ from the diagram shown

www.childcareproducts.com.au

WARNING

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.
- DO NOT LEAVE CHILDREN UNATTENDED.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER OTHERWISE THEY MAY BE INJURED.

Some do's and don'ts

- Check that all safety locks are engaged before placing a child in the stroller.
- Ensure your child is secured with a correctly adjusted safety harness.
- Do not allow children to stand on the seat.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- Do not place more than 3 kgs in the basket, or 1 kg in the hood pocket (if supplied).
- The weight of the child using the product should not exceed 15 kgs for each seat.
- Do not use accessories other than those supplied and approved by Childcare Nursery Products.
- Never ride with more than two children in the stroller.
- Promptly replace worn out or broken parts.
- Always use the safety locks.
- Remove the child from stroller before going up or down stairs and escalators.
- Do not lift stroller by the bumper bar or tray (if supplied).
- To prevent the stroller catching fire, do not park it near an open fire or a heater.
- Retain your warranty card and keep your sales receipt to provide proof of purchase.

How to Care for your Childcare Stroller

Care and Maintenance

To prolong the life of your nursery product, keep it clean and do not leave in direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water and a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.

Helpful Hints

If the wheels squeak –use a silicon-based spray ensuring it penetrates the wheel and axle assembly.

When using the stroller at the beach – completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assemblies. Dry thoroughly and lubricate with a silicon-based spray.

Do Not Dry Clean or Bleach Your Fabrics

Do not machine wash, tumble or spin dry your fabrics, unless the care labelling on the product permits these methods.

Non-removable fabrics covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.

In some climates, the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well-ventilated area.

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Childcare Nursery Products.

This product is not intended for commercial use.

Brakes

- Apply rear wheel brakes by pushing down individually on each lever with foot.
- Ensure all brakes are applied when parking stroller.
- Release by lifting lever with foot.

Warning: Always apply brakes when parking the stroller.



Folding the Stroller


- Close the hoods.
- Return seats to upright position.
- Lift locks with your foot and lift upwards to disengage.
- Push down on the secondary safety lock with your foot.
- Push handles forward until folded down and manually engage the folding lock.



Assembly Instructions

To Open the Stroller

- Release upfold lock on centre handle and detach upfold lock from leg.
- Hold the handles and allow the stroller to open out.
- Push the footplates fully down to lock the primary and secondary lock.

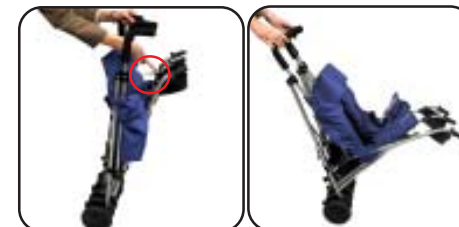

Wheel Assembly

- Place wheel assembly on stroller leg. Ensure that the larger hole on the swivel housing is pushed on first (see arrow on swivel housing).
- Push until wheel clicks into position.
- Pull back on wheel assembly to ensure it is securely attached.



Attaching the Hood

- Attach hood onto handle frame above the main folding elbow.
- Fasten the rear section of the hood onto the handle by the velcro strap.



Operational Instructions

Opening and the Closing Hood

- To open the hood, pull forward and push down the hood hinges.
- To close the hood, lift up the hood hinges and push back.



Warning: The hood must be fully closed before folding the stroller.

Multiple Position Lieback Seat

Your stroller is fitted with a multiple position lieback seat to enable the stroller to be used from newborn to toddler stage.

- To recline, depress the locks with fingers on both lieback linkages simultaneously and push down with thumbs.
- To raise seat, place one hand in the centre of the seat back and push up to desired position.

Warning: Do not alter seat position while child is in the stroller.




Restraints

To secure the child in the harness, push buckle **A** and **B** into the buckle housing **C** until the buckle prongs snap into position.

Carefully adjust the waist harness by pulling the slider **D** until the desired length is achieved. Follow the same procedure to adjust the shoulder strap. To release the buckles, squeeze the top and bottom prongs until the buckle disengages.

Always adjust the harness when changing seating positions.

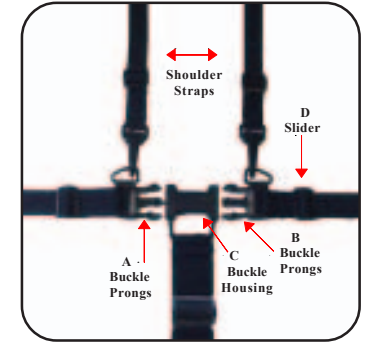

Warning: Many unrestrained children suffer injuries falling from strollers. Use the safety harness at all times.

Seat Extension

- To extend the seat, lift up the seat extension until it clicks into place.
- To lower the seat extension, depress both clips and lower.



Swivel Locks

- To lock swivels, lift swivel lock up.
- To release swivel lock, push swivel lock down.

