

Emmaljunga®

Instruktionsmanual för, Brugsanvisning for, Bruksanvisning for, Gebrauchsanweisung für,
This manual applies to the following product, Seuraavien tuotteiden käyttöohjeet:

Cangaroo & City Carrycot

Sportvagn, Klapvogn, Sportvogn, Sportwagen, Sportstroller & Sport-rattaat

SE

VIKTIG INFORMATION - SPARA FÖR FRAMTIDA BRUK

LÄS IGENOM DENNA MANUAL NOGGRANT INNAN DU ANVÄNDER PRODUKTEN.

Denna produkt motsvarar standard EN 1888:2005.

Denna produkt är avsedd för transporten av ett (1) barn från 6 mån – 3 år med en vikt av maximalt 15 kg.

Med City korg liggdel (Originaltillbehör) kan vagnen användas från födseln.

WARNING! Sittdelen är inte avsedd för barn under 6 månader. Använd sittdelen först när barnet kan sitta självständigt.

WARNING! Denna produkt är inte avsedd för jogging, skatting/inlines.

DK

VIKTIGT! GEM BRUGSANVISNINGEN FOR FREMTIDIG BRUG

LÆS DENNE BRUGSANVISNING GRUNDIGT IGENNEM FØR DU ANVENDER VOGNEN!

Dette produkt opfylder EN 1888:2005

Dette produkt er beregnet til et (1) barn i alderen fra 6 mdr. -3 år med en vægt på max. 15 kg.

Med City Bag (tilbehør) kan vognen bruges fra fødslen.

ADVARSEL! Klapvognen er ikke egnet til børn under 6 måneder. Brug først klapvognen når barnet kan sidde selv.

ADVARSEL! Dette produkt er ikke egnet til løb eller rulleskøjte løb.

NO

VIKTIG! GJEM BRUKSANVISNINGEN FOR FRAMTIDIG BRUK

LES IGJENNOM DENNE BRUKSANVISNING GRUNNDIG IGJENNOM FØR DU BRUKER VOGNEN!

Dette produkt oppfyller EN 1888:2005

Dette produkt er beregnet til et (1) barn i alder fra 6mnd. - 3 år. Med en vekt på maks. 15 kg.

Med City Bag (tilbehør) kan vognen brukes fra fødselen.

ADVARSEL! Sportsvognen er ikke beregnet til barn under 6mnd. Bruk først sportsvognen når barnet kan sitte selv.

ADVARSEL! Dette produkt er ikke egnet til løping eller rulleskøytekjøring.

DE

WICHTIG! ANWEISUNGEN FÜR SPÄTERE UNKLARHEITEN AUFBEWAHREN

VOR BENUTZUNG ALLE ANWEISUNGEN LESEN! Dieses Produkt entspricht EN 1888:2005.

Dieses Produkt ist für ein (1) Kind im Alter von 6 Monaten -3 Jahren mit einem Gewicht von max. 15 kg vorgesehen.

Mit City Wanne (Zubehör) kann der Wagen von Geburt an verwendet werden.

WARNUNG! Die Sitzeinheit ist für Kinder unter 6 Monaten nicht geeignet.

Verwenden Sie die Sitzeinheit erst, wenn Ihr Kind selbständig sitzen kann.

WARNUNG! Dieses Produkt ist für Jogging oder Skating/Inlines nicht geeignet.

UK

IMPORTANT! KEEP FOR FUTURE REFERENCE

FOR THE PROPER USE OF THIS VEHICLE, BE SURE TO READ THIS USER'S MANUAL CAREFULLY

This product complies with EN 1888:2005

This product is suitable for one (1) child from 6 month – 3 years with a maximum weight of 15 kg.

With the City Carry-cot the pram can be used from birth.

WARNING! The seat-unit is not suitable for children under 6 months. Don't use the seat-unit until your child can sit unaided.

FI

TÄRKEÄÄ TIETOA – SÄLYTÄ TULEVAA KÄYTTÖÄ VARTEN

LUE NÄMÄ KÄYTTÖOHJEET HUOLELLISESTI ENNEN KUIN KÄYTÄT VAUNUJA

Tämä tuote vastaa EN 1888:2005 standardin vaatimuksia

Tämä ratas on tarkoitettu yhden (1) lapsen kuljettamiseen 6 kk iästä aina 3 ikävuoteen asti. Enimmäispaino 15kg.

City kopalla (Alkuperäinen lisävaruste) varustettuna ratasta voidaan käyttää vastasyntyneelle.

VAROITUS! Ratasosaa ei ole suunniteltu käytettäväksi lapsille alle 6 kk. Käytä ratasosaa vasta kun lapsi osaa istua tukevasti.

VAROITUS! Ratasta ei ole suunniteltu käytettäväksi juoksukärrynä tai rullaluistimien kanssa.

Svenska
Sida 2 - 15

Dansk
Side 16-29

Norsk
Side 30-43

Deutsch
Seite 44-57

English
Page 58-71

Suomi
Sivu 72-85

Table of contents

Subject

Contents of the box	58
Emmaljunga's original accessories	58
Important safety information	59-60
Assembly and usage of the seat-unit	61-64
Fold the pram	65
Changing the seat -unit to City Carry-cot (Accessory)	66-67
Changing the Carry-cot to seat-unit (Accessory).....	67
Assembly and usage of the City Carry-cot (Accessory)	68-69
Care and maintenance	70-71

Important!

In the manual the terminology City Carry-cot is used for the City Carry-cot/ Bassinet

PLEASE OBSERVE!

If you want to change the seat-unit to the Carry-cot or from Carry-cot to seat-unit, you need to buy a Carry-cot and an adaptor as an accessory. If you don't feel secure changing seat-unit/Carry-cot, please contact your local dealer, and they will help you.

Save the manual and all screws and washers in a safe place for future use. Please check that you have received all the necessary parts when purchasing the adapter.

Contents of the box

Cangaroo Pram

1 pc	Folded chassis with tray
2 pc	Rear wheels
1 pc	Swivel wheel
1 pc	Hood
1 pc	Seat-unit with 5-point harness
1 pd	Frontbar
1 pc	Frontbar cover
1 pc	Raincover
1 pc	Instruction manual

Adapter to City Carry-cot (original accessory)

2 pc	EasyFix attachments
2 pc	Screws and domed cap
1 pc	Allen key

City Carry-cot (original accessory)

1 pc	City Carry-cot
1 pc	Hood
1 pc	Mattress
1 pc	Apron

Emmaljunga's original accessories

Please use Emmaljunga's original accessories for maximum safety and comfort. Information about accessories that match can be found in our brochure or at any of our authorised retailers.

Important Safety Information

Please read the following Warnings and IMPORTANT instructions before use. Keep this manual handy for future reference.

... WARNING ...

Failure to follow the proper usage or the assembly instructions may cause serious injury to your child/children and/or cause damage to the construction of the vehicle.

Warning! Child/children should never be left unattended

Warning! Ensure that all locking devices are engaged before use.

Warning! Use a harness as soon as your child can sit unaided.

Warning! The seat-unit is not suitable for children under 6 months.

Warning! Any load attached to the handle affects the stability of the pram/ pushchair.

Warning! The product is not suitable for running or skating

Warning! Always use the crotch strap in combination with the waist belt.

Warning! Check that the pram body or seat-unit attachment devices are correctly engaged before use.

Warning! Accessories or spare parts that are not approved by the manufacturer shall not be used.

- This pram is intended for transportations of one (1) child from 6 months with a maximum weight of 15 kg. With the City Carry-cot (original accessory) the pram can be used from birth. Only use Emmaljunga Original accessory.
- Always secure the child in the vehicle with the 5-point harness.
- The safety of your child is your responsibility.
- Never leave your child unattended.
- The safe guards and instructions of this manual cannot cover all possible conditions and unforeseeable situations which may occur. It must be understood that common sense, caution, and care are factors which can not be built into this product. These factors are the responsibility of the person that uses the pram.
- It is important that these instructions are understood by all people who will use this vehicle and accessories. Always inform and instruct each person using the vehicle and accessories as to how this product should be used, even if the person will only use it for a short while.
- If any instructions are unclear and need further explanation or if you have any further questions please contact an authorised Emmaljunga retailer.
- City Carry-cot: is intended for children within the age group of 0-6 months. The depth from the top of the mattress to the top of the side of the body at, or any position within 300 mm from the harness attachment points should not be reduced to less than 150 mm when the mattress is in position. Do not add a mattress thicker than 25 mm.

Important Safety Information

Continued.

- Seat part or pram body may not be used as a car seat.
- The vehicle is made for transportation only. Never use this vehicle as a bed for your child/children.
- Always store the pram away from children and do not allow children to play with or in it.
- Never leave this vehicle without first engaging the parking device.
- The parking device should always be engaged while placing or removing your child/children.
- Avoid parking on a hill.
- For safety reasons, please only use Emmaljunga's original accessories.
- Overloading, incorrect folding, and the use of non-approved accessories may cause injury to your child/children and damage or break this vehicle.
- Never leave this vehicle in dangerous locations, even when not occupied.
- Avoid using this vehicle on steps, stairs or escalators, as it may be dangerous to your child/children.
- Do not hang any load on the handle as it will affect the stability of the vehicle
- Never place items on the top of the hood.
- The shopping tray included with the chassis has a weight limit of 5 kg. Always place heavy items in the centre of the basket. This vehicle may become unstable if the weight in the basket is unevenly distributed.
- Items in the shopping tray should not protrude over the sides as items can get caught in the wheel spokes.
- Follow care and maintenance instructions

Assembly and usage of seat-unit

1



Assembly of seat-unit fabrics

- Engage the parking device by pushing it down with your foot. (see page 63, ill. 14).
- Raise the handle, while you are holding one foot on one of the rear wheels, until the chassis locks click into the locked position
- Place the seat unit fabrics over the chassis, using the zippers and press-studs, located on the fabrics.

WARNING

- The chassis locks need to click into the locked position.
- Please make sure, before you use the pram that the chassis lock is in the locked position.

2



- Place the fabrics around the metalbar between the handle. Lock it with the four press-studs (1).

3



 
- Secure the two straps underneath the footrest (2).

4



- Secure the fabrics with the zippers on both sides of the seat-unit (3).

5

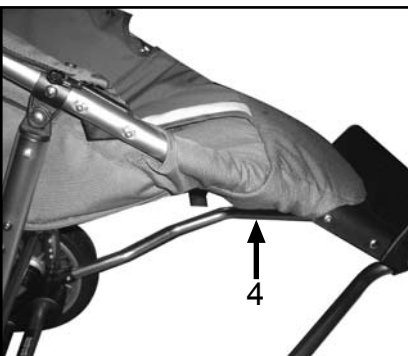


- Fasten the fabrics with the press-studs (4) underneath the footrest(two on both sides).


Assembly and usage of seat-unit



 - Fasten the straps on the side of the fabrics with the press-studs (5) - one on both sides. The straps must be placed underneath the black plastic stud on the chassis(6).

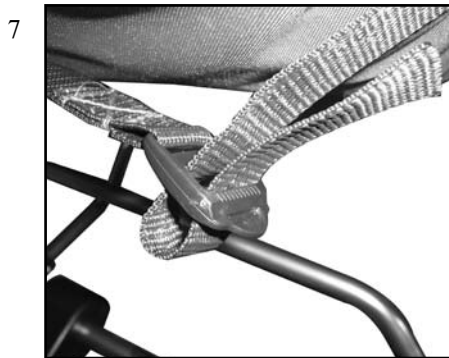

 - Pull the strap, underneath the backrest, through the plastic part as shown on the picture.

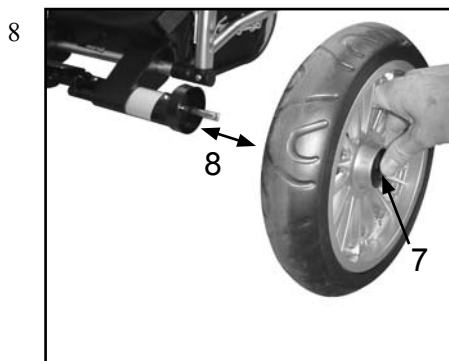


Attaching the rear-wheels

- Remove the plastic protection from the axles. Save them for future use.
- Attach the wheels with the wheel cogs (8). Press in the hub cap's release button (7), push the wheels onto the axles as far as it can go. Release the button and pull the wheel towards you, until you hear a definite click. Repeat the same procedure for the other wheel.
- Please make sure that the wheels are attached properly and cannot be pulled off the axle.

IMPORTANT

 - The wheels are greased and can leave marks on textiles. Please use wheel protection indoors to protect your floors.
- Risk of suffocation. Don't let your child play with or in some other way handle the plastic wheel protectors.

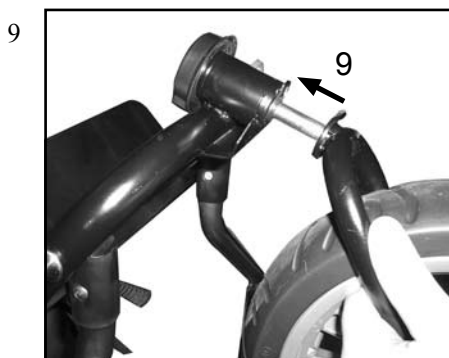

Attaching the front wheel

- Attach the front fork onto the front fork lock, while you are pressing the release button on the fork lock, as far as it can go. Release the button. Make sure that the wheel is attached properly and cannot be pulled off.
- You can lock the swivel wheel by engaging the red button (see page 65, ill. 1). To use the swivel wheel, pull the red button and turn it 180 degrees.

Assembly of the front bar

 
- Place the front bar into the plastic holders (11). Place the front bar cover over the front bar and zip.
- Fasten the crotch strap around the front bar.
- You can adjust the front bar simply by pressing the button on the plastic holders (10).
- You can remove the front bar by pressing the buttons on the inside of the plastic holders (11).



WARNING!

- Never carry the pram by the front bar!

Assembly and usage of seat-unit

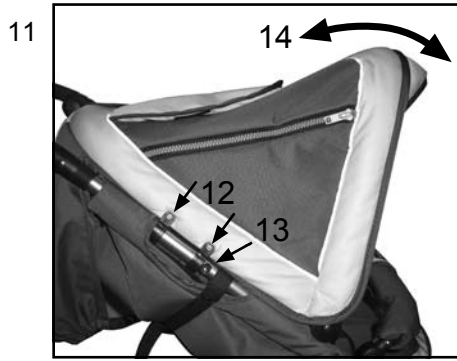

Assembly of Hood

 
- Attach the hood by pressing the plastic parts around the frame (12) (two on both sides).

IMPORTANT!

- The plastic parts have to be placed above the black plastic stud on the chassis(13).

Adjusting the hood

- Adjust the hood by gently pulling the front backwards and forwards (14) until it reaches the desired position.

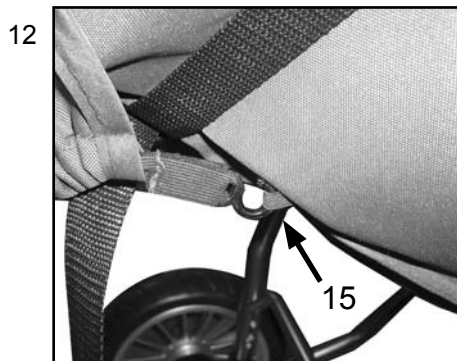

- Fasten the two plastic hooks on the hood apron to the back of the backrest as shown (15) - one on both sides.

IMPORTANT

- Never carry the carry-cot by the hood.
- Fasten the two plastic hooks on the hood apron to the back of the backrest



Adjusting the backrest

 
- The seat backrest can be adjusted by tightening the straps underneath the backrest. Ensure the backrest straps are adjusted to same level on both sides.
- You lower the backrest by loosening the straps on both sides of the backrest to desired position.

WARNING

- Please make sure that the backrest straps are adjusted to the same level on both sides.


Engaging the parking device

- Engage the parking device by pushing it down with your foot.
- Disengage the parking device by pulling up

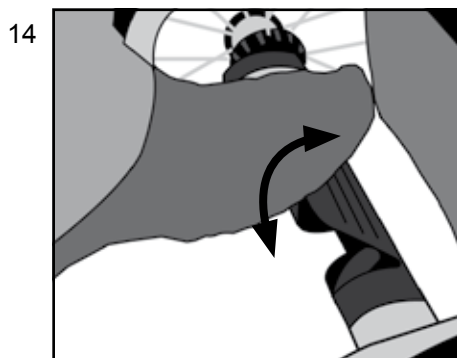

WARNING!

 - Never leave the vehicle without first engaging the parking device.
- The brake should always be engaged when you lift your child in and out of the pram
- Avoid uphill or downhill parking.
- Make sure that the cogs are attached properly on both rear wheels.
- Make sure that the brake pin engages into the cogs when the vehicle is parked into position.

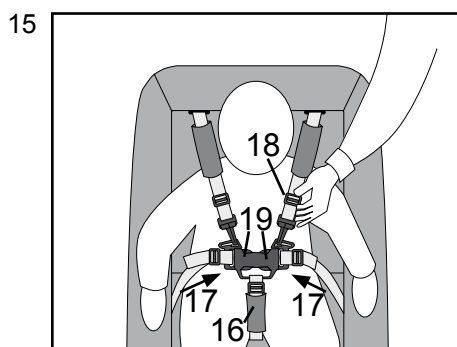


Adjust the 5-point harness

- Bring crutch strap (16) forward between the child's legs and up toward front of waist. Insert the waist straps (17) into the harness buckle until they "click" in place. Make sure waist straps are fastened.
- Adjust all straps, using the sliders (18).
- To release shoulder and waist straps, press the buttons (19) in the centre of the harness buckle.

WARNING

- Always use the harness when the child is placed in the vehicle.
- Always make sure that the harness is attached to the fabrics.

 Assembly and usage of seat-unit

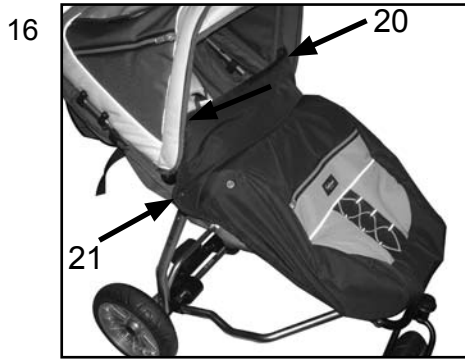


Assembly of Apron (Accessory)

- Slip the apron over the footrest and pull toward the front of the hood. Snap the apron onto the four press-studs, two on each side (20 + 21).

IMPORTANT

 - The hood cannot be pushed back with the apron attached to press studs inside the hood (20).

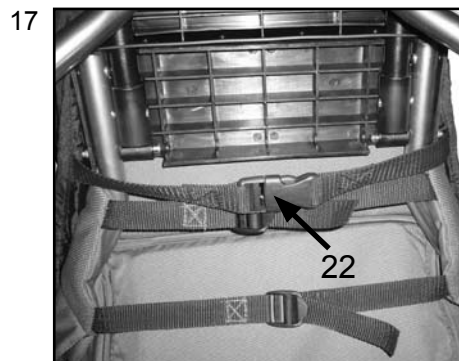

- Fasten the apron, with the two straps in the end of the apron, underneath the footrest (22).

 
Use of the raincover (not shown)

- The raincover is attached by placing the raincover over the carry-cot and seat-unit. Please note that there is an opening in the raincover near the hood opening.
- Use the raincover that is supplied with the pram.
- Always use the raincover when it's raining or snowing. If the pram is damp before the raincover is attached, wipe off fabrics first if possible.
- Make sure that the raincover is completely dry before it is placed back into it's bag.




Assembly of Tray

- Wrap the end of the tray around the metalbar, above the footbrake, and secure it with the three press studs on the inside of the tray.
- The tray can be removed for washing. Remove the wooden plate before washing.

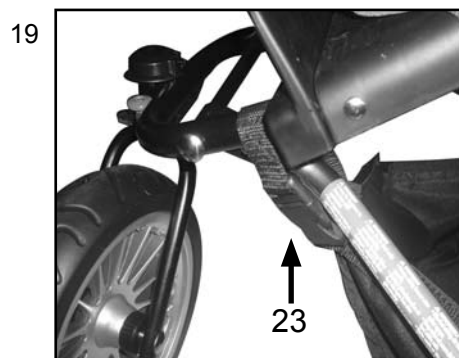

 - Wrap the two straps in the end of the tray around the chassis underneath the footrest and lock with the plastic lock (23).

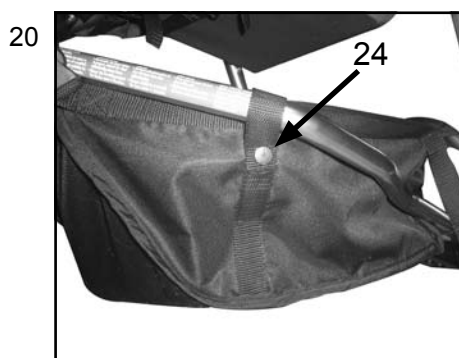

- Wrap the tray straps around the sides of the chassis and lock the press-studs (24) - one on both sides.

Folding the pram



Unlock the front wheel

 
- Engage the parking device by pushing it down with your foot. (see page 63, ill. 14).
- If the front wheel is locked, you may first unlock it by pulling the red button and turn it 180 degrees (1).



- Release the chassis locks, located on both side of the handle, by pulling the black plastic parts up towards you with both hands.


WARNING

- Make sure that the area is clear. Remember the child's active safety is your responsibility.

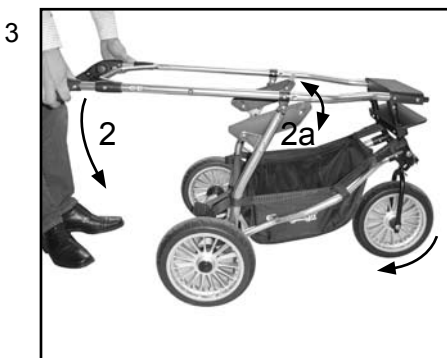

- Fold the pram by pushing the handle downwards (2). The front wheel automatically folds underneath the chassis.

 If you fold the pram with the Carrycot placed on the chassis, the black EasyFix attachment (2a) can turn in a position, so that the Carrycot is no longer horizontal, when you unfold the pram again. If that is the case, fold the pram again and hold the Carrycot horizontal when you unfold the pram.

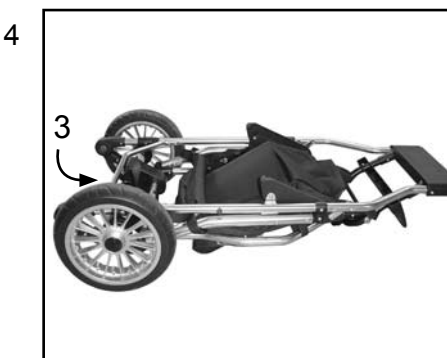


Adjust the handle

- If you want to make the folded chassis more compact, you can fold the handle inwards by pressing the grey buttons on the inside of the handle, and adjusting it to the required position, while holding the grey buttons pressed in (3).

How to adjust the height of the handle (not shown)

 - Adjust the height by pressing the grey buttons on the inside of the handle. Keep the buttons pressed in while you adjust to the required position.

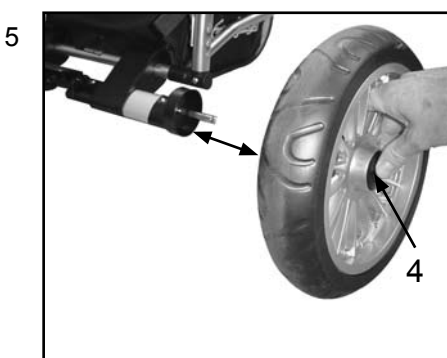

- If you need to make more space you can remove the wheels by pressing in the hub cap's release mechanism (4) and pulling the wheel off the axle.
- Wipe off any dirt or grease from the axles before you replace the wheels.

IMPORTANT

- The wheels and axles can be greasy and can make marks on textiles and floors. Use protection when placed indoors.

 
Changing the seat-unit to City Carry-cot

1



- Take off the fabrics.

2

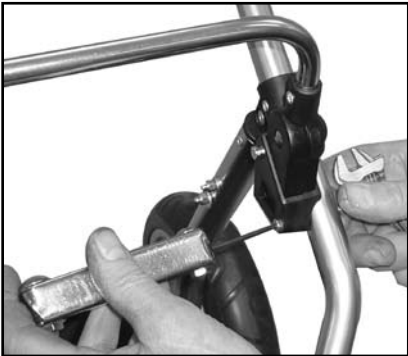

- Remove the screws that hold the front bar and save them for future use. They will be needed again when the seat unit is reassembled.

3



- Remove the two black screws (1) shown on the picture and pull them through the holes from the other side of the tubes. (save the washers for future use.)

4



- Push the black screws through the metalplate and the tube from the inside of the chassis. Ensure that the metalplate is pointing towards the rear of the chassis, when you mount the screws. Observe that there is a left and right side of the adapter.
- **Observe that there is a left and right side of the adapter.**

 
5



- Lock the screws with the domed cap.

Changing the seat-unit to City Carry-cot

6

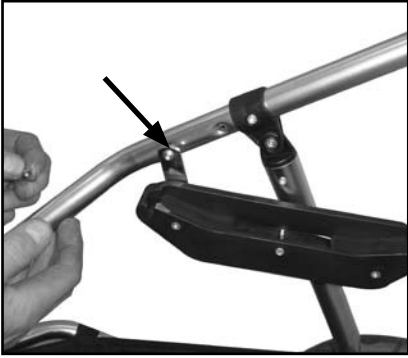


- Fasten the other end of the adapter with the screw and domed cap which comes with the adapter. Do not tighten the cap too tight, but leave 0,5 mm, so that the chassis can be folded.

Now you can place the City Carry-cot on the chassis (see page 69, ill. 8).

Changing the City Carry-cot to seat-unit

 1

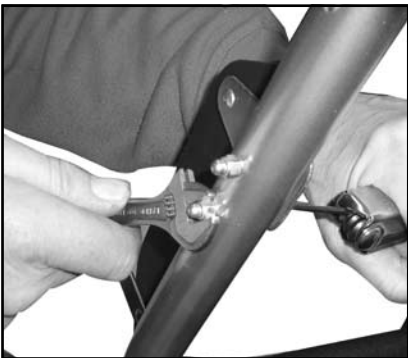

- Reassemble the seat unit by following the instructions in reverse, pictures 6-3. The black screws and caps have to be put back in place as they were when you bought the pram, using the washers, so that the caps and washers are placed on the inside of the chassis.

2



 
- Assemble the front bar with the screws that you saved together with the front bar.

3



- Place the seat unit fabrics over the chassis, using the zippers and press-studs, located on the fabrics.

Assembly and usage of the City Carry-cot (Accessory)

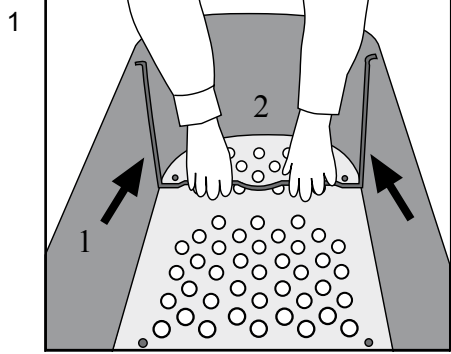


Assembly of pram body

- Remove plastic covers from mattress, fabrics and discard. Slide the two metal support brackets (1) onto the base (2) of the pram body.
- The base is made of wood.

WARNING

 
- Risk of suffocation. Do not let your children play with the plastic bag.
- Make sure that the metal support bars are attached so that the pram stability and safety will not be jeopardised.

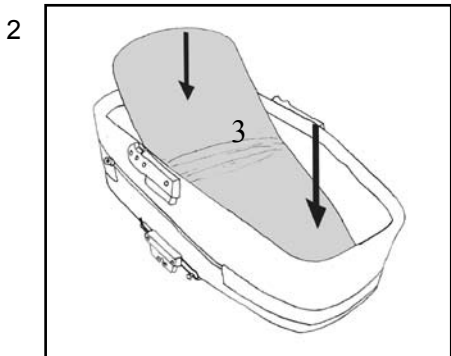


- Insert the mattress (3).

WARNING

 
- The depth from the top of the mattress together with other bed accessories to the carry-cot upper part must be at least 140mm.
- Do not add a mattress thicker than 25 mm.

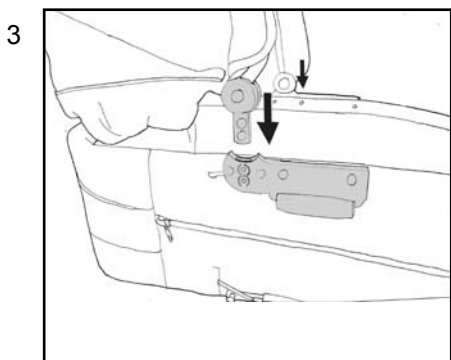

 - Attach the hood to the pram body by pushing the plastic leg of the hood into the plastic holders on the pram body. Make sure they snap into place.

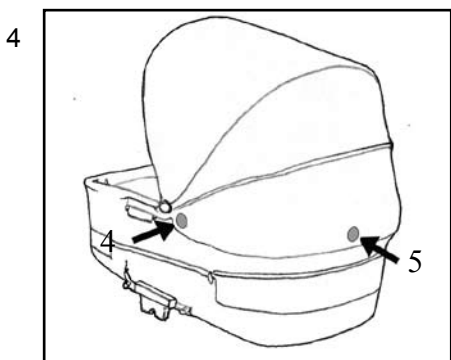

 - Press the hood fabric onto the plastic holder (4), on each side. Press the velcro (5) onto the pram body.
- The press studs on the back of the hood is to use when the hood is rolled up for better ventilation when it is hot.

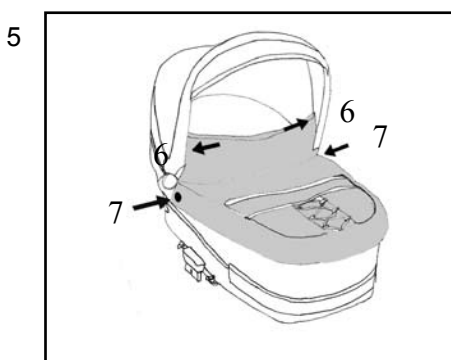


- Press the apron onto the hood (6) and onto the plastic holder (7) on each side.

IMPORTANT

- The hood cannot be pushed back when the apron is snapped onto the hood without releasing the press studs (6)

Assembly and usage of the City Carry-cot (Accessory)

 6

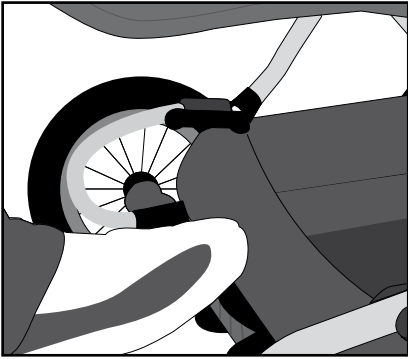


Engaging the parking device

- Engage the parking device by pushing it down with your foot.
- Disengage the parking device by pulling up

WARNING

- Never leave the vehicle without first engaging the parking device.
- The brake should always be engaged when you lift your child in and out of the pram
- Avoid uphill or downhill parking.
- Make sure that the cogs are attached properly on both rear wheels.
- Make sure that the brake pin engages into the cogs when the vehicle is parked into position

 7

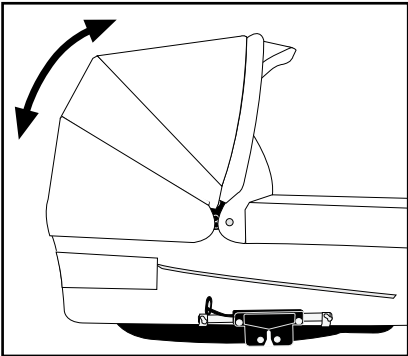


Adjusting the hood

- Adjust the hood by gently pulling the hood forward into desired position.
- Do not adjust the hood while the apron is attached.

IMPORTANT

- Never carry the carry-cot by the hood.
- Never lift the carry-cot when it is assembled onto the chassis.

 8

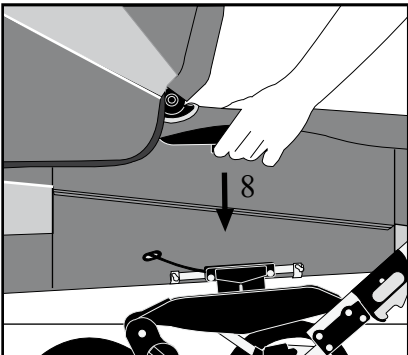


Attachment of the carry-cot

- Engage the parking device.
- Lift the carry-cot by handles and push the Easy Fix into the attachments (8) on both sides of the chassis until it locks into its position.

To release the carry-cot

- Start by engaging the parking device.
- Pull the Easy Fix grip towards you and then lift the carry-cot straight up. When the Easy-Fix cannot be pushed any further, the top part can then be removed.

 9

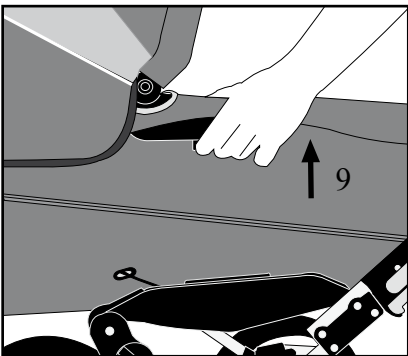

WARNING

- Don't let any child be placed in the carrycot when it is being attached or released
- Hold the handles steadily until the carry-cot is in place.
- Make sure that the carry-cot is in place, before you start to use the vehicle.
- Never lift the carry-cot when it is assembled onto the chassis

Use of the rain cover (not shown)

- The rain cover is attached by placing the rain cover over the carrycot and seat-unit. Please note that there is an opening in the rain cover near the hood opening.
- Use the rain cover that is supplied with the pram.
- Always use the rain cover when it's raining or snowing. If the pram is damp before the rain cover is attached, wipe off the fabrics first if possible.
- Make sure the rain cover is completely dry before it is placed back into its bag.

Care and maintenance

General care and maintenance instructions

- Never expose your vehicle to excessive sunlight for long periods of time.
- Always use a rain cover when it is snowing or raining.
- Never store your vehicle in cold and/or damp places.
- Should the chassis become wet, dry it off promptly. Make sure the vehicle is completely dry before storing.
- If the vehicle is used near the ocean or salted roads, spray the chassis with a hose, and dry.
- Take care when transporting or storing the chassis since the surface is delicate. Scratches to the chassis surface, that arise after the sale is not a valid complaint.

Routine Inspection

- Regularly clean the chassis and metal parts of the vehicle dry off and lubricate all joints of the chassis. Spokes, and fenders on all wheels, should frequently be wiped off with a dry cloth. When the pram is used during the winter time, cleaning of the pram should be done at least once a week. Lack of maintenance could cause corrosion on the spokes and fenders. Should corrosion on the surface occur, which is a possibility, you are required to remove this with a corrosion cleaning agent.
- It is recommended to lubricate the wheel axles and suspension system every three months (clean axles with a cloth prior to lubrication). Axles may be lubricated with petroleum jelly or automobile oil.

Check that:

- all chassis locking devices are functioning properly.
- all rivets, nuts and bolts are firmly tightened and not broken.
- all plastic parts are not cracked or broken.
- the wheel bushings are in a good condition.
- all velcros are securely fastened on backrest pocket and seat board flap.
- the press-stud is securely fastened on the footrest flap.
- all elastic straps are in a good condition.
- the secondary locking mechanism is intact and can move freely.

PLEASE OBSERVE

- When in need of servicing with original parts and other technical issues that require a professional decision, always get in touch with your retailer where your Emmaljunga product was purchased. All Emmaljunga products come with a 6 month manufacturing guarantee. This guarantee does not apply when issues arise through normal wear and tear.
- This information is relevant for Great Britain only.

WARNING

- Tyres can when in contact with PVC-floor or other plastic materials cause discoloration. Always use wheel protection if the pram/stroller is stored on delicate surfaces.

Care and maintenance

Washing instructions

- Hood:
Take off and extend the hood. Shower the hood from the inside (interior fabric) with luke warm water. Use mild liquid soap as detergent. Cleanse it thoroughly. Drip dry the fully extended hood.
- Seat fabric and 5-point harness:
Remove the seat fabric from the chassis. Remove the seat-board; store it in a dry place. Hand wash seat fabrics in lukewarm water. Use mild liquid soap as detergent. Cleanse thoroughly. Drip dry the seat fabric. Only wipe the nylon straps and plastic parts clean with a damp cloth. Do not hand wash. Make sure the harness is dry before reassembly.
- Front bar padding:
Remove the front bar padding/apron. Hand wash in luke warm water. Use mild liquid soap as detergent on the surface of the exterior fabric. Handle non-woven interior material with care. Drip-dry.
- Pram body (City Carry-cot):
Wipe the exterior fabric and the interior lining material, clean with a damp cloth. Do not hand wash. Use a mild liquid soap as a detergent. Drip dry. Dry the pram body in its fully extended position. Make sure the wooden base is protected from any water.

General Information

- Ironing: If any fabric part needs to be ironed, always use a 100 % cotton cloth in-between the iron and the fabric to protect the fabric surface. Iron the exterior fabrics (100 %) polyester and the interior fabrics on gentle heat (110°C on the iron).
- Make sure all parts are completely dry before reassembly. Check the trimmings and the seam on the seat fabric underneath the backrest-pocket.
- You may apply a material protector (like Scotchgard™) on the exterior fabric after washing. Always apply before reassembly.

WARNING

- Do not place child/children in stroller for at least 24 hours after applying a material protector.

Reassembly after washing

WARNING

- Make sure all parts are assembled correctly according to the instructions in this manual.

Emmaljunga®

Instruktionsmanual för Cangaroo & City korg
© 2007 Emmaljunga Barnvagnsfabrik AB
Alla rättigheter förbehålles
Med reservation för ändringar

Emmaljunga Barnvagnsfabrik AB
Emmaljunga 2056, 280 22 Vittsjö
SVERIGE

Brugsanvisning for Cangaroo & City Bag barnevognsoverdel
© 2007 Emmaljunga Barnvagnsfabrik AB
Alle rettigheder forbeholdt
Med forbehold for ændringer

Emmaljunga
Banegårdsgade 16, 8300 Odder
DANMARK

Bruksanvisning for Cangaroo & City Bag barnevognsoverdel
© 2007 Emmaljunga Barnvagnsfabrik AB
Alle rettigheter forbeholdt
Med forbehold om endringer

Emmaljunga Barnvagnsfabrik AB
Emmaljunga 2056, 280 22 Vittsjö
SVERIGE

Instruction manual for Cangaroo & City Bassinet
© 2007 Emmaljunga Barnvagnsfabrik AB
All rights reserved

Emmaljunga Barnvagnsfabrik AB
Emmaljunga 2056, SE-280 22 Vittsjö
SWEDEN

Gebrauchsanweisung für Cangaroo Sportwagen & City Wanne
© 2007 Emmaljunga Barnvagnsfabrik AB
Alle Rechte vorbehalten

Emmaljunga Barnvagnsfabrik AB
Emmaljunga 2056, SE-280 22 Vittsjö
SCHWEDEN

Käyttöohje Cangaroolle ja City Kopalle
© 2007 Emmaljunga Barnvagnsfabrik AB
Kaikki oikeudet pidätetään