



## WARNING:

AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT.  
ALWAYS USE THE RESTRAINT SYSTEM.

Your child's safety depends on you. Proper stroller usage cannot be assured unless you follow these instructions.  
**DO NOT USE STROLLER UNTIL YOU READ AND FOLLOW THE MANUFACTURER'S INSTRUCTIONS.**

 
### IMPORTANT SAFETY INFORMATION:

- **NEVER LEAVE YOUR CHILD UNATTENDED WHILE IN STROLLER.** Accidents can happen quickly while your back is turned. You must always keep your child in view while your child is in the stroller, even while sleeping. Do not use this product as a bed. Your child may become tangled in straps or pads and suffocate.
- **Always use restraint system to keep child from standing up or falling out of the stroller.**
- **Always place the child in the front seat before placing another in the back seat.** When removing children, always remove the child in the back seat first before removing the child in the front. Failure to do so may cause the stroller to become unstable and tip.
- **Always balance the weight of the stroller evenly.** To prevent the stroller from becoming unstable or tipping:
  - Do not place parcels or accessory items on the stroller canopy, seat, or over the handle.
  - Do not put more than 10 lbs. (4.54 kg) in the basket.
  - Do not allow children to play with or hang onto the stroller.
  - Do not put more than 3 lbs. (1.362 kg) in each Saddle Bag.
- **Always lock the stroller open before allowing your child in or near the stroller.** This prevents injuries caused by stroller collapsing.
- **Always use this stroller with children who weigh less than 35 lbs. (15.88 kg.) per seat.** This stroller can hold a maximum of 70 lbs. (31.75 kg.) dual occupancy, and use by larger children may cause it to tip.
- **Use this stroller in the reclined position until child can sit up unassisted.**
- **Put on all brakes, whenever you park the stroller, especially on an incline.** This prevents the stroller from rolling away.
- **Never use this stroller on stairways or escalators.**
- **Always fasten the canopy onto the seat back when using the stroller in the reclined position.**
- **Do not lift by trays or toy bar.**
- **This is not an exercise stroller!** Do not use this product while running, jogging, in-line skating or participating in other athletic activities.
- **Do not carry extra children or bags on this stroller. Do not use accessories other than those approved by the vehicle manufacturer.**
- **Do not put child in basket.**
- **It is unsafe to use accessories other than those approved by the vehicle manufacturer.**
- **The stroller should not be used near an open fire or exposed flame.**
- **Do not allow child to stand on seat or sit on footrest.**
- **Make sure children are clear of any moving parts if you adjust the stroller, otherwise they may be injured.**
- **The front seat is not recommended for a child under 6 months old.**


# How to Assemble Your Stroller

## 1 TO OPEN STROLLER:

**Step 1.** Cut plastic tie.

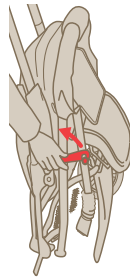

 
**Step 2.** Release folding latch. Unfold to full open position.

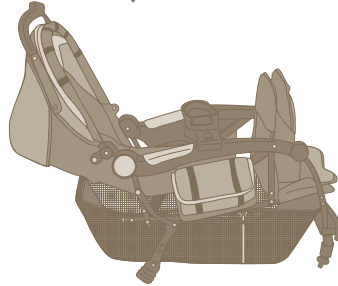

## 2 TO ASSEMBLE FRONT WHEELS:

**Step 1.** Turn stroller over as shown.

 
**Step 2.** Align front wheel assembly as shown. Tab must be facing away from stroller (towards you).

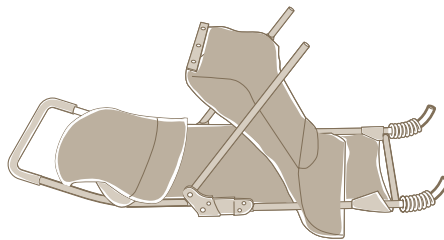


**Step 3.** Push wheel assembly onto stroller leg until it snaps into place.

**Step 4.** Repeat for other wheel. Tug firmly on each wheel assembly to be sure wheels are securely in place.

 
**NOTE:** To remove, squeeze tab and pull wheel off.

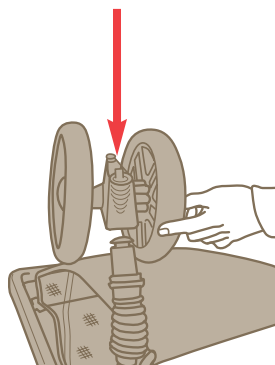

### 3 TO ASSEMBLE REAR WHEELS:

 

 **Step 1.** Remove and discard protective plastic sleeve from ends of rear axle.

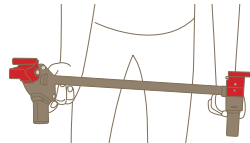


**Step 2.** Position brake assembly as shown, with brake levers pointing towards stroller handle (Figure A).

A


Brake Levers

 **Step 3.** Push both brake assemblies onto rear leg tubes at the same time until spring loaded buttons click into place (Figure A & B).

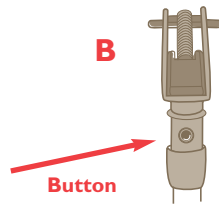

**NOTE:** If brake assemblies do not click and hold in place, the spring button is stuck and not protruding through the hole in the tube. Use a screw driver or pliers to move the button so that it protrudes out of the hole in the tube.

 
**Step 4.** Slide wheel onto axle (Figure C).

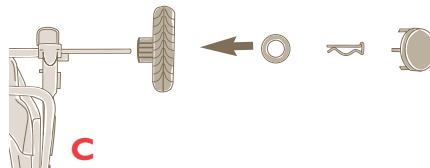


**Step 5.** Slide washer onto axle (Figure C).

**Step 6.** Fit straight part of cotter pin through hole on axle as shown (Figure D).

 D

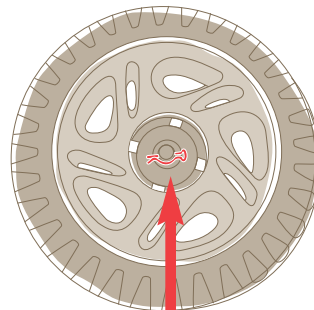

 
**Step 7.** Line up tabs in the hub cap with slots in the wheel, snap hub cap into place.

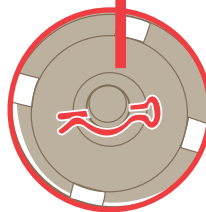

**Step 8.** Repeat for second side.


### 4 TO ATTACH FRONT CANOPY:

 Slide canopy on as shown.

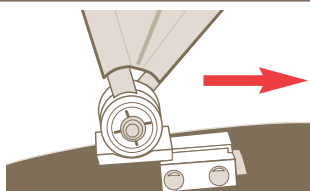


## 5 TO ATTACH FOOTREST:

 
**Step 1.** Align and place footrest against stroller frame as shown.

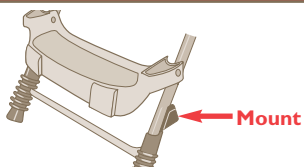

 **Step 2.** Slide footrest down until it fits onto the mount.

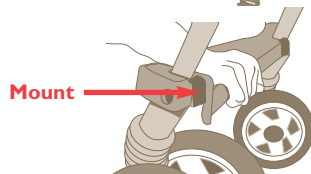

 
**Step 3.** Slide metal pins through both holes on each side of the footrest until the pin head is flush with the surface of the footrest.

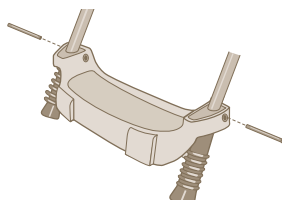

## 6 TO ATTACH SADDLE BAGS:

**Step 1.** Thread Velcro straps through the slots on the side rail and secure strap.

 **WARNING!**  
DO NOT PUT MORE THAN 3 LBS  
(1.362 KG) IN EACH SADDLE BAG.

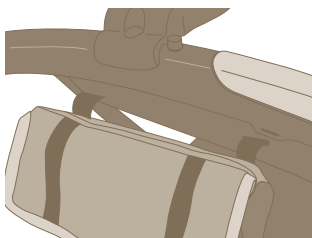


## 7 TO ATTACH FRONT TRAY:

**Step 1.** Align tray between plastic tabs onto metal tubing as shown.

**Step 2.** Snap tab in place.

 
**Step 3.** Repeat for second side.

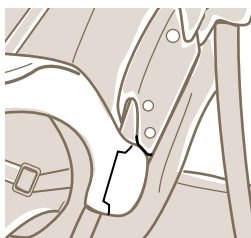

## 8 TO ATTACH NON ELECTRONIC TOYS (SELECT MODELS):

**Step 1.** Position toy steering wheel on front snack tray as shown.

 Rear toy tabs

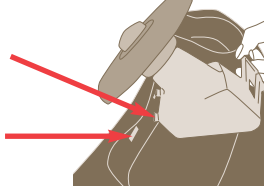

**Step 2.** Align rear toy tabs with rear tray slots. Hook into place.

 
Rear tray slots

**Step 3.** Place your thumbs underneath tray and with fingers, snap front portion of toy steering wheel into front tray slots.



**Step 4.** To remove toys, press plastic tabs on front of toy steering wheel and pull up.

Plastic tab

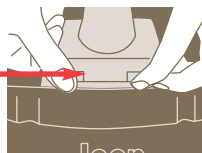


## 9 TO ASSEMBLE ELECTRONIC TOYS

(SELECT MODELS):

**Step 1.** Attach mirror to toy as shown.


**Caution:** For your child's safety, remove the following labels if found on this toy before use:

 - "Try Me" on front of unit.
- Protective film on mirror.

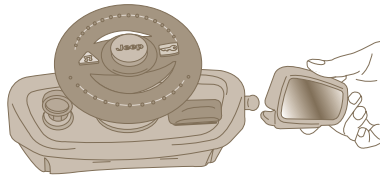

## 10 TO INSTALL BATTERIES IN ELECTRONIC TOYS (SELECT MODELS):

 **Step 1.** To insert batteries, use a phillips head screwdriver to unfasten battery cover. Insert batteries as shown. Requires 2 "AA" batteries (Not Included). Secure battery cover.

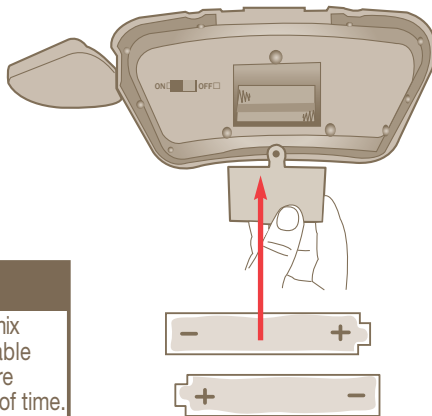

**Step 2.** Turn switch to "On" position to play sounds.

### CAUTION

 
Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium). Remove battery(ies) before storing this product for a prolonged period of time.

## 11 TO ATTACH ELECTRONIC TOYS


(SELECT MODELS):

**Step 1.** Place electronic toys so that they face the child in the stroller.

**Step 2.** Tilt toys toward stroller and align tabs with rear tray slots. Lock Tabs into slots (Figure A).

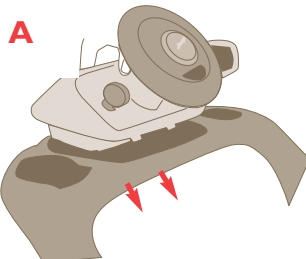

 **Step 3.** Press down firmly on front of toys until front tabs lock toys securely in place (Figure B).

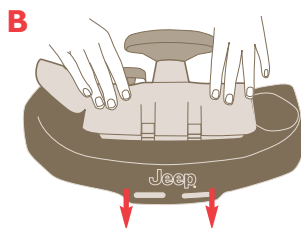


**Step 4.** To remove toys from tray, press down on front tabs to release front tabs and pull up on toys.

## 12 TO ATTACH REAR TRAY:

 **Step 1.** Rest tray on top of stroller as shown, just in front of the buttons.

**NOTE:** Be sure the cup holder is on the right side of the stroller as shown.

**Step 2.** Push down firmly on the tray until both sides click in. Pull up on each side of the tray gently to make sure it is secured on both sides.

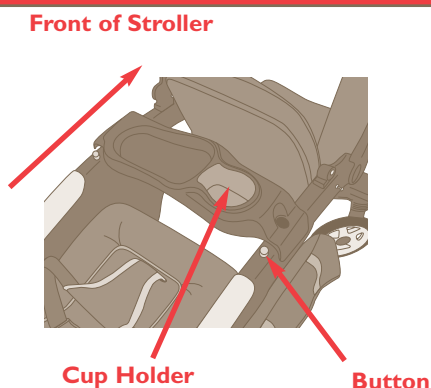

# How to Use Your Stroller

## 1 TO SECURE CHILD IN STROLLER:

### **WARNING!**

**AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. USE THIS HARNESS AT ALL TIMES.**

Lock all foot brakes to keep stroller from rolling.

 
**Step 1.** Place child in stroller.

**Step 2.** Hook shoulder straps to waist belt.

**Step 3.** To secure, snap each side of waist belt into buckle. (Figure A).

To release, press tabs and pull apart.

**Step 4.** For proper fit, adjust shoulder straps and waist band as shown. (Figure B).

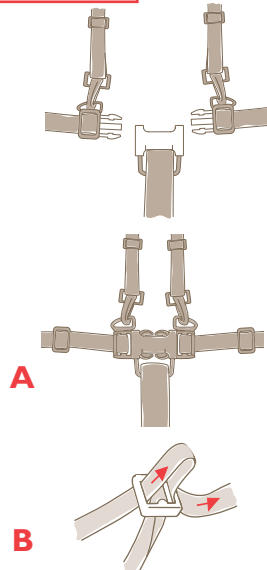

Adjust restraint system harness


## 2 TO RECLINE SEAT:
 
### **WARNING:**

- CHILD MAY SLIP INTO LEG OPENINGS AND STRANGLE. NEVER USE IN RECLINED CARRIAGE POSITION UNLESS BOOT IS RAISED AND BOOT IS SECURED.
- TO AVOID FINGER ENTRAPMENT OR PINCHING, DO NOT ADJUST THE SEAT BACK WHILE CHILD IS IN THE STROLLER.
- TO AVOID HEAD ENTRAPMENT, ALWAYS FASTEN CANOPY TO SEAT BACK WHEN USING REAR SEAT IN RECLINED POSITION.


### Rear Seat Recline

**Step 1.** Lift reclining levers on both sides of stroller to recline seat back.

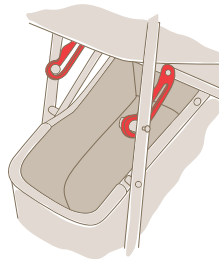


### Front Seat Recline

 **Step 1.** To recline seat, loosen belt.

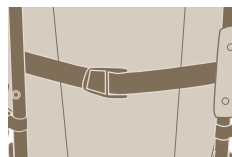

 **Step 2.** To raise seat back, tighten belt.

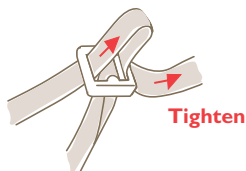


### 3 TO CLOSE OFF REAR LEG OPENING WITH BOOT:




## WARNING:

CHILD MAY SLIP INTO LEG OPENINGS AND STRANGLE. NEVER USE IN RECLINED CARRIAGE POSITION UNLESS BOOT IS RAISED AND BOOT IS SECURED.

 **Step 1.** Adjust rear tray to back position so that buttons are engaged. (Figure A).

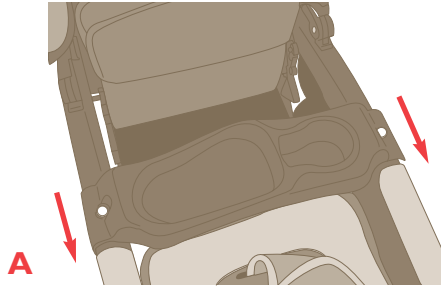

 **Step 2.** Beneath rear seat, pull boot up to tray.

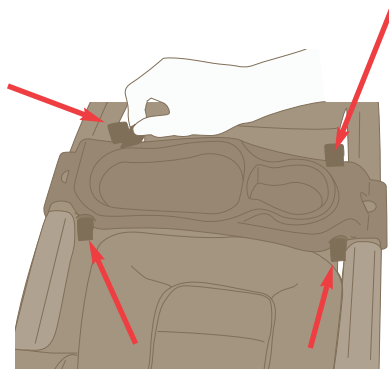


**Step 3.** Feed Velcro straps through all 4 slots on front & back of tray. Secure Velcro. (Figure B).

### 4 FRONT WHEEL SWIVEL OPTION (SELECT MODELS):

 **Step 1.** Rotate latches on front wheels up to unlock and allow the wheels to swivel.



**Step 2.** Rotate latches down to lock front wheels in the straight position.

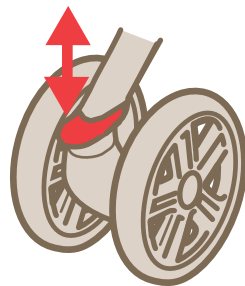

**NOTE:** On rough surfaces, lock the wheels to keep them straight. On smooth surfaces, unlock to allow the wheels to swivel.


## 5 TO ACCESS BASKET:

  Basket can be accessed either by the side zipper or by unclipping the clip from the back of the basket.

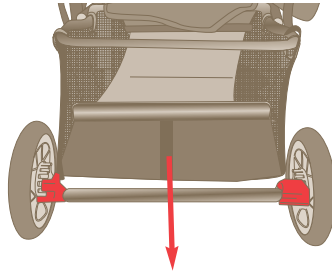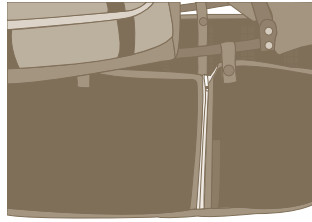

## 6 TO ADJUST CANOPIES:

 
Open and close canopies as shown.

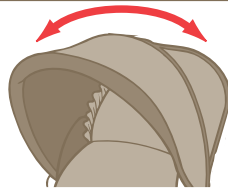

## 7 TO OPERATE BRAKES:

**Step 1.** Push levers on both wheel assemblies down to lock.

 **Step 2.** Pull levers up to unlock.

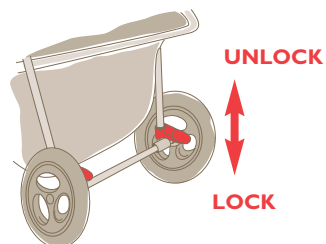




## 8 TO FOLD STROLLER:

**Step 1.** Pull stroller backwards to straighten front wheels (unlock swivel wheels).

**Step 2.** Lock brakes.

**Step 3.** Push front canopy forward until it rests on front tray. Close rear canopy. (Figure 3)

 **Step 4.** **4a** Push and hold red button to left with thumb to unlock position. **4b** then squeeze large red lever on handle to fold stroller.

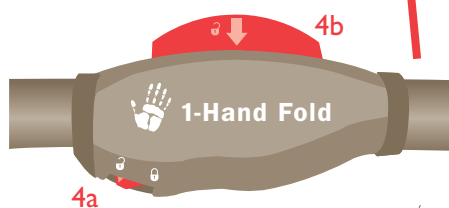


**Step 5.** Push handle forward.

**Step 6.** Fold stroller.

**Step 7.** Hook the folding latch.

 
**NOTE:** Fold stroller so wheels straddle frame. **DO NOT** allow wheels to press against frame as this may damage tires.

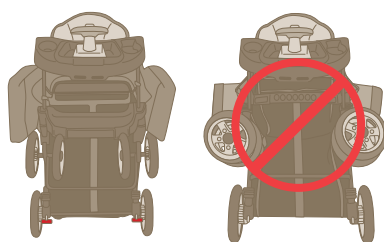

## CARE / MAINTENANCE

- Always store your Jeep® baby product in a clean dry place. If exposed to damp conditions, leave fully opened and in a warm environment. Dry off with a soft cloth. Storing a damp stroller will encourage mildew to form.
- Do not leave in the boot of a car.
- Avoid exposure to salt water/seat water, as this may encourage the formation of rust. If stroller is used in this environment, completely clean your stroller afterwards to remove sand and salt from mechanisms and wheel assemblies.
- Should parts of your stroller become stiff, squeak or difficult to operate ensure dirt is not the cause. To keep your stroller running smoothly and avoid squeaking wheels use a silicone, graphite based lubricant or 3-in-1 oil (like motor oil). It is important to get the lubricant into the axle and the wheel assembly. DO NOT over lubricate or use WD-40, as this will encourage the accumulation of dirt.
- Clean metal parts with a damp cloth and wipe dry.
- Clean woven fabric or vinyl parts with mild soap and water solution.
- When storing stroller, never stack other items on top of it; this may damage the stroller.
- Periodically check for worn parts, loose screws, torn materials or stitching.
- Replace any damaged parts immediately.

 \*Teflon® is a registered trademark of DuPont for its brand of fabric protector.

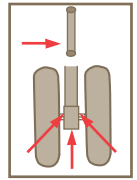

## LIMITED WARRANTY

Jeep® is a registered trademark of DaimlerChrysler Corporation, and is used under license by Kolcraft®. © DaimlerChrysler Corporation 2003

KOLCRAFT® warrants this product to be free of defects in materials and workmanship, as follows: For a period of ONE YEAR from the date of purchase, KOLCRAFT will repair or replace, at its option, the defective product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. KOLCRAFT SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THIS WARRANTY.

Some regions do not allow the exclusion or limitation of warranties set forth above, so the above exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights. We sincerely thank you for your purchase of this KOLCRAFT product.

For further information visit [www.kolcraft.com](http://www.kolcraft.com)

## SERVICE HOTLINE

Attention to manufacturing detail and strict quality control ensures that this product meets the highest standards set by Kolcraft Enterprises, Inc. If you encounter any problems or need assistance please call our Customer Service /Warranty Department.

### Please direct any comments or questions to:

Born with Style  
PO Box 789  
Gladesville NSW 1675  
Australia  
Phone: 1300 885 337 or 02 9816 3837  
Email: [warranty@bornwithstyle.com.au](mailto:warranty@bornwithstyle.com.au)

Replacement parts provided by local distributor due to accidental damage or misuse to product will be charged accordingly.

To contact the manufacturer directly:

Kolcraft® Enterprises, Inc. Consumer Service Department  
10832 NC Highway 211 East  
Aberdeen, NC 28315  
1-800-453-7673 in U.S. & Canada, 1-910-944-9345 outside U.S. & Canada  
Eastern Standard Time, 8 am-5 pm

## PERSONAL RECORD CARD

Once in a while, we are less than perfect and one of our products reaches a customer with a problem. In most cases, we can solve your problem with replacement parts. Please contact us before you return one of our products to the store. Once a product is returned, it cannot be resold. The materials and the energy used to make it are wasted.

Please fill in the information in the space provided and attach a copy of your purchase receipt. You will need this information to obtain warranty service.

You can find the Model Number and Date of Manufacture on a sticker located on the rear stroller leg.

MODEL NUMBER: \_\_\_\_\_

DATE OF MANUFACTURE: \_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_