

phil&teds™

your smart buggy
survival guide

tow & 

from the phil&teds

adaptability range

nitty & gritty



welcome to the
delightful & adaptable
world of phil&teds

our boxes make a great distraction
for your kids while you get into the
nitty & gritty; the plastic bag,
however, does not!

Please read the **WARNINGS** in this book
carefully and help us continue improving
our adaptability range by returning your
warranty form.

When you take your **smart** buggy out
of its wrapping unclip the waist band
and unzip the base compartment.




bits & bobs

Open your **smart** buggy and check the
following bits and bobs are there.

1. 2 x wheel caps
2. 2 x spring clips
3. 2 x washers
4. 2 x wheels




lever locks

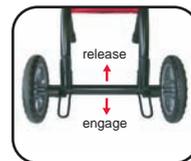

brakes

Always use brakes
when buggy is stationary.

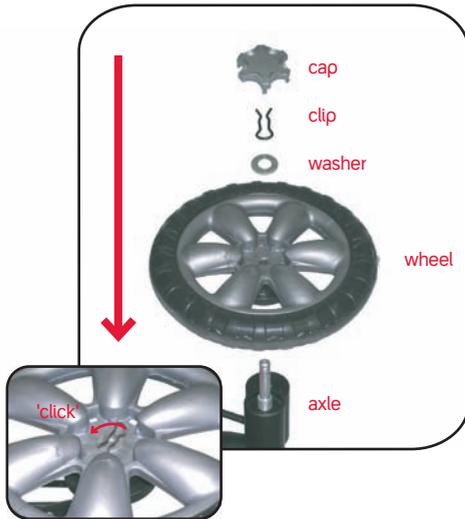

wheely important stuff



1. Place a wheel on an axle.
2. Place a washer on the axle.
3. Push a spring clip over the end of the axle and into the groove.
4. Fit a wheel cap into the wheel by aligning the cap with the grooves.
5. Repeat for the second wheel.

stow to go

The **smart** buggy folds into three different positions for different purposes

1. Stow

Compact for easy storage.



2. Tow

Great for climbing stairs.



3. Go

Only place your child in when buggy is in this position.





stow to tow & back again

Your **smart** buggy will arrive in the **stow** position.

1. Push the levers (NB: they open in opposite directions).
2. Pull the handle up, moving the buggy into the **tow** position.
3. To return the buggy to the **stow** position, push the lever locks in opposite directions and allow the buggy to collapse.

IMPORTANT make sure your child is clear of the buggy before altering it from the stow to tow position.



tow to go & back again

For this operation use only your left hand lever lock.

1. Pull the left lever lock backwards while pushing the buggy forward, allowing the wheels to move away from the front legs.
2. Release the lever lock, ensuring both lever locks have clicked into place and returned to their original positions.
3. To return to **tow** mode pull the left lever lock backwards while pulling upwards on the handle and pressing down with your foot on the rear cross bar.



wheeling

To push the buggy, pull the handle towards you and hold at a comfortable height with the wheels taking all the weight. **IMPORTANT** do not let go of the handle as the buggy will halt abruptly.



handling

To adjust the handle to a more suitable height, unscrew the plastic grips at the top of the frame and pull the handle outwards. Retighten the grips securely.



hooding up


Pull the rim of the hood out and attach the snaps 'a' on both sides (child's play).



insert baby

Make sure the buggy is in **go** mode and is on stable ground. Undo the harness and place your child in (feet first not head!) Secure the harness firmly but not tightly.

cuts & bruises

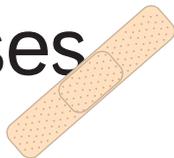

fabric care and cleaning

The fabric is backed with a water-resistant coating. Do not use detergents or bleach to clean any part of the fabric. Simply brush off dirt using a light bristled brush. (Kids: don't use dad's shaving brush, he won't thank you...)

More intensive cleaning can be done by hand, in warm water, using a mild natural soap. Rinse out soap and air dry in a well ventilated space.

The fabric is fade resistant but not fade proof. Much like babies, exposure to direct sunlight can cause sun damage. (Prolonged exposure may leave the fabric as faded as grandad's undies...)

frame care and cleaning

We recommend that dirt is brushed off the frame and wheels regularly. Clean with a non-abrasive household cleaner and soft cloth. Wash off sand and salt after beach activity and dry frame if wet.

rubber covers & grip

Take care to avoid damage to the foam rubber. The foam rubber is not under warranty.

routine inspection and maintenance

Moving parts may need periodic lubrication. Inspect essential components for fraying (esp. webbing straps and safety harness); wear (esp. zips and plastic or moving parts); and security and freedom of movement (esp. wheels and nuts).

Much like knees, excessive wear can reduce the effectiveness of components.



T2

tott

adapt & survive!

rights & remedies

our warranty and service policy

We want to give owners confidence in the quality of our products. They are warranted against defects in materials and workmanship for one year from the date of purchase.

If the product has a manufacturing fault we will repair it free of charge. If it's not practical to repair it we will, at our discretion, replace the part in question*. If the product fails due to wear and tear, accident, neglect or negligence, or is outside the one year warranty, we will happily repair it for a reasonable charge.

details of warranty

Who is covered? The original purchaser buying new product from an authorised dealer. Proof of purchase is required.

What is covered? Workmanship or materials that are deemed faulty, providing the **smart** buggy has, at all times, been used in normal conditions and been properly maintained in accordance with the instructions.

What is not covered? Second hand product. Modified product. Poorly maintained product. Normal wear, fading and fabric cuts.

Improper use (including but not limited to): abnormal use; not following instructions; child left unattended; safety harness not used; excessive load; transport damage i.e. airline or cargo damage.

Customer costs within warranty. The customer is responsible for any inwards freight charge to return the product to the manufacturer, or its representative, for warranty and or service.

Customer costs outside of warranty. Where proof of purchase is not provided or the product is outside of the one year period, the manufacturer (or agent) reserves the right to charge a service fee and/or charge for parts replaced/repared. A return freight charge may apply.

Exclusions. Any consequential loss or damage to any person or property resulting directly or indirectly from use of the product.

Who do I contact? Please discuss any warranty or service queries with your store of purchase. You will be required to show proof of purchase. They will inform you of the next step.

* The consumer may have additional rights in some countries



return & relax warranty form

phil&teds

Name

Address

Phone

Email

Just a few extra details to help us
adapt & survive!

Your age?

under 25 25-34 35-40 40+

Number of children

1 2 3 3+ soon!

Their ages

How did you hear about us?

Which most excellent product did you buy?

- | | | |
|-------------------------------------|------------------------------|----------------------------|
| <input type="radio"/> e3 twin | <input type="radio"/> bebe | <input type="radio"/> e3 |
| <input type="radio"/> smartbuggy | <input type="radio"/> metro | <input type="radio"/> T2 |
| <input type="radio"/> accessories | <input type="radio"/> metoo | <input type="radio"/> tott |
| <input type="radio"/> e3 double kit | <input type="radio"/> escape | <input type="radio"/> pepe |

Date of purchase / /

Rate from 1-10 how likely you would be to
recommend this product to someone else?

1 2 3 4 5 6 7 8 9 10

Why?

Any general suggestions?

Can we inform you of new products
and specials? yes no

www.philandteds.com

affix
stamp
here

phil&teds

102-112 daniell street
newtown
wellington 6002
new zealand

warnings

Ensure you read carefully all the safety information and warning notices. This is extremely important. Safe operation and use depends on carefully following these instructions.

WARNING: Never leave children unattended. Take extra care with any child asleep in the buggy.

WARNING: Ensure that all locking devices are engaged before use.

WARNING: Any load attached to the handle affects the stability of the vehicle. Do not hang luggage or carry extra children on the buggy. Do not allow a child to stand on the seat. Do not carry weight over the limit recommended in the instructions. Do not place more than 3kg/7lbs in the parcel tray. This may damage the **smart** buggy.

WARNING: Avoid serious injury from falling or sliding out. Always use the safety harness. Always secure all safety harness straps. Ensure the safety harness is correctly fitted, adjusted and securing the child firmly. Make sure children are clear before folding, erecting or adjusting the buggy.

WARNING: Apply both brakes when parking the buggy. Apply the brakes when loading or unloading child.

WARNING: The buggy is intended for a child up to a maximum weight of 15kg.

WARNING: Do not modify the buggy or use accessories not designed for it. They may be unsafe.

WARNING: Care should be taken if the buggy is used on stairs or escalators.

WARNING: The buggy should not be used near an exposed flame.

adapt & survive!™

head office +64 (4) 380 0833
fax +64 (4) 380 0137
address 102-112 daniell street
wellington new zealand
visit www.philandteds.com

Phil & teds most excellent buggy company ltd. (phil & teds), the phil & teds logo, the shapes and designs of the products and the adapt & survive logo are global trademarks of Phil & Teds New Zealand Limited. Phil & Teds New Zealand Limited is the owner of all past, present and future intellectual property used and developed in relation to its business and reserves all rights in relation to its intellectual property and the presentation of it. © Phil & teds most excellent buggy company ltd.