



Warranty

Each Steelcraft unit is thoroughly inspected in our Quality Assurance department prior to delivery. In the unlikely case that you find any material or workmanship that affects the units normal operation, we will repair the unit free of charge within 12 months of purchase. You are required to present your receipt as proof of purchase. For all concerns with your product please contact our Customer Service team.

CUSTOMER SERVICE
1300 303 330 - Australia
0508 688 822 - New Zealand

Please read all the information carefully before using this product. This warranty does not apply to failure due to improper care, or normal wear and tear caused by product use. We reserve the right to inspect the unit. You may be charged for repairs if the product has been damaged accidentally.

Distributed by:

AUSTRALIA
BRITAX CHILDCARE PTY.LTD.
A Britax International company.
(Incorporated in Victoria)
A.B.N. 55 006 773 600
99 Derby Road, Sunshine,
Victoria 3020, Australia
Phone: (03) 9288 7288
Fax: (03) 9311 5798

NEW ZEALAND
BRITAX CHILDCARE NZ. Limited.
A Britax International company.
101 Diana Drive, Glenfield,
Auckland 9, New Zealand.
Phone: (09) 443 0102
Fax: (09) 443 0120

Due to our continuing program of development, Britax reserves the right to alter the specifications, colour or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty. Ltd-Australia.
The Britax trademark is the property of Britax Excelsior Limited - UK.
Visit the Britax website at: <http://www.britax.com.au> or email us at custserv@britax.com.au

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

12/06 ©2006 Copyright Britax Childcare Pty. Ltd. Australia.

INSTRUCTION MANUAL



TWIN three wheel stroller

KEEP INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE



READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THE STROLLER. ALWAYS FOLLOW THE INSTRUCTIONS. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

WARNINGS

- Do not leave children unattended.
- Follow the manufacturer's instructions.
- Ensure your child is secured with a correctly adjusted safety harness.
- Put on all the brakes whenever you park the stroller.
- The weight of the child using this product should not exceed 17kg in each seating position.
- Do not place more than 4kg in the basket, or 1kg in the canopy pocket (if supplied).
- Do not carry extra children or bags on this stroller.
- Do not allow children to stand on the seat.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- Make sure children are clear of any moving parts if you adjust the stroller, otherwise they may be injured.
- Do not use accessories other than those supplied and approved by Britax.
- Check that all frame locks are engaged before placing a child in the stroller.
- Always raise the leg support to its highest position when transporting a baby. This will reduce the risk of the baby falling out through the front of the stroller.
- Remove the child from the stroller before going up or down stairs and escalators.
- To prevent the risk of the stroller catching fire, do not park it near a radiator, an open fire or a barbecue.
- Do not run with this product.
- When walking at brisk pace always lock front swivel wheel.
- Always lock front swivel wheel when on rough surfaces. This will help eliminate wheel wobble.
- Do not lift the stroller by the bumper bar. It may disengage.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

RECOMMENDATION

Some strollers have backrests adjustable between an upright and reclined position. The upright positions are not suitable for use with children less than six months old. As a guide, the lowest recline position should be used to transport babies, the backrest can be adjusted to a more upright position as the child grows older and is able to support its head without assistance.

SAFETY WARNING

The sun is very strong. **DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.** The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

CARE AND MAINTENANCE

Regularly inspect and maintain your stroller to ensure the freedom of movement of the locking devices and security of components. To prolong the life of your nursery product keep it clean and do not leave it in the direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water with a household soap or a mild detergent. Allow it to dry fully, preferably away from the direct sunlight.

DO NOT DRY CLEAN, OR USE BLEACH.

Do not machine wash, tumble or spin dry, unless the care labelling on the product permits these methods.

Non removable fabric covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away. In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.

If the wheels squeak - use a silicon based spray or light oil ensuring it penetrates the wheel and axle assembly.

When using your stroller at the beach - completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assemblies.

If there are compression marks on the tyres - use a domestic hair dryer to gently warm the tyre and the compression marks should slowly disappear. **(DO NOT OVERHEAT).**

Always check parts regularly for tightness of screws, nuts and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Britax.

10. TO ADJUST THE LEG SUPPORT

- A Raise or lower the leg support by lifting the release latches located on both sides of the leg support.




11. TO FIT THE BOOTCOVER (where supplied)

- A Place the bootcover over the leg support and fit the lower straps around the frame.
- B Attach both the right and left hand attachments located at the top of the bootcover to the canopy support bar.



12. TO FOLD THE STROLLER

- A Fold the canopy back and lower the backrest to the fully reclined position (1). Apply the brakes, and unlock the front wheel.
- B Stand behind the stroller and pull both frame lock actuators (2). Gently press down on the handle allowing the stroller to fold (3) until the chassis locks into a fully folded position. Apply the frame lock catch (4).

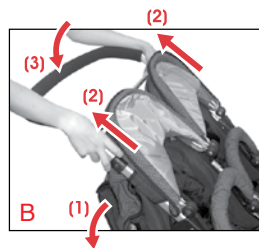




1. TO INSTALL REAR WHEEL ASSEMBLY

- A After removing from carton, release the frame lock catch and open the stroller.
- B To attach the rear wheels hold down the wheel lock button and push the rear wheel into the axle of the assembly. Release the button and ensure the wheel is attached correctly by trying to pull it out.
- C Lower the rear wheel assembly onto the rear legs of the chassis.
- D Insert the two plastic locking clips into rear legs of the chassis and check the assembly is correctly fitted by trying to pull it out.
- E The rear wheels and wheel assembly can be removed for more compact storage. Do this by squeezing the fingers on the plastic locking clips and removing them from the legs, allowing the assembly to be lifted off the legs. To remove the rear wheels push the wheel lock button and pull the wheel off the axle.

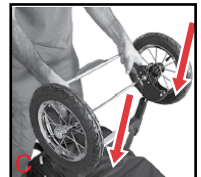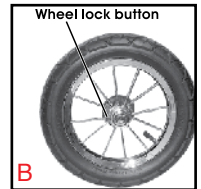

2. TO INSTALL THE FRONT WHEEL


- A Remove the plastic protector (where fitted) from the front forks.
- B Push the front wheel axle fully into the wheel forks.
- C Place the securing washer on both sides, ensure the tabs in the washers are located into the circular holes just above.
- D With the Lock Lever unlocked, tighten the front wheel axle by turning the quick release hub in a clockwise rotation. Then flip the lock lever to the lock position.

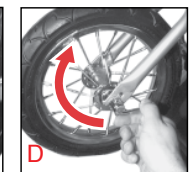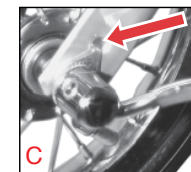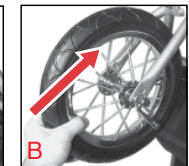

NOTE: The Pneumatic Front and Rear Tyres can be inflated with a bicycle pump or at a garage air pump and they have a maximum inflation pressure of 2.4 bar (35 p.s.i)


3. TO OPEN THE STROLLER

- A Lay the chassis down flat with the wheels facing down and release the frame lock catch.
- B Grasp the handle and lift upwards allowing the chassis to extend and the frame lock to click into fully open position.
- C Check the Stroller is ready for use by pushing down on the handle, the Stroller should not collapse.

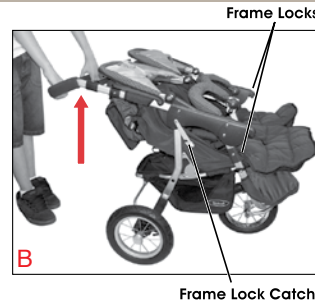

4. TO LOCK/UNLOCK THE FRONT SWIVEL


- A The front wheel swivels to provide greater mobility. To unlock, rotate the knob clockwise until the rivet in the knob faces forward.
- B To lock the swivel rotate the knob clockwise half a turn and move the fork until it locks into position.

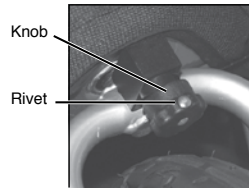

5. TO USE THE FOOT BRAKES


- A To use the foot brake, push lever down to lock the wheels.
- B Lift brake lever up to release brake on the wheels.

NOTE: Always apply the brakes whenever you park the stroller.

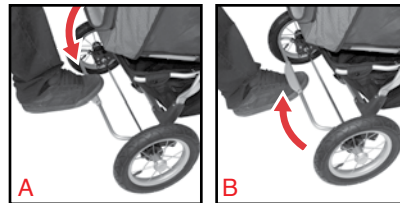

6. TO ADJUST THE BACKREST ANGLE


- A To fully recline the backrest squeeze the adjusting bar up and lower the backrest down.
- B To raise the backrest to the fully upright position, hold the fabric on the side of the seat clear and lift the backrest up until it locks into place.
- C Ensure the trim pocket (1) at the top of the backrest is always looped over the frame.

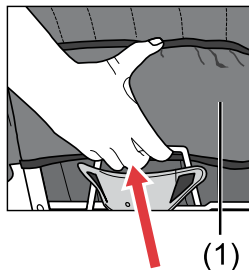

7. TO SECURE YOUR CHILD IN THE HARNESS

WARNING: Use this harness at all times.


A five-point harness is provided to restrain your child. To secure the child in the harness, push tongues (A) and (B) into the buckle housing (C) until the buckle tongues snap into position. Carefully adjust the harness by pulling the slider (D) until the desired fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child. To release the buckle, squeeze the top and bottom tongues on each side.

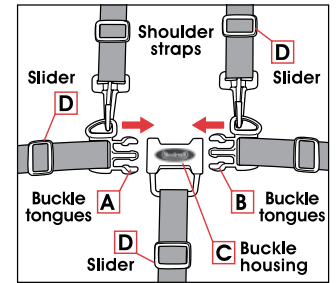

8. TO USE THE BUMPER BAR

- A The bumper bar has locating slots on both ends. Rotate these slots until they are clear of the plastic moulding and click into position.
- B Align the slots in the bumper bar with the tongues on the inside of the armrest frame and push the bumper bar onto the tongues.
- C Rotate the bumper bar forward into position. Check the bumper bar is securely in place by pulling on it.
- D To remove bumper bar rotate until fully upright and pull out of tongues.

WARNING: Do not lift the stroller by the bumper bar. It may disengage.

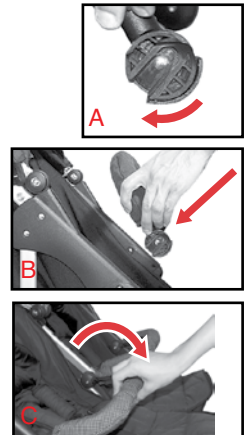

9. TO USE THE CANOPY

- A Fit canopy hood bows to the brackets on each side of the stroller.
- B Pull canopy forward.
- C To open the canopy window pull the flap away from the canopy. Use the fastener, to roll up and fix the window cover.
- D The canopy can be opened by rotating the canopy backwards.

