



Warranty

Each Steelcraft unit is thoroughly inspected in our Quality Assurance department prior to delivery. In the unlikely case that you find any material or workmanship that affects the units normal operation, we will repair the unit free of charge within 12 months of purchase. You are required to present your receipt as proof of purchase. For all concerns with your product please contact our Customer Service team.

CUSTOMER SERVICE

1300 303 330 - Australia

0508 688 822 - New Zealand

Please read all the information carefully before using this product. This warranty does not apply to failure due to improper care, or normal wear and tear caused by product use. We reserve the right to inspect the unit. You may be charged for repairs if the product has been damaged accidentally.

Distributed by:

AUSTRALIA

BRITAX CHILDCARE PTY.LTD.
A Britax International company.
(Incorporated in Victoria)
A.B.N. 55 006 773 600
99 Derby Road, Sunshine,
Victoria 3020, Australia
Phone: (03) 9288 7288
Fax: (03) 9311 5798

NEW ZEALAND

BRITAX CHILDCARE NZ. Limited.
A Britax International company.
101 Diana Drive, Glenfield,
Auckland 9, New Zealand.
Phone: (09) 443 0102
Fax: (09) 443 0120

Due to our continuing program of development, Britax reserves the right to alter the specifications, colour or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty. Ltd-Australia.
The Britax trademark is the property of Britax Excelsior Limited - UK.
Visit the Britax website at: <http://www.britax.com.au> or email us at custserv@britax.com.au

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

12/06 © 2006 Copyright Britax Childcare Pty. Ltd. Australia.

INSTRUCTION MANUAL



PHOENIX layback stroller

KEEP INSTRUCTIONS FOR FUTURE REFERENCE



READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THE STROLLER. ALWAYS FOLLOW THE INSTRUCTIONS. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

WARNINGS

- Do not leave children unattended.
- Follow the manufacturer's instructions.
- Ensure your child is secured with a correctly adjusted safety harness.
- Do not carry additional children on the stroller.
- Do not allow children to stand on the seat.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- Do not place more than 4kg in the basket, or 1kg in the canopy pocket (if supplied).
- The weight of the child using this product should not exceed 17kg.
- Do not use accessories other than those supplied and approved by Britax.
- When making adjustments to the stroller, ensure that your child's body is clear of any moving parts on the stroller.
- Always apply all of the brakes when parking the stroller.
- Check that all safety locks are engaged before placing a child in the stroller.
- Always raise the leg support to its highest position when transporting a baby. This will reduce the risk of the baby falling out through the front of the stroller.
- Remove the child from the stroller before going up or down stairs and escalators.
- To prevent the risk of the stroller catching fire, do not park it near a radiator, an open fire or a barbecue.
- Do not run while using this product.
- Do not lift the stroller by the bumper bar. It may disengage.
- Always lock the front swivel wheels when on uneven surfaces to minimise wheel wobble.

RECOMMENDATION

Some strollers have backrests adjustable between an upright and reclined position. The upright positions are not suitable for use with children less than six months old. As a guide, the lowest recline position should be used to transport babies, the backrest can be adjusted to a more upright position as the child grows older and is able to support its head without assistance.

SAFETY WARNING

The sun is very strong. **DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.** The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

CARE AND MAINTENANCE

To prolong the life of your nursery product keep it clean and do not leave it in the direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water with a household soap or a mild detergent. Allow it to dry fully, preferably away from the direct sunlight.

HELPFUL HINTS

If the wheels squeak - use a silicon based spray or light oil ensuring it penetrates the wheel and axle assembly.

When using your stroller at the beach - completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly.

If there are compression marks on the tyres - use a domestic hair dryer to gently warm the tyre and the compression marks should slowly disappear. (DO NOT OVERHEAT).

DO NOT DRY CLEAN, OR USE BLEACH.

Do not machine wash, tumble or spin dry, unless the care labeling on the product permits these methods.

Non removable fabric covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.

In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.

Always check parts regularly for tightness of screws, nuts and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Britax.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.




9. TO ATTACH AND USE THE CANOPY

- A Attach the canopy clips to each side of the stroller frame by pushing the clips until they snap into place.
- B Tie down the canopy with the elastic straps on either side.
- C Open the canopy by pulling the front of the canopy forward and push the canopy hinges down on each side to lock it in place.
- D To open the canopy window pull the flap away from the canopy.



10. TO FOLD THE STROLLER

- A Remove the rain cover (if fitted), close the canopy and place the backrest in the fully upright position. Apply the brakes and lock the swivel wheels.
- B Lift the upper hinge lock (at the handles) and the lower hinge lock (at the bottom).
- C Depress and release the secondary lock and push handles forward until the frame is fully folded.
- D Apply the storage latch. A carry handle is supplied for ease of transport when stroller is fully folded.

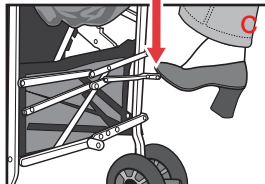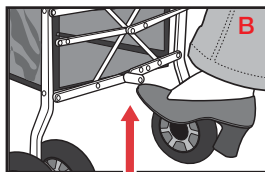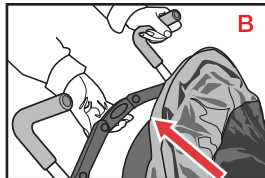

1. TO OPEN THE STROLLER

- A Hold the stroller by the handles and release the storage latch.
- B Hold the handles and allow the front legs to drop towards the floor. Do not try to open the stroller by forcing the handles apart.
- C Push down on the lower locking bar until the frame is fully opened and locked.
- D Check that both the upper hinge and lower locking bar are fully engaged.




2. TO ASSEMBLE THE FRONT SWIVEL WHEELS

- A Take each front swivel wheel assembly and press it onto each of the front legs.
- B Check that each wheel is fully engaged and secured by pulling against it.



3. TO USE THE SWIVEL WHEELS


- A Lift the locking clip up to lock the swivel wheels. The swivel wheels can only be locked when the wheels are in the trailing position (wheels under frame).
- B Push the locking clip down to allow the wheels to swivel.

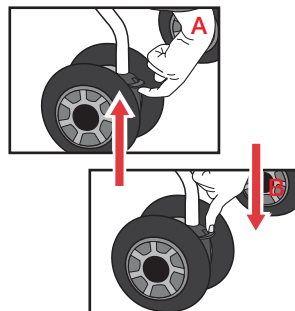

NOTE: Always lock the swivel wheels when using the stroller on rough surfaces it will minimize wheel wobble.

4. TO USE THE BRAKES

- A Push down on each brake lever to lock the brakes.
- B Lift each brake lever up to release the brakes.

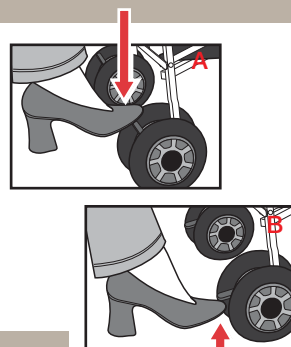


ALWAYS APPLY BOTH BRAKES WHEN YOU PARK THE STROLLER.

5. TO SECURE YOUR CHILD IN THE HARNESS


WARNING: Use this harness at all times.

A five-point harness is provided to restrain your child. To secure the child in the harness, push buckle (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the slider (D) until the desired fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child. To release the buckle, squeeze the top and bottom prongs.

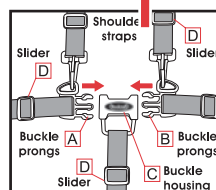

6. TO FIT THE RAINCOVER

- A Place the rain cover over the stroller canopy. Attach both the rain cover clips to the frame.
- B Apply hook and eye Velcro on rear back flap to side pieces.

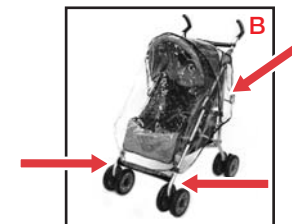


7. TO ADJUST THE LEG SUPPORT

- A Lower the leg support by pressing up the release latches located underneath on both sides of the leg support. Then push the leg support down.
- B Raise the leg support by lifting it until the release latches lock into place.



8. TO ADJUST THE BACKREST

- A Squeeze both the right hand and left hand latches fully and pull them back towards the rear of the stroller to the desired layback position.
- B Lift the backrest to select a more upright seating position.

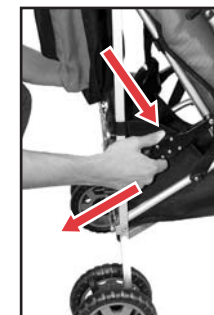

DO NOT ADJUST THE BACKREST WHILE YOUR CHILD IS IN THE STROLLER.