



# Warranty

Each Steelcraft unit is thoroughly inspected in our Quality Assurance department prior to delivery. In the unlikely case that you find any faulty material or workmanship that affects the units normal operation, we will repair the unit free of charge within 12 months of purchase. You are required to present your receipt as proof of purchase. For all concerns with your product please contact our Customer Service team.

### CUSTOMER SERVICE

1300 303 330 - Australia

0508 688 822 - New Zealand

Please read all the information carefully before using this product. This warranty does not apply to failure due to improper care, or normal wear and tear caused by product use. We reserve the right to inspect the unit. You may be charged for repairs if the product has been damaged accidentally.

#### Distributed by:

##### AUSTRALIA

BRITAX CHILDCARE PTY.LTD.  
A Britax International company.  
(Incorporated in Victoria)  
A.B.N. 55 006 773 600  
99 Derby Road, Sunshine,  
Victoria 3020, Australia  
Phone: (03) 9288 7288  
Fax: (03) 9311 5798

##### NEW ZEALAND

BRITAX CHILDCARE NZ. Limited.  
A Britax International company.  
101 Diana Drive, Glenfield,  
Auckland 9, New Zealand.  
Phone: (09) 443 0102  
Fax: (09) 443 0120

Due to our continuing program of development, Britax reserves the right to alter the specifications, colour or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty. Ltd-Australia.  
The Britax trademark is the property of Britax Excelsior Limited - UK.  
Visit the Britax website at: <http://www.britax.com.au> or email us at [custserv@britax.com.au](mailto:custserv@britax.com.au)

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.  
12/06 ©2006 Copyright Britax Childcare Pty. Ltd. Australia.

# INSTRUCTION MANUAL

# STRIDER 4 Stroller



KEEP INSTRUCTIONS FOR FUTURE REFERENCE



## WARNINGS

**READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THE STROLLER. ALWAYS FOLLOW THE INSTRUCTIONS. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.**

- Check that all safety locks are engaged before placing a child in the stroller.
- Ensure your child is secured with a correctly adjusted safety harness.
- Do not leave children unattended.
- Always apply the brakes when parking the stroller.
- Never let go of the stroller when parked on an incline because it may slide.
- When making adjustments to the stroller, ensure that your child's body is clear of any moving parts, otherwise they may be injured.
- Remove child from the stroller before going up or down stairs or escalators.
- Remove your child from the stroller seat before changing the seat unit direction.
- Do not lift the stroller by the armrest bar because it may disengage.
- Do not carry additional children on the stroller.
- Do not allow children to stand on the seat.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- Do not place more than 4kgs in the basket, 1kg in the seat backrest pocket, and 1kg in the bassinet pocket.
- To prevent the risk of the stroller catching fire, do not park it near an exposed heat source such as a radiator, open fire, barbecue, etc.
- It may be unsafe to use accessories other than those tested and approved by Britax.
- Remove bassinet from the stroller frame before folding stroller.
- The weight of the child using this product should not exceed 17kgs for the stroller and 9kg for the bassinet.

### NOTE:

- The upright positions are not suitable for use with children less than six months old. The lowest recline position should be used for babies, and then the backrest can be adjusted to a more upright position as the child grows older and is able to support its head without assistance.
- Always lock the front swivel wheels when on uneven surfaces to minimize wheel wobble.
- The canopy will not give your child total protection from the harmful rays of the sun.


THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

## NOTES

- To prolong the life of your nursery product keep it clean and do not leave it in the direct sunlight for extended periods of time.
- Removable fabric covers and trims may be hand washed using warm water with only a mild soap or a mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using warm water with a damp sponge with only a mild soap or a mild detergent.
- When using your stroller at the beach, completely clean all the parts directly afterwards to remove the sand and salt especially from the mechanisms and wheel assemblies.
- Do not fold or store this product if it is damp or wet to avoid mould or mildew occurring. Always store this product in a well ventilated area.
- If the wheels or suspension squeak, use a silicon based spray ensuring it penetrates all of the wheel and axle or suspension assembly parts.
- If there are compression marks on the tyres, use a domestic hair dryer to gently warm the tyre and the compression marks should slowly disappear. (Do Not Overheat).
- Check parts regularly for tightness of screws, nuts and other fasteners, and tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories tested and approved by Britax.

## PARTS LIST

- A. 1 x Stroller Frame
- B. 1 x Seat unit
- C. 1 x Canopy
- D. 1 x Armrest Bar
- E. 2 x Front Wheel Assembly
- F. 2 x Rear Wheels Assembly
- G. Raincover

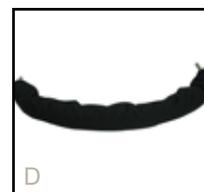

# ASSEMBLY/USE

## 1. STROLLER FRAME OPENING


- A. Release frame lock.
- B. Grasp handle and lift upward to expand frame until left and right sides click into position

Note: Ensure that both sides of the frame are locked by pushing downward on the handle.




## 2. REAR WHEEL FITTING AND REMOVAL

- A. Push each rear wheel into the frame until they lock into position. Ensure both rear wheels are locked by trying to pull them off.
- B. To release press and hold the release lever before pulling the wheel assembly off.

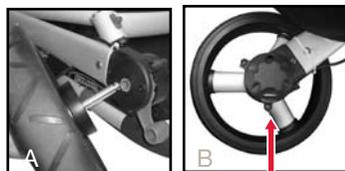


## 3. FRONT WHEEL FITTING AND REMOVAL

- A. Take front wheel assembly push into shaft until it locks. Ensure both front wheel sets are locked by trying to pull them off.
- B. To remove the wheel assembly turn top "unlock" knob to the left and pull off the frame.

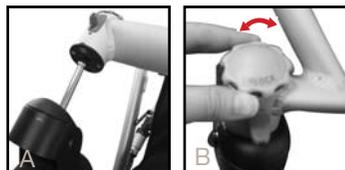

## 4. SWIVEL LOCKS

- A. To lock the front swivel wheels, press down both levers to locked position. The swivel will lock automatically when wheels turn to straight forward position.
- B. To unlock raise both levers up.

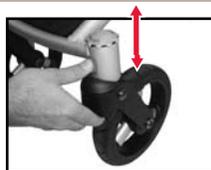

## 15. BASSINET ASSEMBLY, FITTING & REMOVAL


**WARNING:** Always remove your child from the bassinet before fitting or removing from stroller.

- A. To assemble bassinet, extend the bassinet frame support rods by slowly sliding centre of each bar outward until they lock under all 4 clips. Push down lightly on the top edges of the bassinet to check that they are locked in place.
- B. Fit liner and pad into bassinet.
- C. Open canopy by pressing and holding each button on outside of canopy pivot joint before tilting carry handle bar to vertical position
- D. To fit bassinet to stroller refer to seat installation in section 5.
- E. To remove bassinet from stroller unlock by pushing down and holding the second lock spring at centre of bottom edge of canopy. Continue to hold the spring down before firmly lifting up and unlocking main lever.
- F. Once released lift the bassinet straight up off the stroller.

Note: The frame will not fold with bassinet installed.

Note: D-rings are installed in the base of the bassinet for optional baby harness installation. Baby harness is not supplied but can be purchased separately. Refer to instruction included with baby harness for correct fitting.

Note: A body band is also installed in the base of the bassinet for optional use. To use the body band, remove the mattress, open the body band, and then place the mattress back into the bassinet. When not in use store body band under the mattress.

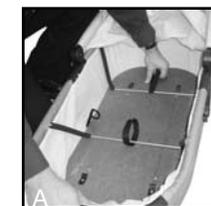

### 13. STROLLER FRAME CLOSING AND FOLDING

Note: Seat unit can be removed to reduce the total folded size if required. Adjusting the leg support will shorten stroller total length when folded if needed. Refer to section 10 for instructions.

- A. Engage rear brakes. Remove all objects from seat back pocket and basket and close the canopy before folding.


With seat unit attached:

- i. If seat unit in child facing away from parent mode, then adjust the backrest to most upright position (1)
- ii. If seat unit in child facing parent mode, then adjust the backrest to most reclined position (3)

- B. With right hand squeeze centre lever and slide handle into frame. At the same time continue to squeeze the centre lever and push the button on left side of the handle.

Continue to slide handle into the frame until it goes no further and the frame is released. Push downward as frame releases to fold.

- C. If frame does not release in the folding direction then repeat step D again.

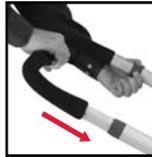

### 14. RAIN COVER

- A. The rain cover may be used with stroller or bassinet.
- B. Open the canopy and unfold rain cover. Fit top end of cover with 3 smaller wedge sections over the canopy. Fit elastic section of front edge of cover over front of leg support or end of bassinet base.





- C. To remove reverse fitting procedure.

### 5. SEAT UNIT FITTING AND REMOVAL

**WARNING:** Always remove your child from the stroller seat before installing or changing direction of the seat.

- A. Take the seat unit face up. Hold it facing forwards or backwards. Line up plastic moulding on sides of seat unit with sockets in the middle of stroller frame, and then push in all the way until locked. Ensure the seat is locked on by trying to pull out.
- B. To remove the seat use your thumbs, press down and hold both seat unit release buttons located beside ends of armrest bar. While holding in buttons grasp the seat frame with your fingers and lift it off the stroller.

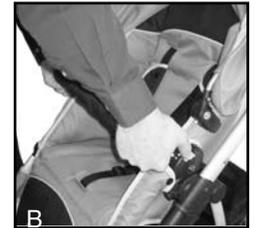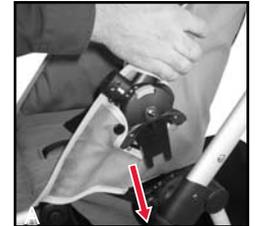

### 6. ARMREST BAR FITTING AND REMOVAL

- A. Take armrest bar, line up locking post ends with holes on the middle of the seat frame, then push armrest bar on.
- C. To remove push in and hold small button at end of the bar to unlock then pull from socket, repeat on other side to fully release.



Note: Do not lift stroller by armrest bar because it may disengage.

## 7. CANOPY

- A. Attach canopy by inserting both tabs into plastic socket in seat frame until they lock into sockets as shown.
- B. To firmly fit canopy attach hook and loop sets around the seat unit.
- C. To adjust open by pulling the canopy forward or close by pushing back. For extra protection pull visor out from under canopy.
- D. To remove canopy push in the base of each tab firmly to unlock and pull up from plastic socket.
- E. To open window pull flap away from canopy and roll up, attach with elastic and toggle.



## 8. BACKREST ADJUSTMENT

- A. To adjust, fully release lever to top position, continue holding lever open and tilt seat to desired position. There are 3 seat positions while seat is facing forward:
  1. Highest position - UPRIGHT
  2. Middle position - SEMI RECLINE
  3. Lowest position - LAYBACK




**Caution:** Ensure that your child's limbs are in centre of seat before adjusting the backrest. Be prepared to support your child's weight when adjusting the backrest.

## 9. HARNESS - ADJUSTMENT

**WARNING: Use this harness at all times.**

A five-point harness is provided to restrain your child. To secure the child in the harness, push buckle (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the slider (D) until the desired fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child. To release the buckle, squeeze the top and bottom prongs.

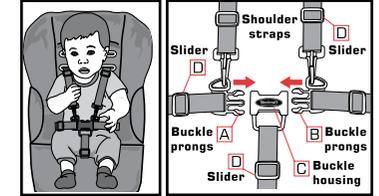

## 10. LEG SUPPORT - ADJUSTMENT

- A. To lower leg support, press in and hold both left and right buttons to unlock them, then tilt leg support downward.
- B. To raise leg support, lift up to desired level.



## 11. BRAKES

- A. To lock rear brakes, press down all the way on brake lever beside right rear wheel until both wheels lock.
- B. To unlock, firmly lift up brake lever all the way until wheels unlock.

Note: Always apply rear brakes when parking stroller.



## 12. HANDLE ADJUSTMENT

- A. There are three handle height positions, squeeze the button at centre of handle to release and adjust handle in either high or low position.

