



Warranty

Each Steelcraft unit is thoroughly inspected in our Quality Assurance department prior to delivery. In the unlikely case that you find any material or workmanship that affects the units normal operation, we will repair the unit free of charge within 12 months of purchase. You are required to present your receipt as proof of purchase. For all concerns with your product please contact our Customer Service team.

CUSTOMER SERVICE
1300 303 330 - Australia
0508 688 822 - New Zealand

Please read all the information carefully before using this product. This warranty does not apply to failure due to improper care, or normal wear and tear caused by product use. We reserve the right to inspect the unit. You may be charged for repairs if the product has been damaged accidentally.

Distributed by:

AUSTRALIA
BRITAX CHILDCARE PTY.LTD.
A Britax International company.
(Incorporated in Victoria)
A.B.N. 55 006 773 600
99 Derby Road, Sunshine,
Victoria 3020, Australia
Phone: (03) 9288 7288
Fax: (03) 9311 5798

NEW ZEALAND
BRITAX CHILDCARE NZ. Limited.
A Britax International company.
101 Diana Drive, Glenfield,
Auckland 9, New Zealand.
Phone: (09) 443 0102
Fax: (09) 443 0120

Due to our continuing program of development, Britax reserves the right to alter the specifications, colour or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty. Ltd-Australia.
The Britax trademark is the property of Britax Excelsior Limited - UK.
Visit the Britax website at: <http://www.britax.com.au> or email us at custserv@britax.com.au

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.
12/06 ©2006 Copyright Britax Childcare Pty. Ltd. Australia.

INSTRUCTION MANUAL



Upright Stroller

KEEP INSTRUCTIONS FOR FUTURE REFERENCE



READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THE STROLLER. ALWAYS FOLLOW THE INSTRUCTIONS. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

WARNINGS

- Never leave your child unattended.
- Follow the manufacturers instructions.
- Ensure your child is secured with a correctly adjusted safety harness.
- Do not carry additional children on the stroller.
- Do not allow children to stand on the seat.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- Do not place more than 4kg in the basket, or 1kg in the canopy pocket. (If supplied).
- The weight of the child using this product should not exceed 17kg.
- Do not use accessories other than those supplied and approved by Britax.
- When making adjustments to the stroller, ensure that your child's body is clear of any moving parts on the stroller.
- Always apply all of the brakes when parking the stroller.
- Check that all safety locks are engaged before placing a child in the stroller.
- Prams or strollers with a backrest which does not recline beyond 130 degrees are not recommended for a child under 6 months old.
- Remove the child from the stroller before going up or down stairs and escalators.
- To prevent the risk of the stroller catching fire, do not park it near a radiator, an open fire or a barbecue.
- Do not run while using this product.

SAFETY WARNING

The sun is very strong. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

CARE AND MAINTENANCE

To prolong the life of your nursery product keep it clean and do not leave it in the direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water with a household soap or a mild detergent. Allow it to dry fully, preferably away from the direct sunlight.

HELPFUL HINTS

If the wheels squeak -use a silicon based spray ensuring it penetrates the wheel and axle assembly.

When using your stroller at the beach - completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assemblies.

If there are compression marks on the tyres - use a domestic hair dryer to gently warm the tyre and the compression marks should slowly disappear. (DO NOT OVERHEAT).

DO NOT DRY CLEAN, OR USE BLEACH.

Do not machine wash, tumble or spin dry, unless the care labelling on the product permits these methods.

Non removable fabric covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.



In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.

Always check parts regularly for tightness of screws, nuts and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Britax.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.




7. TO FOLD THE STROLLER

- A Flip the canopy back to the rear of the stroller. Apply the brakes and lock the swivel wheels.
- B Raise the lower hinge lock.
- C Lift the upper safety lock and push both handles forward until the stroller is fully folded.
- D Apply the side storage latch.

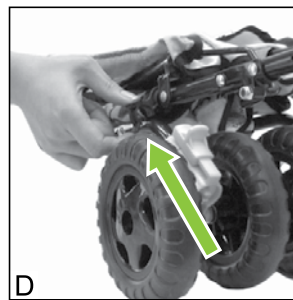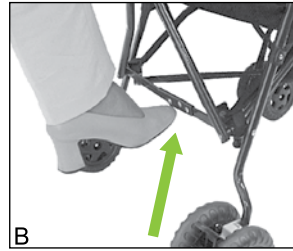



1. TO OPEN THE STROLLER

- A Release the side storage latch.
- B Whilst holding the handles, tilt the stroller back and allow the front frame to drop to the floor gently.
- C Put your foot on the locking hinge (on the back of the stroller) and push it down firmly until it locks into place.

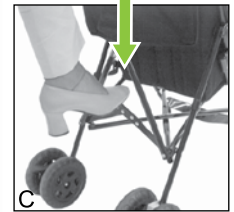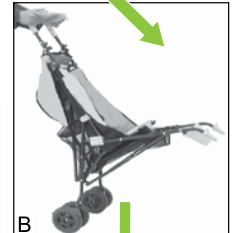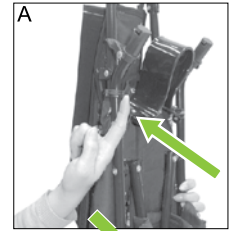

2. TO INSTALL THE FRONT WHEELS

- A Align a swivel wheel assembly with a front leg and push it down firmly.
- B Check to make sure it's securely engaged by pulling against it.
- C Repeat this process for the other swivel wheel.

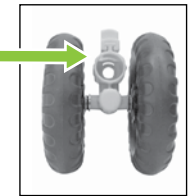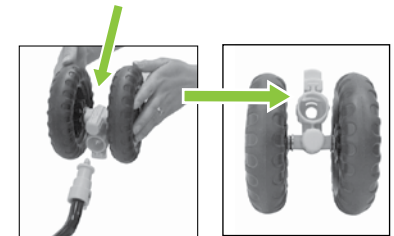


3. TO USE THE BRAKES

A Push down on each brake lever to lock the brakes.

B Lift each brake lever up to release the brakes.

NOTE: ALWAYS APPLY BOTH BRAKES WHENEVER YOU PARK THE STROLLER

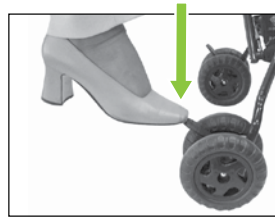


4. TO USE THE SWIVEL WHEELS

A Push down on each brake lever to lock the brakes.

B Lift each brake lever up to release the brakes.


ALWAYS APPLY BOTH BRAKES WHEN YOU PARK THE STROLLER

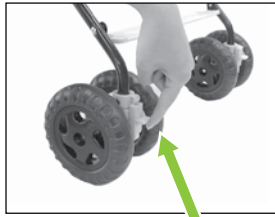

5. TO SECURE YOUR CHILD IN THE HARNESS

WARNING: Use this harness at all times.

A five-point harness is provided to restrain your child. To secure the child in the harness, push buckle (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the slider (D) until the desired fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child. To release the buckle, squeeze the top and bottom prongs.

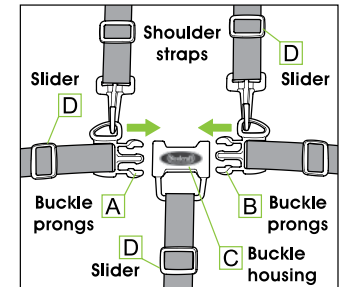

6. TO ADJUST THE CANOPY

A Flip the canopy from the rear of the stroller over to the front, and attach the hook strip on the canopy skirt to the loop strip on the stroller frame.

