

Spare Parts Diagram 105-711_Spare_Parts
2008 Single Terrain 2008



ITEM NO.	PART NUMBER	DESCRIPTION
1	502-895-s-erg	Foam Handle Cover
2	203-720	Anodised Sgl Terrain Handle Assy
5	203-718	Anodised base tube assy RH - Terrain sgl
6	203-719	Anodised base tube assy LH - Terrain sgl
7	203-343	Terrain Sgl RH Suspension Down Tube Assy
8	203-342	Terrain Sg ISuspension Down Tube Assy LH
9	203-585	Terrain seat link wire - sub assy
10	203-355	Seat frame assy - Terrain sgl
11	203-721	Anodised handle bottom tube assy
12	203-584	Terrain tracking tensioner - set
13	203-593	Terrain single rear axle assy
14	309-965	Single Acting Brake Wire (31.07.06)
18	104-105	Wire Basket
19	309-009	Riserplate Pivot Tube (single)
20	503-915	Basket Clip
21	203-880-A	Screen Printed Foot Plate Riser
22	203-695	Secondary Lock LH Sub Assy
23	203-694	Locking slider RH Sub Assy
24	203-765	Anodised single footrest - (mid 2006)
25	504-689	12" Tyre and Tube (Slash Tread)
26	504-021	Break Cog (6 lug)
27	504-442	Q.R. rear wheel assy - STD tyre
28	504-075	12" Tyre & rim assy (STD tread)
29	310-306	Front Axle Bush Tube - PAINTED
30	504-102	Triloc Knob
31	503-917	Single Front Axle Shaft
32	504-937-A	Brake Wire Cover

