

Spare Parts Diagram 105-689-A

2008 Single Urban Frame Assembly



ITEM NO.	PART NUMBER	DESCRIPTION
1	203-855-A	Urban Handle Foam
2	203-855-A	Single Urban Handle Sub Assembly
3	203-808	Handle Adjuster Assembly
4	203-842-A	Urban RH Side Tube Assy
5	203-843-A	Urban LH Side Tube Assy
6	203-844-A	Single Urban Top Cross Brace Sub Assm
7	203-852-C	Single Urban RH Susp Down Tube Sub Assy
8	203-851-C	Single Urban LH Susp Down Tube Sub Assy
9	203-849-A	Single Urban Base Tube Sub Assy
11	203-874-A	Single U-Tube Assy
12	203-845-A	Single Urban Lower Cross Brace Tube Sub Assy
13	504-961	Pivot Tube
14	310-630-A	Single Urban Brake Wire
15	504-542	Swivel Lock Mechanism
16	504-014	Swivel Bush - Nut Cap
17	203-687	Urban Fork Sub Assy (LH)
19	309-009	Riserplate Pivot Tube (single)
20	203-886-A	Quick Release Axle with Starlock Assy
21	203-880-A	Screen Printed Foot Plate Riser
22	203-695	Secondary Lock LH Sub Assy
23	203-694	Locking slider RH Sub Assy
24	504-257-A	Footplate - plastic
25	504-689	12" Tyre and Tube (Slash Tread)
26	504-021	Break Cog (6 Lug)
27	504-442	Q.R. rear wheel assy - STD tyre
28	504-075	12" Tyre & rim assy (STD tread)
29	504-937-A	Brake Wire Cover
30	504-102	Triloc Knob
31	503-982	Front Axle Shaft
32	309-991	Base Pivot Tube Spacer - (sgl - 2004)
33	309-989	Single Urban Base Pivot Tube - (2004)
34	310-619-A	Single Urban Spreader

