

Spare Parts Diagram 105-690-A_Spare_Parts
2008 Double Urban Frame Assembly



ITEM NO.	DESCRIPTION
1	Handle Foam (660)-Ergo-dbl urb
2	Double Urban Adj. Handle Top Sub Assy
3	Handle Adjuster Assembly (MK2)
4	Urban Side Tube Sub Assy RH
5	Urban Side Tube Sub Assy LH
6	Double Urban Top Cross Brace Sub Asm
7	Double Urban RH Susp Down Tube Sub Assy
8	Double Urban LH Susp Down Tube Assy
9	Double Urban Base Tube Sub Assy
10	Double Hammock Support Tube Sub Assy
11	Double Urban U-Tube Assembly
12	Double Urban Lower Cross Brace Sub Assy
13	Double Urban Rear Axle Assy
14	Double Urban Brake Wire
15	Swivel Lock Mechanism
16	Swivel Bush - Nut Cap
17	Urban Fork Sub Assy (LH)
18	Urban Fork Sub Assy (RH)
19	Riserplate Pivot Tube (double)
20	Riserplate & axle clamp
21	Footplate Riser
22	Secondary Lock LH Sub Assy
23	Locking slider RH Sub Assy
24	Anodised Double Footrest Sub Assy
25	12" Tyre and tube (Slash Tread)
26	Brake Cog (6lug)
27	Q.R. rear wheel assy - STD tyre
28	12" Slash tyre & rim assy
29	double sunhood wire
30	Triloc Knob
31	Front Axle Shaft
32	Brake Wire Cover
33	Base Pivot Tube Spacer - (dbl)
34	Double Urban Base Pivot Tube
35	Double Urban Base Spreader

