

Spare Parts Diagram 105-689-A

**2008 Single Urban Frame Assembly**

ITEM NO.	DESCRIPTION
1	Urban Handle Foam
2	Single Urban Handle Sub Assembly
3	Handle Adjuster Assembly
4	Urban RH Side Tube Assy
5	Urban LH Side Tube Assy
6	Single Urban Top Cross Brace Sub Assm
7	Single Urban RH Susp Down Tube Sub Assy
8	Single Urban LH Susp Down Tube Sub Assy
9	Single Urban Base Tube Sub Assy
11	Single U-Tube Assy
12	Single Urban Lower Cross Brace Tube Sub Assy
13	Pivot Tube
14	Single Urban Brake Wire
15	Swivel Lock Mechanism
16	Swivel Bush - Nut Cap
17	Urban Fork Sub Assy (LH)
19	Riserplate Pivot Tube (single)
20	Quick Release Axle with Starlock Assy
21	Screen Printed Foot Plate Riser
22	Secondary Lock LH Sub Assy
23	Locking slider RH Sub Assy
24	Footplate - plastic
25	12" Tyre and Tube (Slash Tread)
26	Break Cog (6 Lug)
27	Q.R. rear wheel assy - STD tyre
28	12" Tyre & rim assy (STD tread)
29	Brake Wire Cover
30	Triloc Knob
31	Front Axle Shaft
32	Base Pivot Tube Spacer - (sgl - 2004)
33	Single Urban Base Pivot Tube - (2004)
34	Single Urban Spreader

