


**TERRAIN**
**URBAN**

# SINGLE CARRYCOT INSTRUCTIONS

**IMPORTANT, KEEP FOR FUTURE REFERENCE**

These instructions are for the Single Carrycot, which fits the following model strollers:

Terrain Single - T1204

Urban Single - U1204




## ⚠ WARNING

- Do not use this Carrycot until you have read and understood the instructions!
  - Carrycot is suitable for newborn baby to 6 months, or until baby can sit up unaided.
  - Before placing baby into position check that the Carrycot is secure and will not tip or fall.
  - Baby must not be in the Carrycot when it is being fastened or removed from the stroller frame.
  - The depth from the top of the mattress to the top of the side of the Carrycot at, or at any position within 300mm/11.8in from the harness attachment points, should not be reduced to less than 140mm/5.5in when the mattress is in position. Mattresses purchased separately should conform to BSI 877 part 10.
  - Do not use accessories not designed for your stroller as they might be unsafe.
  - Do not use the Carrycot to transport children in a motor vehicle.
  - Never leave your child unattended.
- Sunhood and seat need to be removed from stroller before fitting Carrycot.  
• Store items removed in a dry safe place.

## STAGE I

### Removing Sunhood (both models)

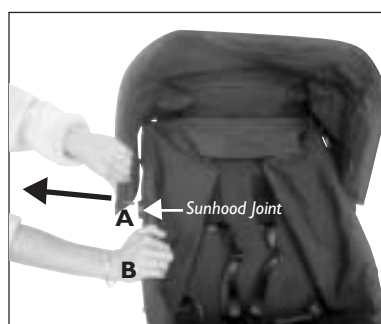

**1** Pull support wire out of sunhood joint **A**. This operation is child proof and therefore requires a degree of force. To assist in pulling support wire out, push against buggy frame with other hand **B**.

**2** Repeat step (1) on other side.


**3** Unfasten sunhood fabric from stroller bar frame and seat near handle bar.

### Removing Seat



**1** Unfasten seat from frame along side tubes.

**2** Unfasten strap underneath seat at point **A** (does not apply to Terrain model).

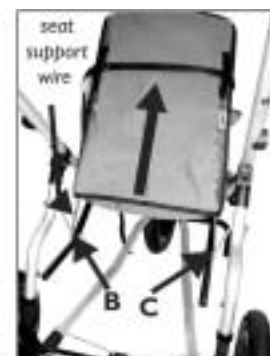


**3** Push seat forward, then slide fabric off seat support wire.


**4** Remove seat support wire from stroller frame at **B** and **C**.

## STAGE 2

### Fitting Snap Locks to Carrycot

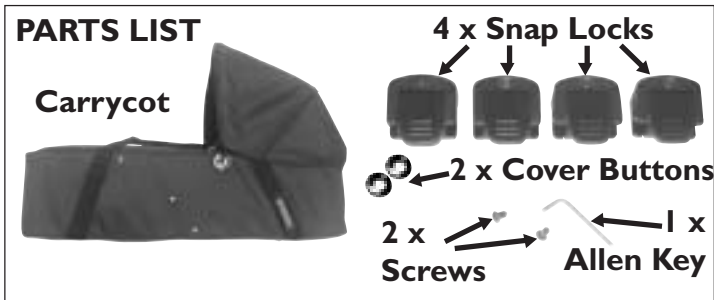


- Two Snap Locks are fitted to each side of Carrycot.
- Spare hole on each side, is fitted with cover button and screw.

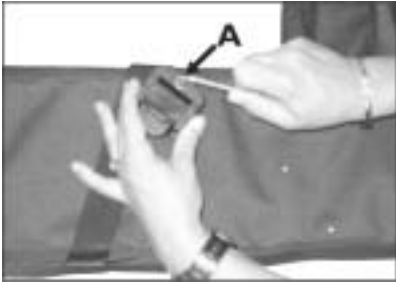


- 1 Place one of the Snap Locks over hole **A**. Make sure it is aligned correctly with the hole in Carrycot.
- 2 Using Allen Key, rotate screw in Snap Lock in a clockwise direction until screw is tight. Snap Lock is firmly attached to Carrycot, but can still rotate.

- Follow instructions for your model

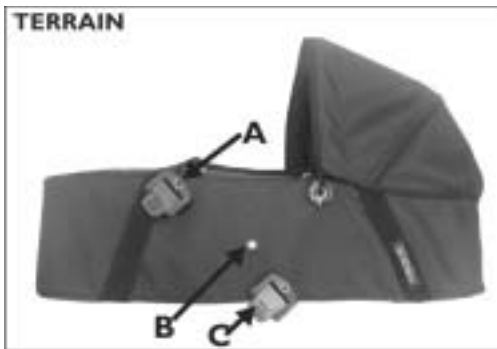

- 3 Repeat steps 1 & 2 to fit Snap Lock to hole **C**.
- 4 Place one of the screws and cover buttons into hole **B**. Using Allen Key rotate screw in a clockwise direction until screw is tight.
- 5 Repeat steps 1,2,3 and 4 to fit Snap Locks to other side of Carrycot.

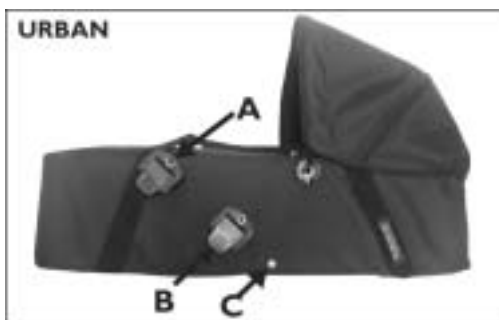


- 6 Repeat steps 1 & 2 to fit Snap Lock to hole **B**.
- 7 Place one of the screws and cover buttons into hole **C**. Using Allen Key rotate screw in a clockwise direction until screw is tight.
- 8 Repeat steps 1,2,6 & 7 to fit Snap Locks to other side of Carrycot.

## ⚠️ WARNING

Using the Allen Key, check that all four Snap Locks are firmly tightened, and they will not separate from Carrycot.

## STAGE 3

### Fitting Carrycot to Frame

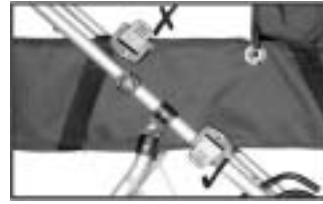


- Ensure Snap Locks are rotated so screw holes are on top.



- When placing Carrycot, ensure front end of Carrycot is vertically above footplate within shaded zone shown.


- 1 Open all four Snap Locks by lifting levers up.
- 2 Place Carrycot onto frame, firmly pushing Snap Locks into position, so they butt up to joints indicated in the following diagram for your model.

#### TERRAIN

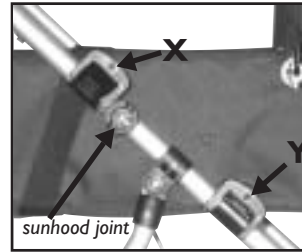

Place Snap Lock **X** directly above sunhood joint.

#### URBAN

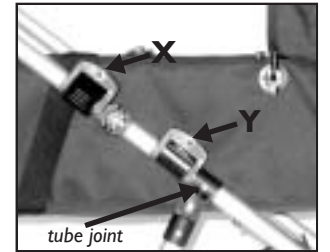

Place Snap Lock **Y** directly above tube joint.

- 3 Close all 4 Snap Locks down flat, making sure you hear the lock "click" indicating they are fully locked.



**OPEN POSITION**



**CLOSED POSITION**

## ⚠️ WARNING

- Check Carrycot is horizontal and is located correctly onto stroller frame. Refer back to diagrams for your model to ensure positioning of Snap Locks is correct.
- Check Snap Locks are closed and firmly attached to frame and Carrycot will not tip or fall.
- Do not use Carrycot if you are unable to secure. In this case, contact store where stroller was purchased or distributor for your country, for more help.
- Always remove Carrycot before collapsing buggy!

### Removing Carrycot from Frame

Open all 4 Snap Locks on frame and lift Carrycot off buggy frame.