



TERRAIN **URBAN**

ATCis 1/4/03gen

ATCis 1/4/03gen



TERRAIN **URBAN**

TWIN CARRYCOT INSTRUCTIONS

IMPORTANT, KEEP FOR FUTURE REFERENCE

These instructions are for the Twin Carrycot which fit the following model strollers:
Terrain Double - T2204 Terrain Triple - T3204 Urban Double - U2204




WARNING

- Do not use this Carrycot until you have read and understood the instructions!
- Carrycot is suitable for newborn baby to 6 months or until baby can sit up unaided.
- Do not use accessories not designed for your stroller as they may be unsafe.
- Before placing baby into position check that the Carrycot is secure and will not tip or fall.
- Baby must not be in the Carrycot when it is being fastened or removed from the stroller frame.
- The depth from the top of the mattress to the top of the side of the Carrycot at, or at any position within 300mm/11.8in from the harness attachment points, should not be reduced to less than 140mm/5.5in when the mattress is in position. Mattresses purchased separately should conform to BS1877 part 10.
- Do not use the Carrycot to transport children in a motor vehicle.
- Never leave your child unattended.
- The Sunhood, Seats and Centre bar need to be removed from stroller before fitting Twin Carrycot.
- Store items removed in a dry safe place.
- If fitting a Twin Carrycot to Triple stroller an additional Sliding Plate parts kit needs to be purchased. Twin Carrycot will replace the middle seat and either left or right seat. The third seat of a Triple can remain as a seat or be fitted with a Double Carrycot.
- Left and right are determined when standing behind stroller in pushing position.


STAGE 1

Removing Sunhood All Models

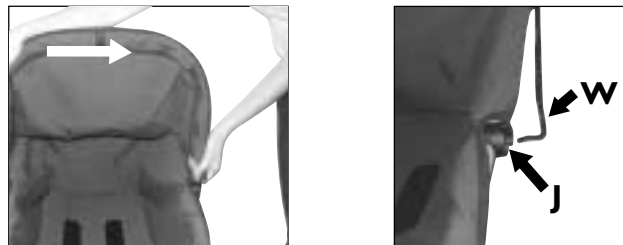


- 1 Standing beside stroller and using a degree of force, pull sunhood support wire towards you by about 50mm/2in.
- 2 Remove support wire **W** from the sunhood joint **J** on the side nearest to you. Then remove wire from the sunhood joint on other side.
- 3 Unfasten sunhood fabric from the stroller frame and seat near handle bar.

Removing Seat All Models

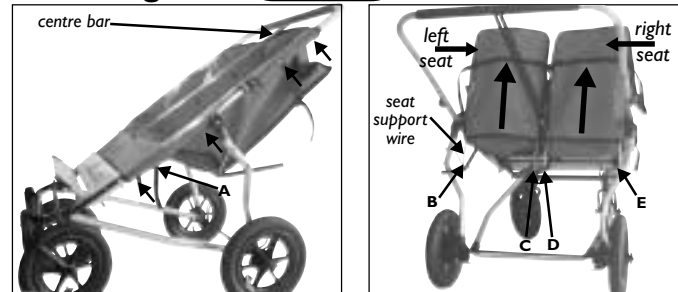


- 1 Unfasten seat from frame along side tubes.
- 2 Unfasten strap underneath seat at point **A** (does not apply to Terrain models).
- 3 Push seat forward, then slide fabric off seat support wire.
- 4 Remove seat support wire from stroller frame at **B** and **C**.

Removing Centre bar All Models

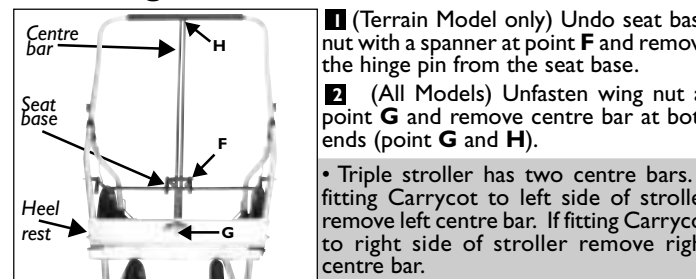

- 1 (Terrain Model only) Undo seat base nut with a spanner at point **F** and remove the hinge pin from the seat base.
 - 2 (All Models) Unfasten wing nut at point **G** and remove centre bar at both ends (point **G** and **H**).
- Triple stroller has two centre bars. If fitting Carrycot to left side of stroller remove left centre bar. If fitting Carrycot to right side of stroller remove right centre bar.


STAGE 2

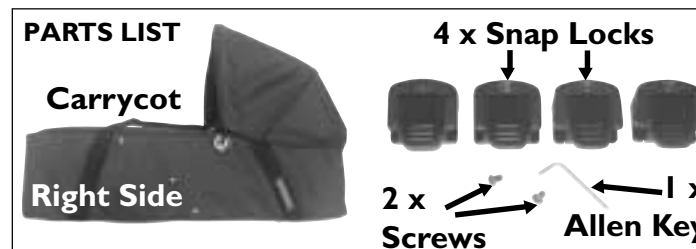

Triple Model Only

• To fit Twin Carrycot to Triple stroller, discard 2 Snap Locks and 1 screw and use Sliding Plate parts kit purchased separately.

SLIDING PLATE PARTS KIT

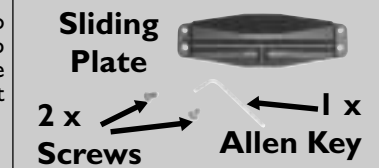

- For Double stroller two Snap Locks are fitted to each side of Carrycot. Spare holes on each side are fitted with the two screws.
- For Triple stroller two Snap Locks are fitted to one side of Carrycot, with screw fitted to spare hole. Sliding plate is fitted to the other side of Carrycot.
- For Triple stroller to position Carrycot onto right side, put Snap Locks onto right side of Carrycot and Sliding Plate onto left. To position Carrycot onto left side of stroller, put Snap Locks onto left side of Carrycot and Sliding Plate onto right.
- Left and right are determined when standing at base of Carrycot, looking into Carrycot Sunhood.

These instructions are for the Twin Carrycot which fit the following model strollers:
Terrain Double - T2204 Terrain Triple - T3204 Urban Double - U2204




WARNING

- Do not use this Carrycot until you have read and understood the instructions!
- Carrycot is suitable for newborn baby to 6 months or until baby can sit up unaided.
- Do not use accessories not designed for your stroller as they may be unsafe.
- Before placing baby into position check that the Carrycot is secure and will not tip or fall.
- Baby must not be in the Carrycot when it is being fastened or removed from the stroller frame.
- The depth from the top of the mattress to the top of the side of the Carrycot at, or at any position within 300mm/11.8in from the harness attachment points, should not be reduced to less than 140mm/5.5in when the mattress is in position. Mattresses purchased separately should conform to BS1877 part 10.
- Do not use the Carrycot to transport children in a motor vehicle.
- Never leave your child unattended.
- The Sunhood, Seats and Centre bar need to be removed from stroller before fitting Twin Carrycot.
- Store items removed in a dry safe place.
- If fitting a Twin Carrycot to Triple stroller an additional Sliding Plate parts kit needs to be purchased. Twin Carrycot will replace the middle seat and either left or right seat. The third seat of a Triple can remain as a seat or be fitted with a Double Carrycot.
- Left and right are determined when standing behind stroller in pushing position.


STAGE 1

Removing Sunhood All Models

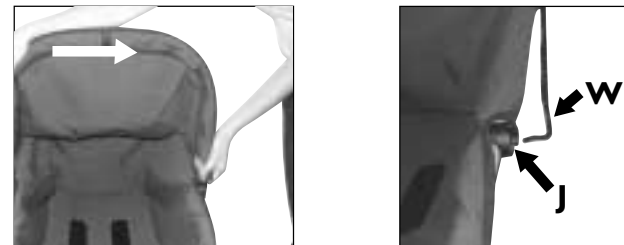


- 1 Standing beside stroller and using a degree of force, pull sunhood support wire towards you by about 50mm/2in.
- 2 Remove support wire **W** from the sunhood joint **J** on the side nearest to you. Then remove wire from the sunhood joint on other side.
- 3 Unfasten sunhood fabric from the stroller frame and seat near handle bar.

Removing Seat All Models

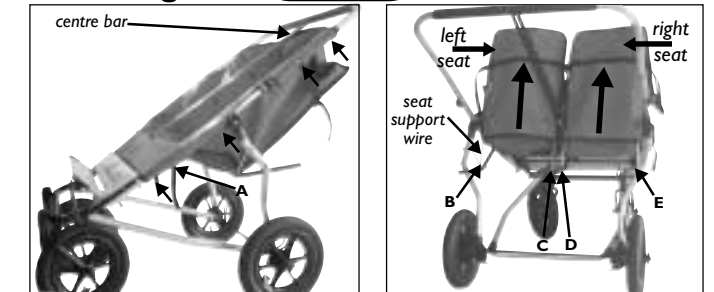

- 1 Unfasten seat from frame along side tubes.
- 2 Unfasten strap underneath seat at point **A** (does not apply to Terrain models).
- 3 Push seat forward, then slide fabric off seat support wire.
- 4 Remove seat support wire from stroller frame at **B** and **C**.

Removing Centre bar All Models

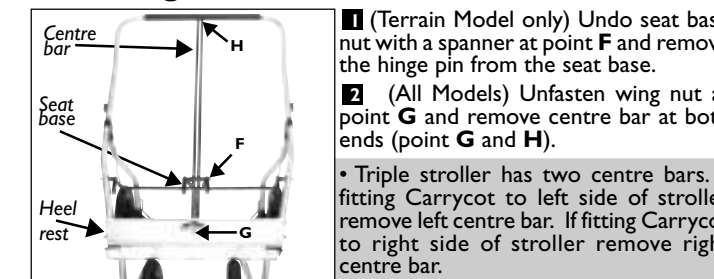

- 1 (Terrain Model only) Undo seat base nut with a spanner at point **F** and remove the hinge pin from the seat base.
 - 2 (All Models) Unfasten wing nut at point **G** and remove centre bar at both ends (point **G** and **H**).
- Triple stroller has two centre bars. If fitting Carrycot to left side of stroller remove left centre bar. If fitting Carrycot to right side of stroller remove right centre bar.


STAGE 2



Triple Model Only


• To fit Twin Carrycot to Triple stroller, discard 2 Snap Locks and 1 screw and use Sliding Plate parts kit purchased separately.

SLIDING PLATE PARTS KIT

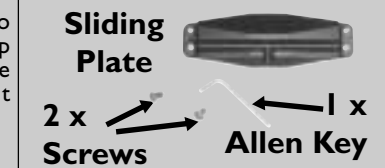


- For Double stroller two Snap Locks are fitted to each side of Carrycot. Spare holes on each side are fitted with the two screws.
- For Triple stroller two Snap Locks are fitted to one side of Carrycot, with screw fitted to spare hole. Sliding plate is fitted to the other side of Carrycot.
- For Triple stroller to position Carrycot onto right side, put Snap Locks onto right side of Carrycot and Sliding Plate onto left. To position Carrycot onto left side of stroller, put Snap Locks onto left side of Carrycot and Sliding Plate onto right.
- Left and right are determined when standing at base of Carrycot, looking into Carrycot Sunhood.

Fitting Snap Locks to Carrycot All Models

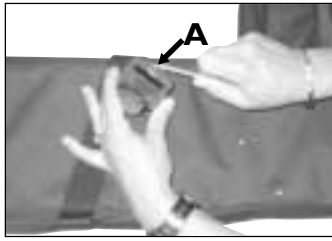


- Place one of the Snap Locks over hole **A**. Make sure it is aligned correctly with the hole in Carrycot.
- Using Allen key, rotate screw in Snap Lock in a clockwise direction until screw is tight. Snap Lock is firmly attached to Carrycot, but can still rotate.

- Follow instructions below for your model

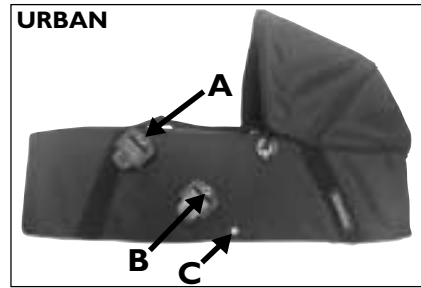

- URBAN**
- Repeat steps 1 & 2 to fit Snap Lock to hole **B**.
 - Place one of the screws into hole **C**. Using Allen Key rotate screw in a clockwise direction until screw is tight.
 - Repeat steps 1, 2, 6 & 7 to fit Snap Locks to other side of Carrycot.


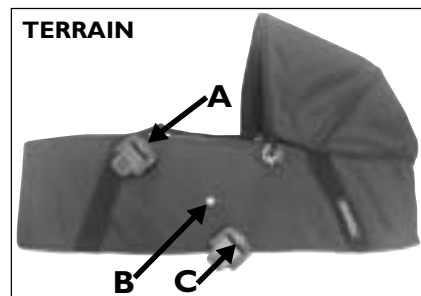


- TERRAIN**
- Repeat steps 1 & 2 to fit Snap Lock to hole **C**.
 - Place one of the screws into hole **B**. Using Allen Key rotate screw in a clockwise direction until screw is tight.
 - For Double stroller repeat steps 1, 2, 3 and 4 to fit Snap Locks to other side of Carrycot. For Triple see instructions below for other side of Carrycot.

Triple Model Only

Fitting Sliding Plate to Carrycot

- Position Sliding Plate on the other side of Carrycot.
- Sliding Plate uses holes **A** & **C** in side of Carrycot, hole **B** is not required.

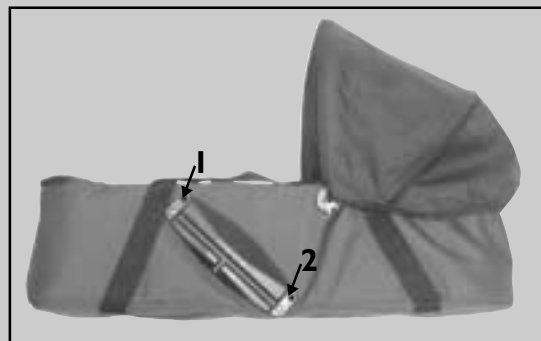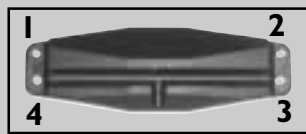

- Align hole **1** of Sliding Plate with hole **A** of Carrycot. Align hole **2** of Sliding Plate with hole **C** of Carrycot.


- Place screw into holes **1** & **2**. Using Allen Key rotate screws in a clockwise direction until both screws are tight.

WARNING


Using the Allen Key, check that Snap Locks (and Sliding Plate) are firmly tightened, and they will not separate from Carrycot.

STAGE 3

Fitting Carrycot to Frame

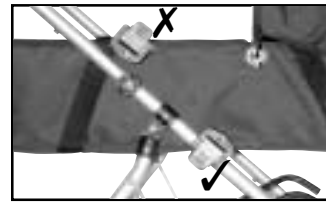


- Ensure Snap Locks are rotated so screw holes are on top.

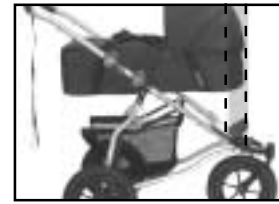


- When placing Carrycot, ensure front end of Carrycot is vertically above footplate within shaded zone shown.

- Open all Snap Locks by lifting levers up.

TERRAIN Place Snap Lock **X** directly above sunhood joint.

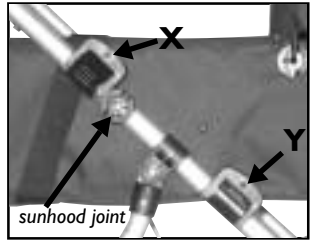

URBAN Place Snap Lock **Y** directly above tube joint.

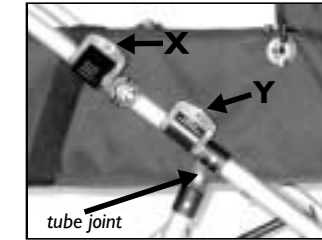

- Push Snap Locks firmly into position, so they butt up to joints indicated in the diagram above for your model.

OPEN POSITION




CLOSED POSITION




- Close the Snap Locks down flat, making sure you hear the lock "click" indicating they are fully locked.


Triple Model Only

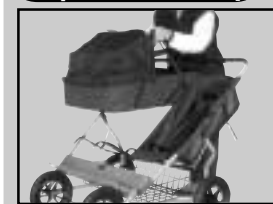

- Place Carrycot between side tube and centre bar of stroller.

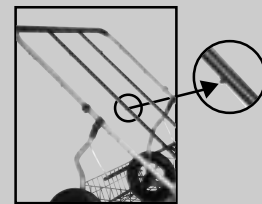

- Locate centre bar lug.

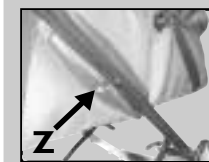

- Slide the Sliding Plate on Carrycot down the centre bar of frame until groove in Sliding Plate locks onto centre bar lug at point **Z**.

- Repeat steps 1, 2 and 3 above for outside tube of stroller frame.


WARNING

- Check Carrycot is horizontal and is located correctly onto stroller frame. Refer back to diagrams for your model to ensure positioning of Snap Locks and Sliding Plate are correct.
- Check Snap Locks are closed and firmly attached to frame and Carrycot will not tip or fall.
- Do not use Carrycot if you are unable to secure. In this case, contact store where stroller was purchased or distributor for your country, for more help.

Removing Carrycot from Frame


Open all Snap Locks and lift Carrycot off frame.

Fitting Snap Locks to Carrycot All Models

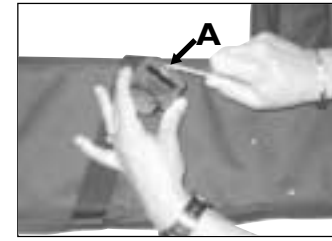


- Place one of the Snap Locks over hole **A**. Make sure it is aligned correctly with the hole in Carrycot.
- Using Allen key, rotate screw in Snap Lock in a clockwise direction until screw is tight. Snap Lock is firmly attached to Carrycot, but can still rotate.

- Follow instructions below for your model

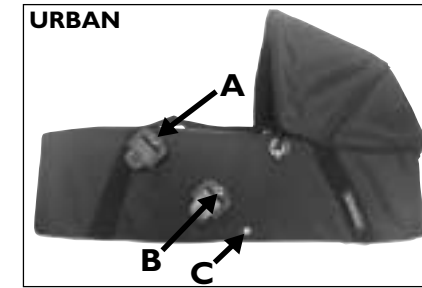

- URBAN**
- Repeat steps 1 & 2 to fit Snap Lock to hole **B**.
 - Place one of the screws into hole **C**. Using Allen Key rotate screw in a clockwise direction until screw is tight.
 - Repeat steps 1, 2, 6 & 7 to fit Snap Locks to other side of Carrycot.


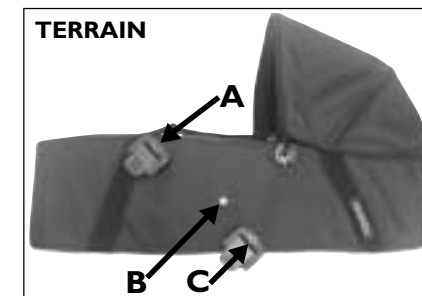


- TERRAIN**
- Repeat steps 1 & 2 to fit Snap Lock to hole **C**.
 - Place one of the screws into hole **B**. Using Allen Key rotate screw in a clockwise direction until screw is tight.
 - For Double stroller repeat steps 1, 2, 3 and 4 to fit Snap Locks to other side of Carrycot. For Triple see instructions below for other side of Carrycot.

Triple Model Only

Fitting Sliding Plate to Carrycot

- Position Sliding Plate on the other side of Carrycot.
- Sliding Plate uses holes **A** & **C** in side of Carrycot, hole **B** is not required.

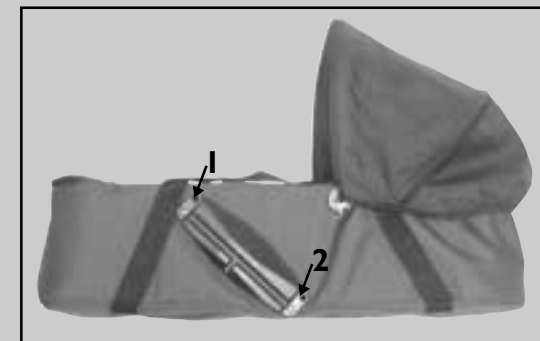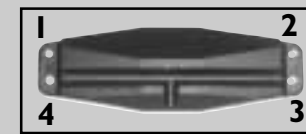

- Align hole **1** of Sliding Plate with hole **A** of Carrycot. Align hole **2** of Sliding Plate with hole **C** of Carrycot.

- Place screw into holes **1** & **2**. Using Allen Key rotate screws in a clockwise direction until both screws are tight.


WARNING

Using the Allen Key, check that Snap Locks (and Sliding Plate) are firmly tightened, and they will not separate from Carrycot.



STAGE 3

Fitting Carrycot to Frame

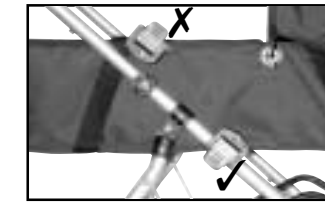


- Ensure Snap Locks are rotated so screw holes are on top.




- When placing Carrycot, ensure front end of Carrycot is vertically above footplate within shaded zone shown.

- Open all Snap Locks by lifting levers up.

TERRAIN Place Snap Lock **X** directly above sunhood joint.

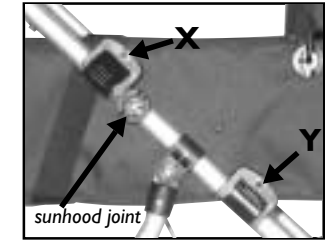

URBAN Place Snap Lock **Y** directly above tube joint.

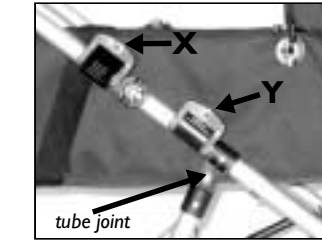

- Push Snap Locks firmly into position, so they butt up to joints indicated in the diagram above for your model.

OPEN POSITION




CLOSED POSITION




- Close the Snap Locks down flat, making sure you hear the lock "click" indicating they are fully locked.


Triple Model Only

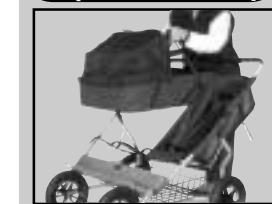

- Place Carrycot between side tube and centre bar of stroller.

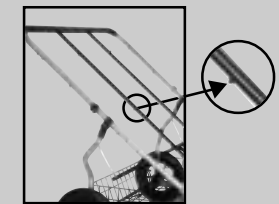

- Locate centre bar lug.

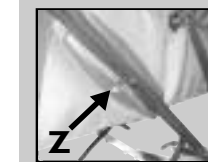

- Slide the Sliding Plate on Carrycot down the centre bar of frame until groove in Sliding Plate locks onto centre bar lug at point **Z**.

- Repeat steps 1, 2 and 3 above for outside tube of stroller frame.

WARNING

- Check Carrycot is horizontal and is located correctly onto stroller frame. Refer back to diagrams for your model to ensure positioning of Snap Locks and Sliding Plate are correct.
- Check Snap Locks are closed and firmly attached to frame and Carrycot will not tip or fall.
- Do not use Carrycot if you are unable to secure. In this case, contact store where stroller was purchased or distributor for your country, for more help.

Removing Carrycot from Frame

Open all Snap Locks and lift Carrycot off frame.