





Silver Cross[®]

THE BALMORAL COACH BUILT PRAM

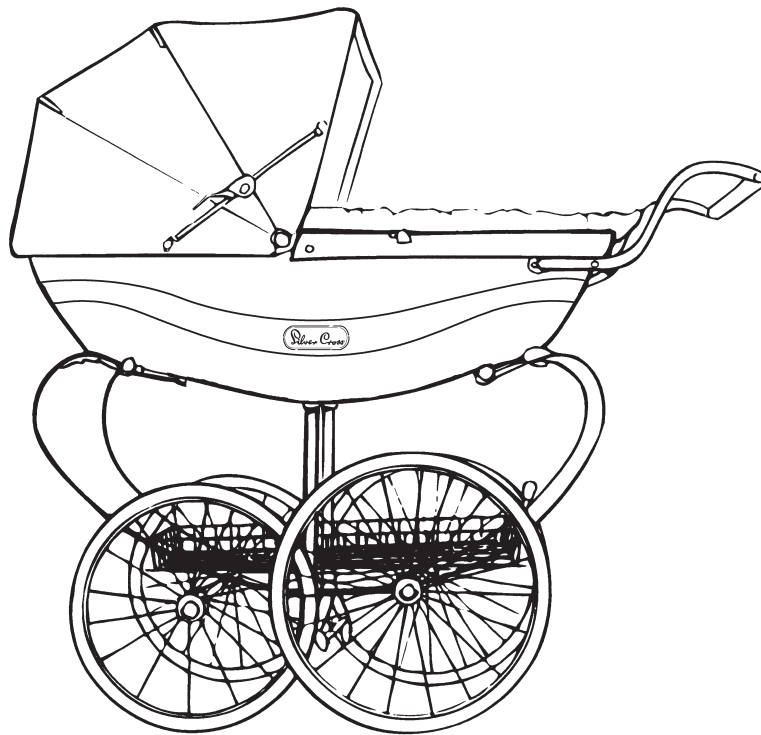


IMPORTANT: KEEP FOR FUTURE REFERENCE

Please read these instructions carefully before using new pram.
Keep them in a safe place so that you may use them in the future.




FITTING THE HANDLE

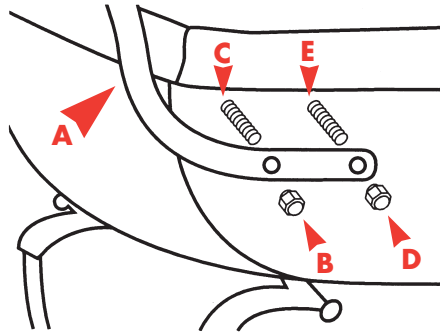

Attach the two S-shaped pieces 'A' with the flat side against the body onto the threaded bolts.

Attach the sleeved nut 'B' onto the bolt 'C'. (Do not tighten until dome nut 'D' has been attached to 'E'). Attach dome nut 'D' onto bolt 'E'. Do this on both sides. Do not fully tighten until handle has been attached.

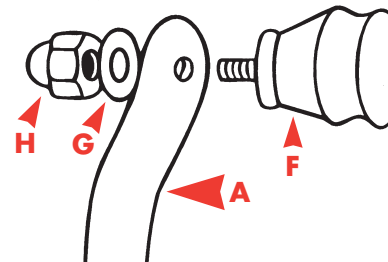


Attach the two S-shaped pieces 'A' onto the gripping handle 'F' using washer 'G' and nut 'H' on both ends of the S-shaped pieces. Tighten using a suitable wrench.


Now tighten all nuts to S-shape.

THE HOOD AND APRON

Caution - Be sure that all parts of the child's body and clothing are clear of any moving parts of the pram

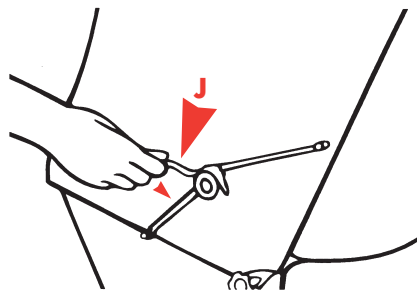


To open the hood, push down on the levers 'J'.

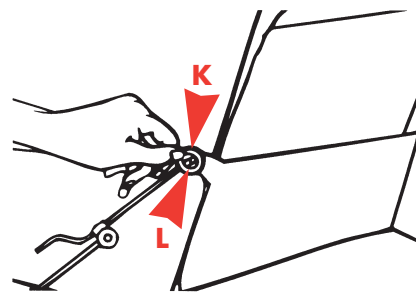


Fit the apron around the contour of the pram body and fasten the press studs on either side of the pram. To hold the storm flap in place, loop the metal fastener 'K' over the nut 'L' on either side of the hood.

THE PARKING DEVICE

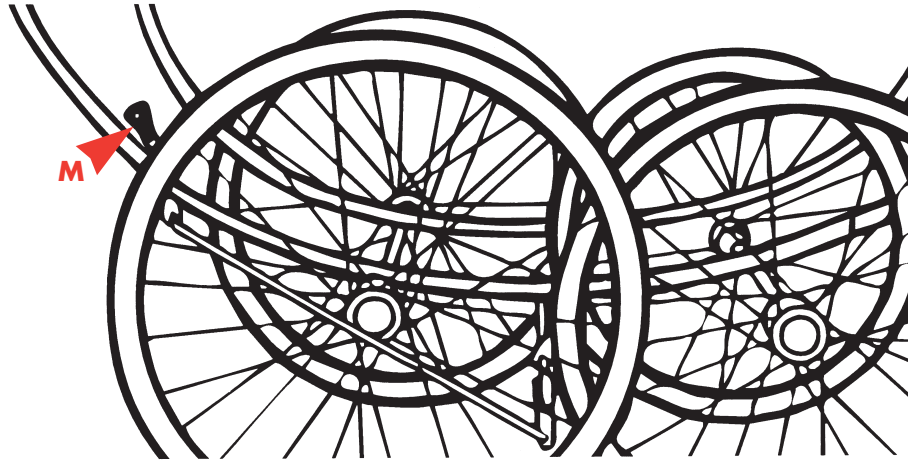

To operate the parking device lift the lever 'M'.
To release the parking device push down the lever 'M'.
ALWAYS use the parking device when the pram is stationary.

THE SAFETY HARNESS

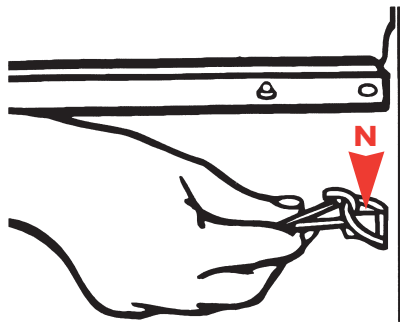

Adjust the harness to fit the child comfortably but securely.
Attach the safety harness to the metal loops 'N' on the inside of the pram.
Ensure that the opening clasp is at the rear of the child.




Adjust the harness so that the child cannot stand or the child may fall from the pram.
Please remember that a safety harness is not a substitute for adult supervision of a child or young baby.

THE SAFETY HARNESS (continued)



Place your child in the pram and fasten the safety harness, as indicated on the previous page.

THE BACKREST

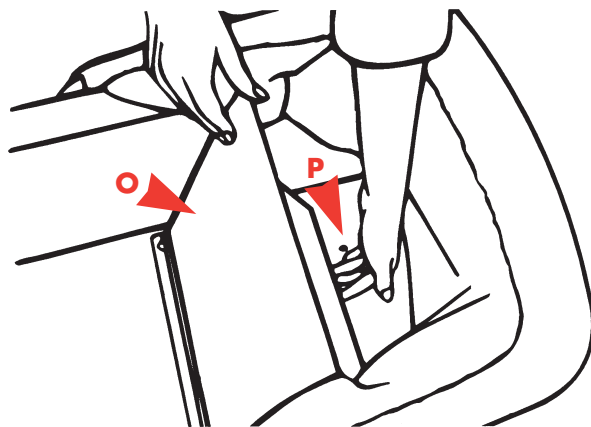

The backrest 'O' may be fixed in either the lying or sitting position.
Always check that the backrest support is placed firmly against the stops 'P'.

SAFETY NOTES



Your new pram is a high quality Silver Cross product. It meets current safety standards and with current use and maintenance should give good service. If however you should have any problems with your pram, please contact your Silver Cross retailer who will take appropriate action.

WARNING: Do not leave your child unattended in this pram.

The child **MUST** always wear a safety harness, correctly fitted and adjusted. When fitting a mattress do not reduce the depth inside the pram to less than 6.5 inches.

WARNING: Do not carry more than one child in this pram. You should never carry another child in a seat on top of the pram.

Do not hang shopping bags or other objects from the handle. This may cause the pram to tip up. Extra shopping or luggage should only be carried in the tray and should not exceed eleven pounds in weight evenly distributed.

Do not place items, bags of shopping, for example, in the pram unit, as it will cause it to become unstable.

Never fit any accessories or spare parts other than those supplied or recommended by Silver Cross.

If anyone other than the owner is going to use the pram, (i.e. Grandparent/Childminder) please show them how to use it correctly. Be sure that all parts of the child's body and clothes are clear of any moving parts of the pram.

WARNING: Avoid serious injury from falling or sliding out. Always use seat harness.

CARE AND MAINTENANCE



FABRICS

DO NOT WASH any fabric parts of your pram. This will damage the fabric. Sponge gently with lukewarm water. **Do not** use chemicals or biological detergents. Rinse well with clean water to avoid staining.

Always allow to dry naturally, away from sunlight.

Keep the hood fully open and the apron in place until completely dry.

Whilst we choose the very best fabrics available with PVC backing, water may still Creep up the fabric and enter the pram body around the hood and apron. We cannot therefore guarantee our cot/pram bodies to be 100% waterproof.

VINYL

Sponge the lining with lukewarm soapy water. Wipe dry with a soft cloth. **Do not** use polish or detergent which may damage the quality of the vinyl.

PAINTWORK

Polish the paintwork with any well known brand of liquid wax. Always follow instructions on the container.

BRIGHT METALWORK

Clean regularly with chrome polish to reduce the possibility of rust forming.

WHEELS

Oil the wheels lightly from time to time, this will keep your pram running smoothly.

Wipe the axles clean and smear a light grease before refitting the wheels.

GENERAL CARE

Always check your pram for signs of wear. Oil moving parts regularly. Check that all nuts and screws are tight.



SILVER CROSS (UK) LIMITED
NESFIELD HOUSE, BROUGHTON HALL, SKIPTON BD23 3AN
WWW.SILVERCROSS.CO.UK