

## Warnings and Cautions

### ***REMEMBER...YOUR CHILD'S SAFETY IS YOUR RESPONSIBILITY***

- ❖ Be sure that all clamps and buckles are securely fixed into place before use.
- ❖ Moving parts may be lubricated with silicone spray – DO NOT USE OIL.
- ❖ The maximum weight of the child in the SINGLE model is 18 kg's.
- ❖ Your child should never be left unattended. When in the stroller a child must always wear a safety harness, correctly fitted and adjusted, at all times.
- ❖ Do not hang shopping bags from the handle as this may affect the stroller's stability.
- ❖ Always use the basket provided – the maximum weight in the basket is 5 kg's.
- ❖ The seat fabrics may be washed by gently sponging with mild soap in warm water. Dry naturally.
- ❖ Never run with your pram across a road. NEVER use on escalators.
- ❖ Check all parts before use for breakage or fatigue. Discontinue use immediately if any part is found to be damaged or broken.
- ❖ Do not carry additional children. It may be unsafe to use any accessories other than VALCO approved.
- ❖ Make sure that any part of the child's body is clear of all moving parts before making any adjustments.
- ❖ Your VALCO product is intended for domestic use only. It is not intended for commercial use.
- ❖ Never carry your stroller with a child in it.

Should the chassis become wet, dry off promptly before storing. If this pram is used near the ocean or salted roads, spray the chassis and seat frame with water and dry. We recommend a rust inhibiting product should be used to prevent rust and fatigue on metal parts.

We recommend that you wipe down axles and lubricate the wheels every 3 months. Sand and dirt can grind down axles, if you live near the beach or in a dusty environment you must wipe down the axles and wheels then lubricate them *MONTHLY*.

**AXLES ARE BEST LUBRICATED WITH GREASE OR PETROLEUM JELLY. SILICONE BASED LUBRICANTS ARE ACCEPTABLE. DO NOT USE OIL BASED PRODUCTS.**



Should you experience any difficulties with your VALCO product, your local retailer, from whom you purchased it, is in the best position to help. Contact your local retailer who will make all the necessary arrangements to ensure that your product is functioning correctly.

**VALIANT ENTERPRISES**  
**MELBOURNE AUSTRALIA**



valco  
baby

Visit us on the web at [www.valco.com.au](http://www.valco.com.au)

**TITAN**  
**Stroller**



Congratulations on your purchase of a Valco stroller. Australian owned and operated for over 35 years, Valco is recognized as a leader in the design and manufacture of quality baby products.



Before using your stroller, please take the few minutes to read this manual carefully. The time taken will help you to use your stroller properly. Please pay careful note to the warnings and cautions on the back page and remember to always keep your child harnessed while in your stroller.

Be sure to keep this manual handy for future reference.

Pictures and drawings in this manual are for illustration purposes only – actual product may vary.  
VALCO reserves the right to alter any specification(s) or features without prior notice.

## ASSEMBLY and OPENING YOUR

- A. Standing behind the stroller, release the locking clamp (A) by lifting it outward off the rivet and allow the wheels to fall forward. (HINT: You may need to press the wheels inward toward the frame first to release the pressure)
- B. Engage the primary locking mechanism by pressing down (with your hand or foot) on the joint at (B).

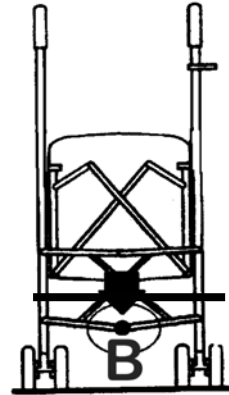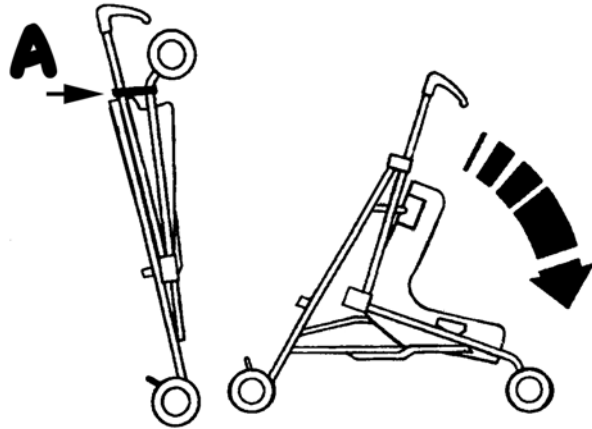

- C. Insert the front wheels onto the frame leg in the direction of the arrow. Be sure to align the locking clip with the corresponding notch in the leg housing.



- D. Insert the rear wheels into the frame leg. Be sure that the brake levers are facing to the rear.

**SPECIAL FEATURE:** Your TITAN STROLLER is equipped with an additional sunshade which is located in the underside of your hood. Simply pull it out when needed and fold it back when no longer required!



## RIDE ON STAND



MOUNTING CLAMPS



Introducing the new Hitchhiker Ride on Stand – the perfect accessory when a second child comes along.

Universally designed to simply fit almost any type of pram or stroller, the Hitchhiker is:

- ◆ Strong, light and durable
- ◆ Easily adjusted
- ◆ Two large swivel wheels with strong suspension provide a smooth ride.
- ◆ Wheel covers providing a little extra protection from puddle splashes!

Supplied with 8 different sets of mounting clamps, the Hitchhiker is compatible with virtually all available pram and stroller types.

Even when not in use, the hitchhiker can be suspended out of the way thanks to the clever folding catch and strap.

LOOK FOR OTHER VALCO PRODUCTS FOR YOUR HOME/CHILD

# VALCO Swing Back Gate




Designed to fit doorways from 75 – 97 cm (109 cm with the optional extra extension panel), the Swing Back gates are strong, durable, easy to install and operate.

## FEATURES INCLUDE:

- Patented hinge allows the gate to swing closed automatically.
- ONE HAND OPERATION.
- Dual safety locks prevent opening by young children.
- Twin latches hold gate firmly closed at both top and bottom.
- Includes 4 wall/doorway mounting cups for extra security.
- Includes 1 extension panel.
- Two Models – Plastic Gate and Wire Gate (metal frame identical on both).

## INSTALLING YOUR HOOD

- On either side of the stroller, at a point just above the folding hinge on the stroller side, locate the plastic washer.
- Attach each hood clamp above each washer.

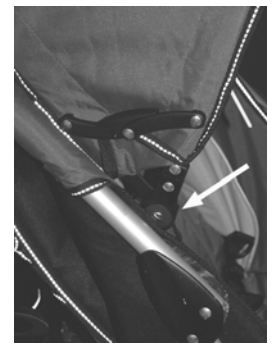

## FOLDING YOUR STROLLER




- Fold your hood back up against the handles.
- Standing behind your stroller, lift the primary safety lock with your foot or hand.
- With your foot, press down on the secondary locking device and simultaneously push the handles forward.
- Continue pressing down on the handles till they meet the wheels. The frame should automatically lock into place. **(HINT: Check that the plastic locking device smoothly covers the corresponding rivet to provide secure locking of the frame)**
- When folded your ROADIE stroller is easily carried using the handy carry handle.

## USING YOUR BRAKES


- To lock, simply press down on the rear of the brake lever until the brake pin engages into the wheel cog.
- To unlock, disengage the brake pin from the wheel cog by lifting the brake lever.

**ALWAYS CHECK THAT THE BRAKE PIN HAS ENGAGED IN THE WHEEL COG BY TESTING THAT THE WHEEL CANNOT ROTATE.**

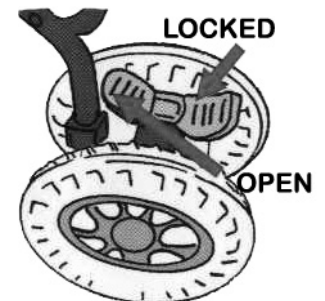



## USING YOUR HARNESS

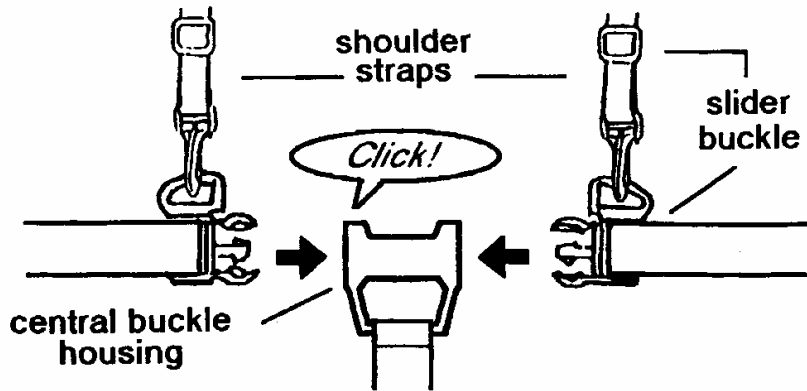

Your VALCO pram is fitted with a 5 point safety harness system.

### TO SECURE YOUR CHILD IN THE HARNESS:

1. Insert Buckles (A) and (B) into either side of the Buckle Housing (C). Keep inserting until they click into place securely.
2. Carefully adjust the harness straps to snugly fit your child by adjusting the Sliders (D) located on all Shoulder Straps, Waist Straps and Crotch Strap.

The harness should be snugly fitted to the baby's body, tight enough so that the baby cannot wriggle itself free of the straps but loose enough so as not to cause the baby any discomfort.

### TO OPEN THE HARNESS:

1. Release the Buckle Prongs – Squeeze on the top and bottom prongs simultaneously and pull apart from the Buckle Housing.

**This process may be difficult as your buckle system has been designed to meet very stringent safety standards to ensure that a child cannot release the harness unaided.**

YOUR CHILD MUST ALWAYS BE HARNESSSED WHEN IN THE STROLLER. FOR NEWBORNS, WE RECOMMEND THE USE OF A COCOON WHICH CAN BE SECURED TO THE STROLLER SUCH AS THE VALCO COCOON. THIS IS THE SAFEST AND MOST COMFORTABLE SYSTEM FOR TRAVELLING WITH A NEWBORN IN A RECLINING STROLLER. ASK YOUR RETAILER FOR MORE INFORMATION OR CONTACT US AT [www.valco.com.au](http://www.valco.com.au).

## ADJUSTING THE SEAT

- A. To recline the seat, simultaneously press up on the reclining buttons (located on either side of your stroller) and ease the seat back to the desired position.
- B. To raise the seat, simply lift the seat back to the desired position.

**ALWAYS TEST THAT THE SEAT IS SECURELY FIXED IN POSITION BEFORE USE.**



## ADJUSTING THE FOOTREST



Your ROADIE stroller has an adjustable footrest. This is particularly useful with younger/smaller children with the stroller in the fully reclined position!

- A. To fix the footrest, locate the 2 supports on either side BENEATH the footrest.
- B. Slide each support forward as far as possible till it rests in the "pocket" of the fabric.
- C. To free, simply reverse the procedure.

**WARNING: YOUR FOOTREST IS DESIGNED TO PROVIDE ONLY LIMITED SUPPORT TO A SLEEPING CHILD. IT IS NOT DESIGNED TO SUPPORT THE WEIGHT OF A STANDING/CLIMBING CHILD.**